
# FORD

# Service Manual

## 700 Series Implements

**40070090**

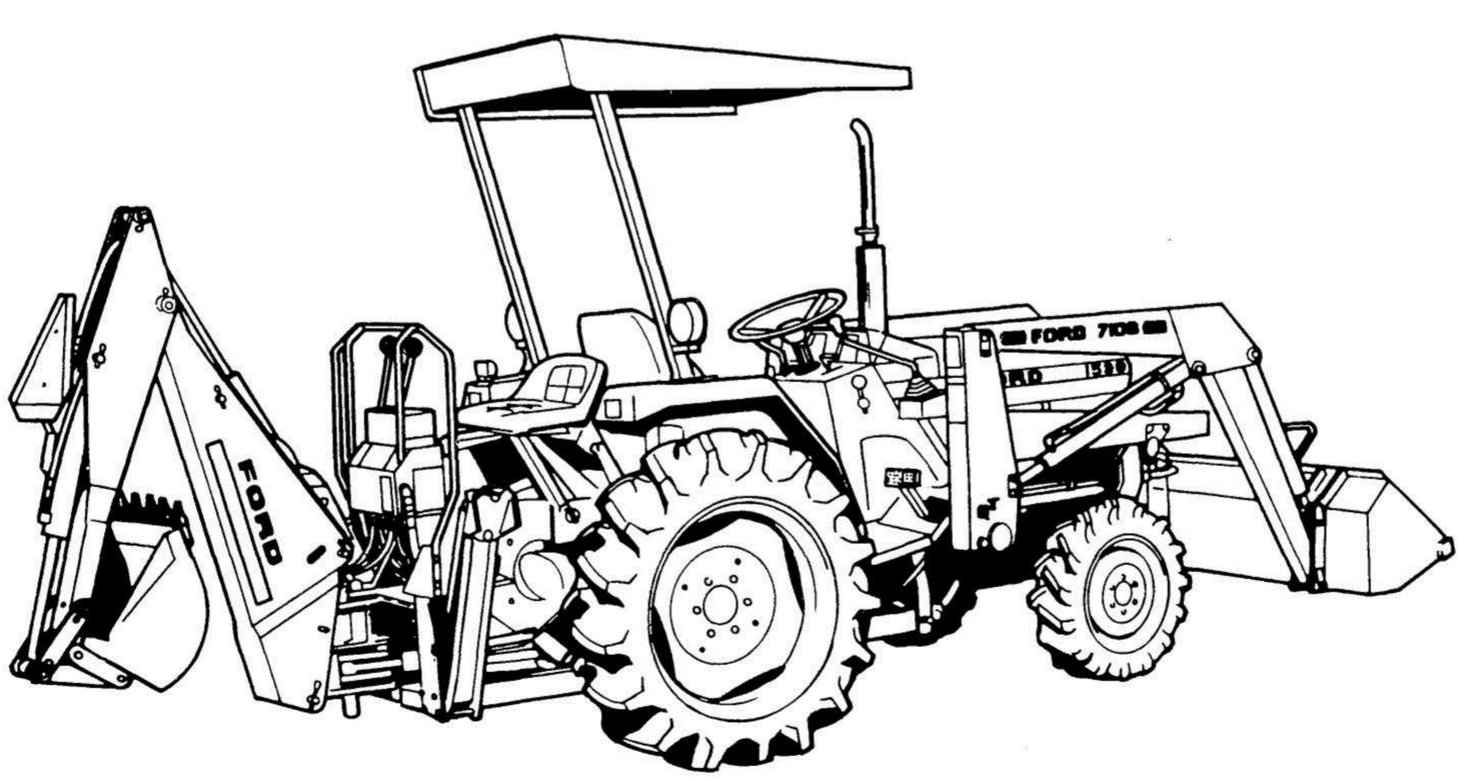


MidWestTech | Ford New Holland 700 Series Tractor Implements Service Manual | Publication 40070090

Order the manual at mid-west-tech.com >

| Ref. No. | Description | Qty. Req. 1120, 1220 | 1320, 1520 | 1720, 1920 | 2120 |
|---|---|---|---|---|---|
| 1. | Frame Assy., Rear | 1 | — | — | — |
| 1. | Frame Assy., Rear | — | — | 1 | 1 |
| 2. | Frame Assy., Rear | — | 1 | — | — |
| 3. | Frame Assy., Forward | 1 | — | — | — |
| 3. | Frame Assy., Forward | — | 1 | — | — |
| 3. | Frame Assy., Forward | — | — | 1 | 1 |
| 4. | Pin, Frame Pivot 1-1/4" Dia. | 2 | 2 | 2 | 2 |
| 5. | Pin, 1/4" x 2-1/2" Cotter | 4 | 4 | 4 | 4 |
| 6. | Bolt, M14-1.50 x 30 mm Hex Hd., Frame to Tractor | — | 4 | — | — |
| 7. | Washer, 9/16" Flat, Frame to Tractor | — | 4 | — | — |
| 8. | Washer, 9/16" Lock, Frame to Tractor | — | 4 | — | — |
| 9. | Hanger Assy., Rear | 1 | — | — | — |
| 9. | Hanger Assy., Rear | — | — | — | 1 |
| 9. | Hanger Assy., Rear R.H. | — | — | 1 | — |
| 9. | Hanger Assy., Rear L.H. | — | — | 1 | — |
| 10. | Bolt, M10-1.50 x 35 mm Hex Hd., Hanger to Tractor | — | — | 4 | — |
| 10. | Bolt, M16-1.75 x 30 mm Hex Hd., Hanger to Tractor | 4 | — | — | — |
| 10. | Bolt, M16-2.00 x 45 mm Hex Hd., Hanger to Tractor | — | — | — | 2 |
| 11. | Washer, 5/8" Lock, Hanger to Tractor | 4 | — | — | 2 |
| 11. | Washer, 7/16" Lock | — | — | 4 | — |
| 12. | Bolt, 1/2"-20 x 1-1/2" Hex Hd., Frame to Hanger | 4 | — | — | — |
| 12. | Bolt, 5/8"-18 x 2" Hex Hd., Frame to Hanger | — | — | 4 | 4 |
| 13. | Washer, 1/2" Flat, Frame to Hanger | 8 | — | — | — |
| 13. | Spacer, Frame to Hanger | — | — | 2 | 2 |
| 14. | Washer, 1/2" Lock, Frame to Hanger | 4 | — | — | — |
| 14. | Washer, 5/8" Lock, Frame to Hanger | — | — | 4 | 4 |
| 15. | Nut, 1/2"-20" Hex, Frame to Hanger | 4 | — | — | — |
| 15. | Nut, 5/8"-18 Hex, Frame to Hanger | — | — | 4 | 4 |
| 16. | Hanger, Front R.H. | 1 | — | — | — |
| 16. | Hanger, Front R.H. | — | 1 | — | — |
| 16. | Hanger, Front R.H. | — | — | 1 | — |
| 16. | Hanger, Front R.H. | — | — | — | 1 |
| 16. | Hanger, Front L.H. | 1 | — | — | — |
| 16. | Hanger, Front L.H. | — | 1 | — | — |
| 16. | Hanger, Front L.H. | — | — | 1 | — |
| 16. | Hanger, Front L.H. | — | — | — | 1 |
| 17. | Reinforcement, Bumper, Reinforcement & Frame to Hangers | 1 | — | — | — |
| 18. | Bolt, 1/2"-20 x 2" Hex Hd., Reinforcement & Frame to Hangers | 4 | — | 4 | 4 |
| 18. | Bolt, 1/2"-20 x 1-3/4" Hex Hd., Reinforcement & Frame to Hangers | — | 4 | — | — |
| 19. | Bolt, 1/2"-20 x 1-3/4" Hex Hd., Reinforcement & Frame to Hangers | 2 | 2 | — | — |
| 19. | Bolt, 5/8"-18 x 2" Hex Hd., Reinforcement & Frame to Hangers | — | — | 2 | 2 |
| 20. | Washer, 1/2" Flat, Reinforcement & Frame to Hangers | 8 | 4 | — | — |
| 20. | Spacer, Reinforcement & Frame to Hangers | — | — | 2 | 2 |



MidWestTech | Ford New Holland 700 Series Tractor Implements Service Manual | Publicat... Order the manual at mid-west-tech.com >

| Ref. No. | Description | Qty. Req. 1120, 1220 | 1320, 1520 | 1720, 1920 | 2120 |
|---|---|---|---|---|---|
| 21. | Washer, 1/2" Lock, Reinforcement & Frame to Hangers | 8 | 6 | 6 | – |
| 21. | Washer, 5/8" Lock, Reinforcement & Frame to Hangers | – | – | – | 2 |
| 22. | Nut, 1/2"-20 Hex, Reinforcement & Frame to Hangers | 6 | 6 | 6 | – |
| 22. | Nut, 5/8"-18 Hex, Reinforcement & Frame to Hangers | – | – | – | 2 |
| 23. | Link Assy., Male | 2 | 2 | 2 | – |
| 23. | Link Assy., Male | – | – | – | 2 |
| 24. | Pin 3/4" x 3" Clevis | 2 | – | – | – |
| 24. | Pin Assy., 3/4" Dia. - Long | – | 2 | 2 | 2 |
| 25. | Link Assy., Female | 2 | 2 | 2 | – |
| 25. | Link Assy., Female | – | – | – | 2 |
| 26. | Pin, 3/4" x 2" Clevis | 2 | – | – | – |
| 26. | Pin Assy., 3/4" Dia. - Short | – | 2 | 2 | 2 |
| 27. | Pin, 3/4" x 2" Clevis | 1 | 1 | 1 | 1 |
| 28. | Pin, 1/8" x 1-1/4" Cotter | 5 | 1 | 1 | 1 |
| 28. | Pin, 1/4" x 1-1/2" Cotter | – | 4 | 6 | 4 |
| 29. | Pin, "L" Adjust | 2 | 2 | 2 | 2 |
| 30. | Pin, 3/16" x 1-1/2" Cotter | 2 | 2 | 2 | 2 |
| 31. | Clip, Hair Pin #6 | 2 | 2 | 2 | 2 |
| 32. | Support Assy., Cylinder | 1 | – | – | – |
| 32. | Support Assy., Cylinder | – | 1 | 1 | 1 |
| 33. | Bolt, 5/8"-11 x 1-3/4" Hex Hd., Support to Tractor Bumper | 3 | 3 | 3 | 3 |
| 34. | Washer, 5/8" Lock, Support to Tractor Bumper | 3 | 3 | 3 | 3 |
| 35. | Nut, 5/8"-11 Hex, Support to Tractor Bumper | 3 | 3 | 3 | 3 |
| 36. | Pin, Cylinder Anchor | 1 | – | – | – |
| 36. | Pin, Cylinder Anchor | – | 1 | 1 | 1 |
| 37. | Pin, 1/4" x 1-1/2" Cotter | 2 | 2 | 2 | 2 |
| 38. | Fitting, Lube | 1 | 1 | 1 | 1 |
| 39. | Assist Assy., Rear | – | – | 1 | – |
| 40. | Bolt, M16-2.00 x 40 mm Hex Hd. | – | – | 4 | – |
| 41. | Washer, 5/8" Lock | – | – | 4 | – |



MidWestTech | Ford New Holland 700 Series Tractor Implements Service Manual | Publicat... Order the manual at mid-west-tech.com >