
Genie Industries

A TEREX COMPANY

Genie® Z-45/22

Service Manual

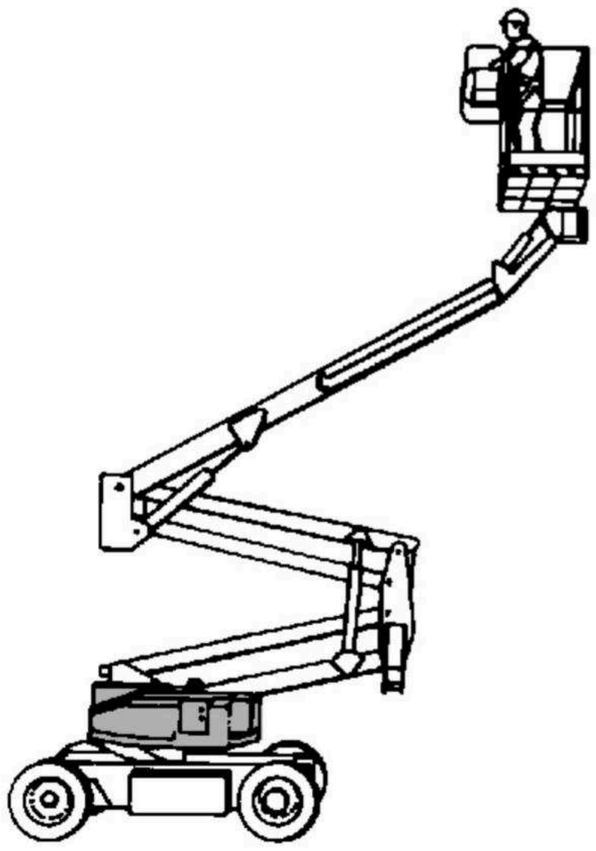

Genie® Z-45/22 DC2WD

First Edition, First Printing
Part No. 41328

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 41328

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 2
Hydraulic Specifications ..... 2 - 2
Bolt Torque Specifications ..... 2 - 3

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 3
Table C ..... 3 - 4
Table D ..... 3 - 4
Maintenance Inspection Report ..... 3 - 5

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operator's and Safety Manuals ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 3
A-4 Check the Hydraulic Oil Level ..... 4 - 3
A-5 Check for Hydraulic Leaks ..... 4 - 4
A-6 Check the Tire Pressure ..... 4 - 4
A-7 Test the Platform and Ground Controls ..... 4 - 4
A-8 Test the Auxiliary Power Operation ..... 4 - 5
A-9 Test the Tilt Sensor ..... 4 - 6
A-10 Test the Limit Switches ..... 4 - 6
A-11 Test the Lift/Drive Select Switch ..... 4 - 8

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 413... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

B-1 Check the Batteries ..... 4 - 9
B-2 Check the Hydraulic Tank Filter Condition Indicator ..... 4 - 9
B-3 Inspect the Electrical Wiring ..... 4 - 10
B-4 Inspect the Tires and Wheels (including lug nut torque) ..... 4 - 10
B-5 Confirm the Proper Brake Configuration ..... 4 - 11
B-6 Check the Oil Level in the Torque Hubs ..... 4 - 11
B-7 Test the Key Switch ..... 4 - 12
B-8 Test the Emergency Stop Buttons ..... 4 - 12
B-9 Test the Ground Control Override ..... 4 - 12
B-10 Test the Platform Self-leveling ..... 4 - 13
B-11 Test the Service Horn ..... 4 - 13
B-12 Test the Foot Switch ..... 4 - 13
B-13 Test the Drive Enable System ..... 4 - 13
B-14 Test the Drive Brakes ..... 4 - 14
B-15 Test the Drive Speed - Stowed Position ..... 4 - 15
B-16 Test the Alarm Package - Optional Equipment ..... 4 - 15
B-17 Perform Hydraulic Oil Analysis ..... 4 - 16
B-18 Test the Turntable Rotation Stop ..... 4 - 16
B-19 Check the Electrical Contactors ..... 4 - 16
C-1 Check the Primary Boom Wear Pads ..... 4 - 17
C-2 Check the Turntable Rotation Bearing Bolts ..... 4 - 17
C-3 Check the Free-wheel Configuration ..... 4 - 18
C-4 Grease the Turntable Rotation Bearing and Worm Drive Gear ..... 4 - 19
C-5 Replace the Torque Hub Oil ..... 4 - 19
C-6 Replace the Hydraulic Tank Filter ..... 4 - 20
C-7 Bleed the Platform Rotator ..... 4 - 20
D-1 Test or Replace the Hydraulic Oil ..... 4 - 21

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 413... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS


Section Five **Troubleshooting Flow Charts**

Introduction ..... 5 - 1

1 All Functions Will Not Operate ..... 5 - 3
2 Lift Pump Motor Will Not Operate ..... 5 - 6
3 Drive Pump Motor Will Not Operate ..... 5 - 8
4 All Functions Inoperative, Power Unit Starts and Runs ..... 5 - 10
5 All Lift and Steer Functions Inoperative, Drive Functions Operational ..... 5 - 11
6 Ground Controls Inoperative, Platform Controls Operate Normally ..... 5 - 14
7 Platform Controls Inoperative, Ground Controls Operate Normally ..... 5 - 15
8 Primary Boom Up Function Inoperative ..... 5 - 17
9 Primary Boom Down Function Inoperative ..... 5 - 20
10 Secondary Boom Up Function Inoperative ..... 5 - 23
11 Secondary Boom Down Function Inoperative ..... 5 - 26
12 Primary Boom Extend Function Inoperative ..... 5 - 28
13 Primary Boom Retract Function Inoperative ..... 5 - 32
14 Turntable Rotate Left Function Inoperative ..... 5 - 35
15 Turntable Rotate Right Function Inoperative ..... 5 - 38
16 All Platform Leveling Functions Inoperative ..... 5 - 41
17 Platform Level Up Function Inoperative ..... 5 - 42
18 Platform Level Down Function Inoperative ..... 5 - 45
19 Platform Rotate Left Function Inoperative ..... 5 - 48
20 Platform Rotate Right Function Inoperative ..... 5 - 51
21 Steer Left Function Inoperative ..... 5 - 54
22 Steer Right Function Inoperative ..... 5 - 56
23 All Drive Functions Inoperative, All Other Functions Operate Normally ..... 5 - 58
23A Brake Function Inoperative ..... 5 - 63
24 Drive Forward Function Inoperative ..... 5 - 67
25 Drive Reverse Function Inoperative ..... 5 - 68
26 Machine Will Not Drive At Full Speed ..... 5 - 69
27 Machine Drives At Full Speed With Platform Raised ..... 5 - 70
28 Drive Enable System Is Malfunctioning ..... 5 - 71
29 Remote Brake Release Inoperative ..... 5 - 73

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 413... Order the manual at mid-west-tech.com >

Electrical Schematic
DC Models

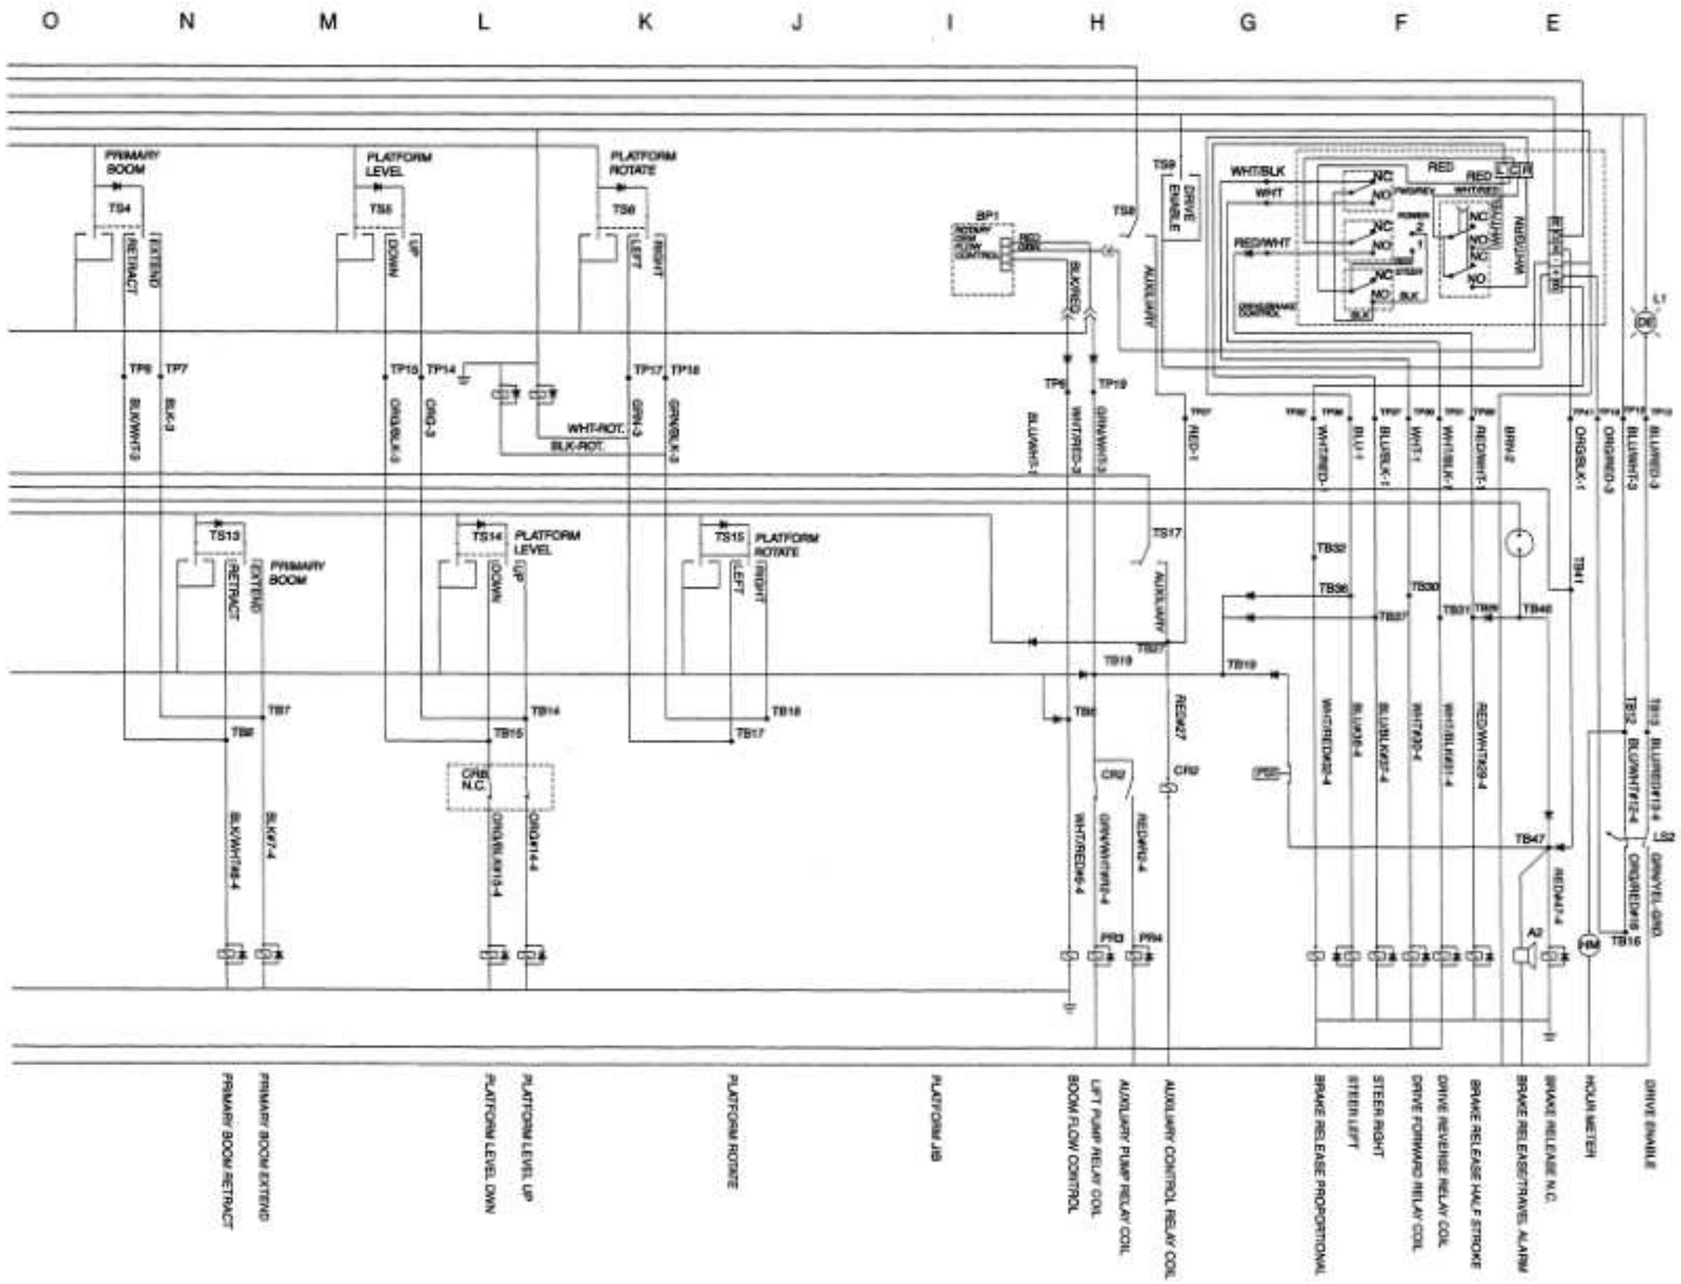

LABEL	DESCRIPTION
A	ALARM
AP	ANDERSON PLUG
BP	BOOM PROPORTIONAL CONTROLLER
CB	CIRCUIT BREAKER
CR	CONTROL RELAY
DE	DRIVE ENABLE
DP	DRIVE PROPORTIONAL CONTROLLER
FB	FLASHING BEACON
FS	FOOT SWITCH
HM	HOUR METER
LS	LIMIT SWITCH
P	POWER SWITCH
PR	POWER RELAY
PS	PRESSURE SWITCH
TB	TERMINAL BASE LOCATION
TS	TOGGLE SWITCH
B.C.I.	BATTERY CHARGE INDICATOR
L.V.I.	LOW VOLTAGE INTERRUPT

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 41328 Order the manual at mid-west-tech.com >