OPERATOR'S MANUAL

LOADER
L-600

SPERRY NEW HOLLAND



42060010
Reprinted


MidWestTech | Sperry New Holland L-600 Loader Operator's Manual | Publication 42060010 Order the manual at mid-west-tech.com >

CONTENTS

SAFETY 4
CONTROLS AND INSTRUMENT PANEL 10
PRESTARTING CHECKLIST 12
STARTING THE LOADER 13
STOPPING THE LOADER 14
OPERATION 15
HOURLY SERVICE AND LUBRICATION CHART 20
SERVICE AND LUBRICATION POINTS 21
PERIODIC SERVICE ADJUSTMENTS 29
STORING THE LOADER 32
TROUBLESHOOTING AND SERVICE PROBLEM EVALUATION 33
OPTIONAL EQUIPMENT 38
SPECIFICATIONS 39
INDEX 41
DELIVERY REPORT ..... after INDEX



MidWestTech | Sperry New Holland L-600 Loader Operator's Manual | Publication 42060010 Order the manual at mid-west-tech.com >

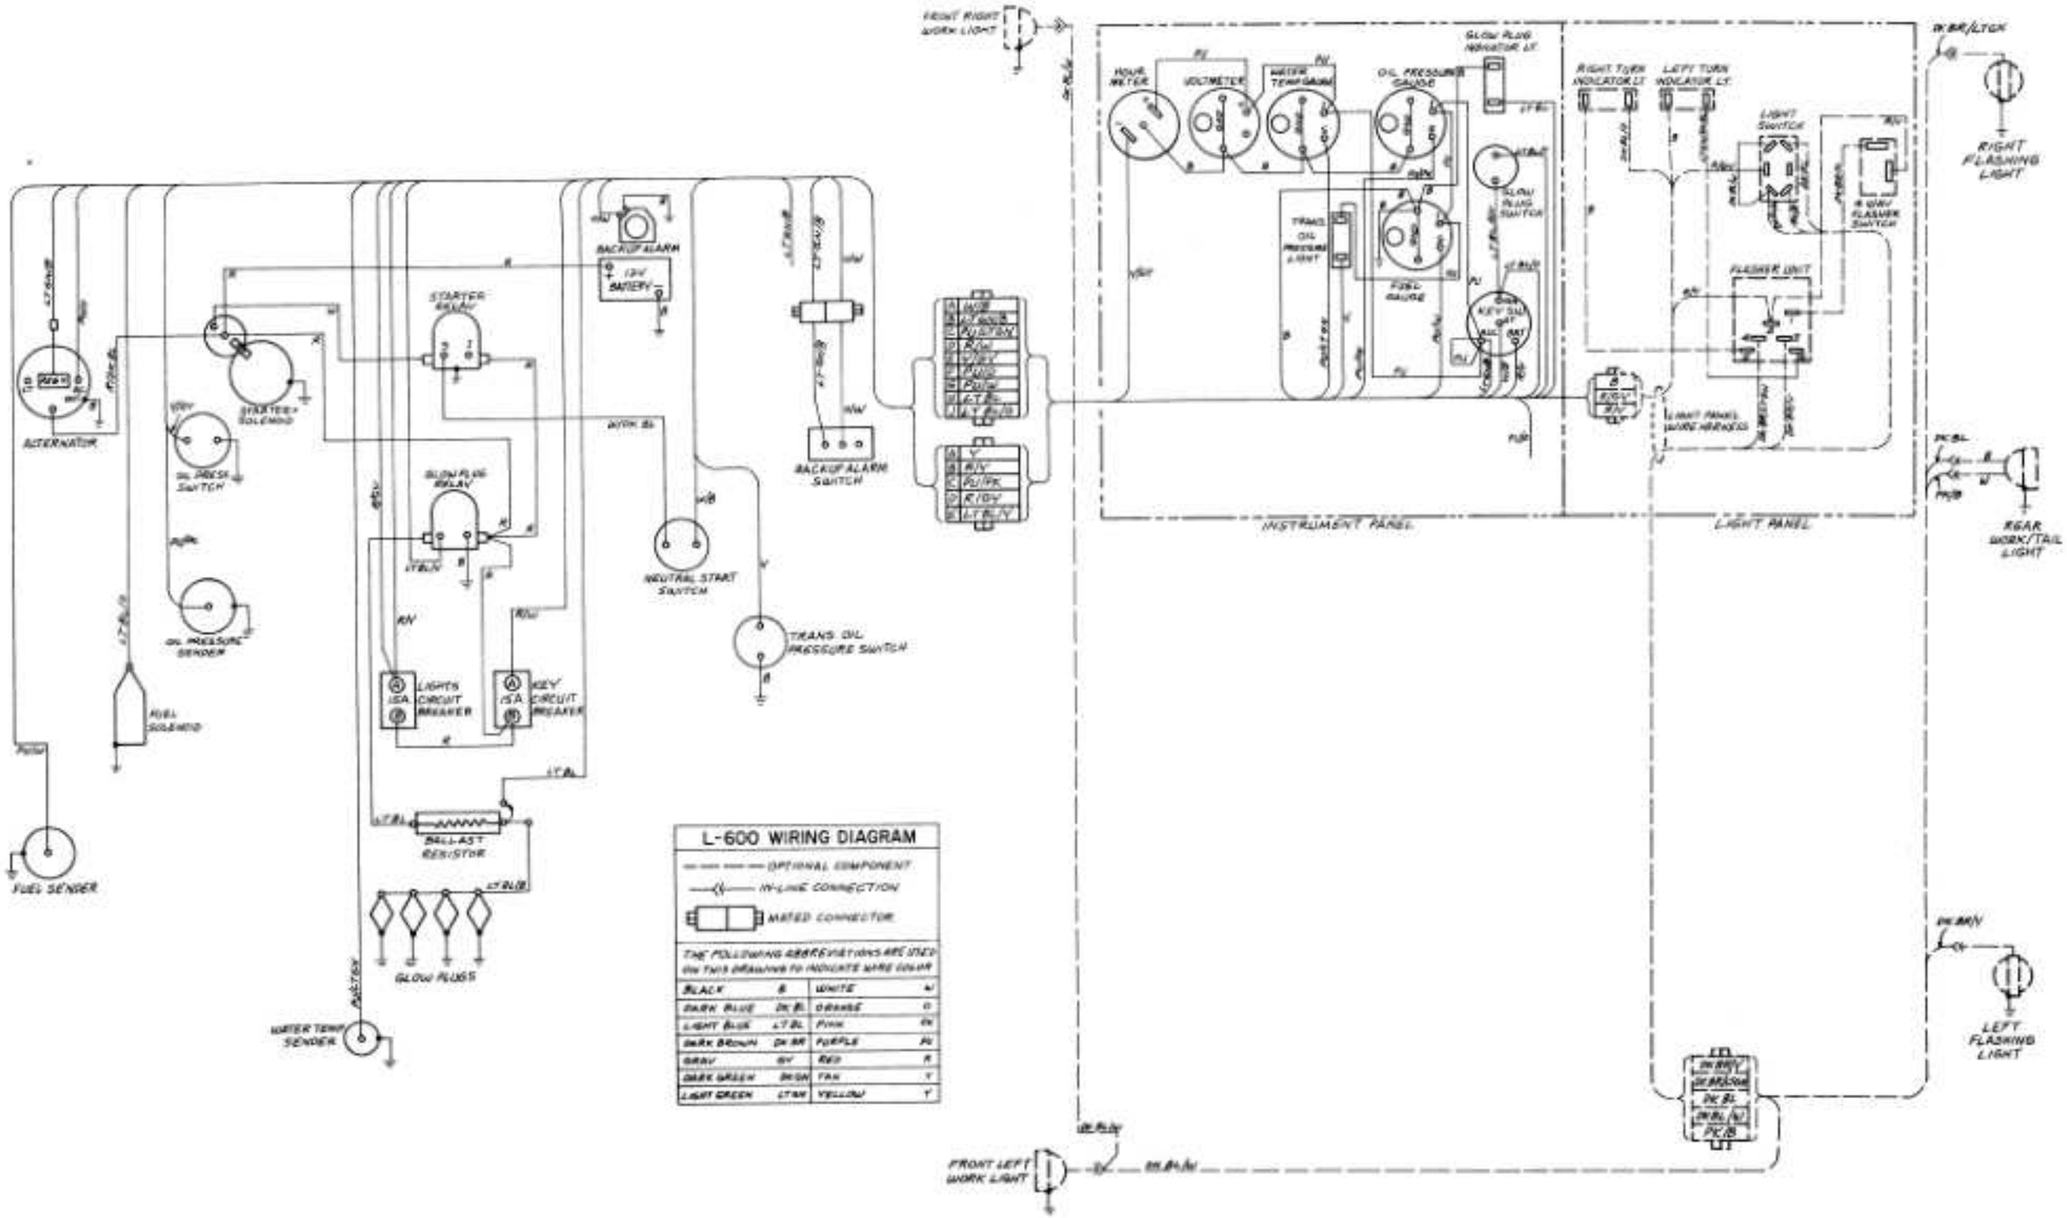

L-600 WIRING DIAGRAM

— — — — OPTIONAL COMPONENT

—((— IN-LINE CONNECTION

MATED CONNECTOR

THE FOLLOWING ABBREVIATIONS ARE USED ON THIS DRAWING TO INDICATE WIRE COLOR

BLACK	B	WHITE	W
DARK BLUE	DK BL	ORANGE	O
LIGHT BLUE	LT BL	PINK	PK
DARK BROWN	DK BR	PURPLE	PU
GRAY	GY	RED	R
DARK GREEN	DK GN	TAN	T
LIGHT GREEN	LT GN	YELLOW	Y

MidWestTech | Sperry New Holland L-600 Loader Operator's Manual | Publication 42060010

Order the manual at mid-west-tech.com >