Backhoe Loader 775

OPERATOR'S MANUAL




NEW HOLLAND

42077520 12/94

Reprinted

MidWestTech | New Holland 775 Loader Backhoe Operator's Manual | Publication 42077520 Order the manual at mid-west-tech.com >

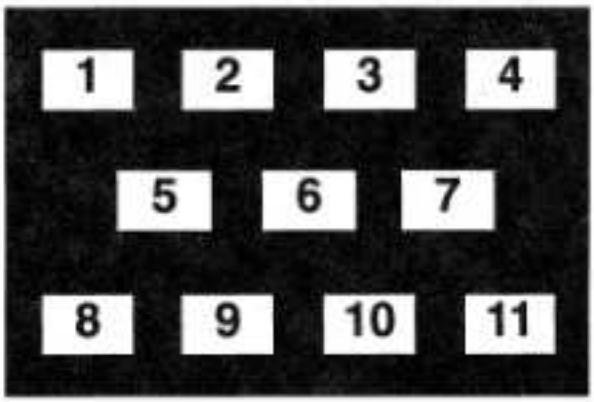

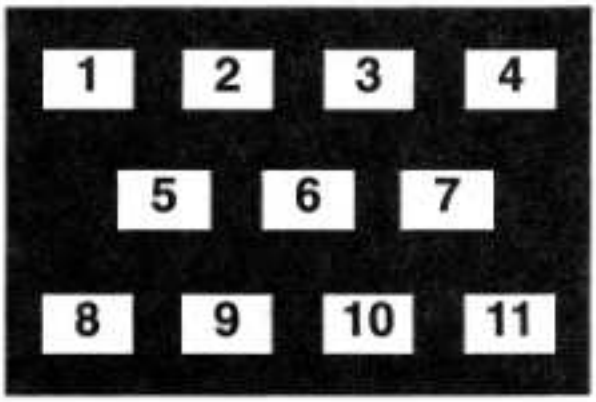


Figure 2-63

FUSE BOX A

1	Free	10A
2	Front work lights	10A
3	Inst. panel lights, right side	15A
4	Thermostart	10A
5	Engine stop, electrovalve relay	10A
6	Not used	
7	Rear work lights	25A
8	Buzzer, cab int. light, radio, cigar lighter	7.5A
9	Free	10A
10	Free	10A
11	Rotating beacon and horn	15A

FUSE BOX B

1	Steering control unit	10A
2	Air-conditioner fuse, negative sensor relay	20A
3	Electrovalve relay	10A
4	Windshield/rear window wiper, light button	10A
5	EGS (Electric gearshift selector)	15A
6	AC switch, backup alarm	7.5A
7	Free	7.5A
8	Front audible alarm	7.5A
9	EGS light (Electric gearshift selector light)	15A
10	Horn switch, heater blower	7.5A
11	Stop switch - right side instruments	10A

MidWestTech | New Holland 775 Loader Backhoe Operator's Manual | Publication 42077520 Order the manual at mid-west-tech.com >