
Tractors
4835
5635
6635
7635

OPERATOR'S MANUAL

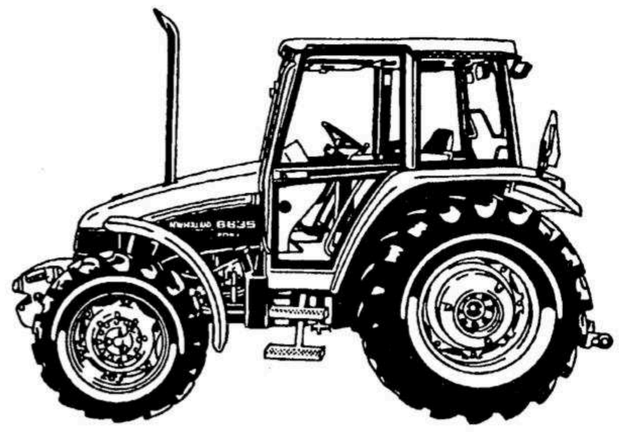

NEW HOLLAND

42483541 3/96

MidWestTech | New Holland 4835, 5635, 6635, 7635 Tractor Operator's Manual | Publication 42483541

Order the manual at mid-west-tech.com >

CONTENTS

Title	Page
Introduction	
To the owner	0-5
Product identification	0-6
Important environmental considerations	0-8
Safety precautions	0-9
Safety decals	0-15
Protective guards	0-20
Universal symbols	0-22
Section 1—General Information	1-1
Protecting the electronic/electrical system during charging or welding	1-2
Controls and instruments—location and function	1-4
Section 2—Operation	2-1
Before using the tractor	2-1
Starting and stopping the engine	2-2
Instrument panel	2-7
Transmission:	
– Synchro Command (12 + 4)	2-13
– Synchro-Shuttle (12 + 12)	2-16
– Synchro-Shuttle with creeper (20 + 12)	2-19
– Dual Command (24 + 12) transmission	2-22
Ground speed decals	2-27
Front wheel assist	2-28
Differential lock	2-29
Power take-off	2-31
Hydraulic lift	2-34
Three-point linkage	2-39
Towing equipment	2-44
Remote control valves	2-49
Adjustment of wheel tracks	2-56
Tires	2-64
Ballasting	2-74
Seat adjustment	2-81
Cab	2-85
Section 3—Lubrication and Maintenance	3-1
Introduction	3-1
Tractor refuelling	3-2
Access for inspection and maintenance	3-4
Lubrication and maintenance table	3-5
Flexible maintenance	3-7
Operations after every 10 hours of use	3-12
Operations after every 50 hours of use	3-17
Operations after every 300 hours of use	3-21
Operations after every 900 hours of use	3-26
Operations after every 1,200 hours of use	3-26
General maintenance	3-32
Section 4—Troubleshooting	4-1
Section 5—Specifications	5-1
Index	5-13
Pre-delivery Checklist	5-15
Delivery Report	5-19
50 Hour Service	5-23

MidWestTech | New Holland 4835, 5635, 6635, 7635 Tractor Operator's Manual | Publicatio... Order the manual at mid-west-tech.com >