Farmall 55C
Farmall 65C
Farmall 75C
Tractors

OPERATOR'S MANUAL

Part Number 47374334
English
June 2012

CE

CASE IH AGRICULTURE

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 47374334
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
EC Declaration of Conformity 1-2
Commission Directive 2010/52/EU 1-4
Airborne noise emission 1-11
Vibration levels 1-12
Electro-magnetic interference (EMC) 1-13
Metric and Imperial units abbreviations 1-14
Introduction 1-16
Tractor intended use 1-17
Ecology and the environment 1-19
Identification plates 1-20
Approval data plate 1-22
Component Identification 1-23

2 SAFETY INFORMATION

Safety rules 2-1
Safety information 2-2
Air conditioning safety regulations 2-6
Roll over protective structure (ROPS) 2-7
Cab guard 2-8
Machine stability 2-10
Personal protective equipment (PPE) 2-12
Tractor jacking points 2-13
Hazardous chemicals 2-14
Burn prevention 2-15
Fire or explosion prevention 2-16
Getting in and out of the machine 2-17
Safety signs 2-18

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General Information 3-1
Cab 3-2
Heating, ventilation or air-conditioning control 3-6

OPERATOR'S SEAT

Operator seat 3-8
Seat belt 3-11

INSTRUCTOR'S SEAT

Instructor's seat 3-12

FORWARD CONTROLS

Instrument cluster 3-12

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

Front controls 3-16

LEFT-HAND SIDE CONTROLS
Console Left-hand console - Localisation overview 3-19

RIGHT-HAND SIDE CONTROLS
Console Right-hand console - Localisation overview 3-20

EXTERIOR CONTROLS
Battery disconnect switch 3-22
Power sockets 3-22

Display setup
Speed calibration 3-23

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT
Basic operating safety rules 4-1

STARTING THE UNIT
Starting the Engine 4-3

STOPPING THE UNIT
Stopping the engine 4-4

MOVING THE UNIT
Machine movement start-up 4-4
Transmission operation 4-6
12 x 12 transmission speed table 4-8
Speed table for 12 x 12 gearbox with additional reducer (20 x 20) 4-10

5 TRANSPORT OPERATIONS

ROAD TRANSPORT
Transporting the machine 5-1

RECOVERY TRANSPORT
Towing the tractor 5-2

6 WORKING OPERATIONS

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

Four-Wheel Drive (4WD) system

Four-wheel drive with mechanical engagement 6-1
Four-wheel drive with electro-hydraulic control 6-2

MECHANICAL DIFFERENTIAL LOCK

Mechanical differential lock 6-3

REAR POWER TAKE-OFF

Safety precautions 6-4
General 6-5
Non-synchronised power take-off 6-6
Synchronised power take-off 6-7

REMOTE CONTROL VALVES

Safety precautions 6-9
Operation 6-10
Quick-release coupler problems 6-12

MECHANICALLY CONTROLLED HYDRAULIC LIFT

Header/Attachment height system - Adjust 6-14
Header/Attachment height system - Operating 6-15

THREE-POINT LINKAGE

Rear three-point hitch - Operating 6-16
Additional equipment attachment points 6-19

TOWBAR

Safety rules 6-20
Swinging drawbar 6-21

REAR TOW HITCH

Safety rules 6-22
Towing hitch 6-23

MAXIMUM PERMITTED LOADS

Front and rear axle 6-27
Towbar 6-29
Towing hitch 6-29

WHEELS AND TIRES


Wheels and tires 6-30
Tyre dimensions 6-34

WHEEL TRACK ADJUSTMENT

Order the manual at mid-west-tech.com >

Front controls


(1) Function calibration switch.

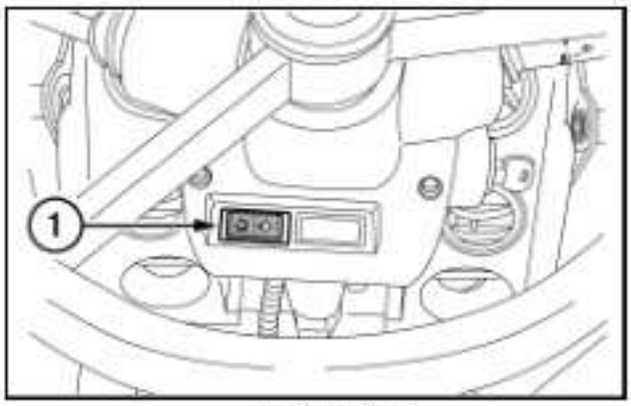

DC15TLNB1701602A 1


(1) Shuttle control lever

- Lever forward - forward drive
- Lever back - reverse drive
- Lever in middle - neutral position

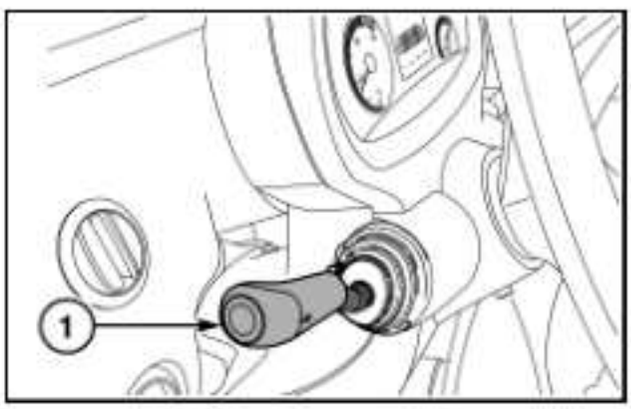


DC15TLNB1701603A 2

(1) Start switch

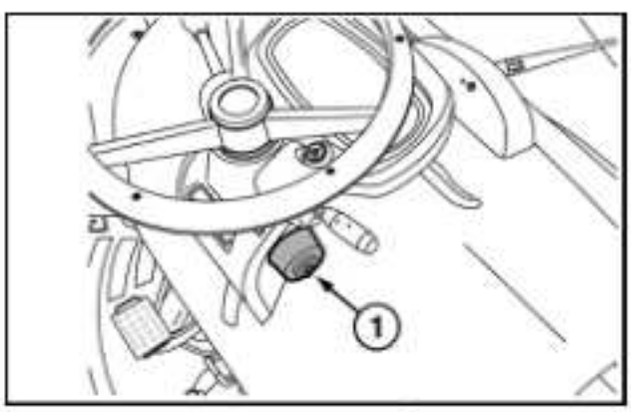

DC15TLNB1702152A 3

(1) Hazard lights switch.
Press switch **(1)** on red surface to turn on the flashing hazard lights; when pressed, the switch also flashes. The panel light flashes at the same time as the direction indicators.

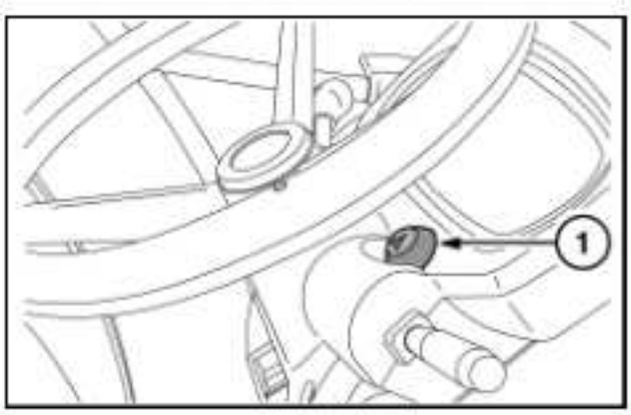

DC15TLNB1702083A 4

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

EVERY 500 HOURS

Engine Oil & Filter

Engines operating in temperatures below **-12 °C** (**10.4 °F**) or in arduous conditions must have the oil changed every **300** hours of operation. The filter must be changed regularly as prescribed after **500** hours.


In some countries, locally available diesel may have a high sulfur content, in which case the oil and filter should be changed sooner, as follows:

sulfur content between **0.5 - 1.0 %** oil change every **300** hours;


sulfur content between **1.0 - 1.3 %** oil change every **150** hours;

Drain oil and renew filter

- place a container under the engine sump;
- remove the drain plugs **(2)** from the sump (one on each side) and drain off the oil;
- screw the drain plugs **(2)** back on;
- unscrew the filter **(1)** fig. **2** , drain it of the remaining oil and discard it as required by the current regulations in your country;
- clean the surface of the filter seat;
- lightly oil the seal of the new filter, screw it down into contact with the support and tighten it by hand by 3/4 of a turn, or a full turn at most;
- fill up with new oil through the fill point **(1)** figure **1**
- start the engine, leave it idling for at least 3 minutes; switch it off and check that the oil level is between the **MIN** and **MAX** marks on the dipstick. If necessary, top up with oil.

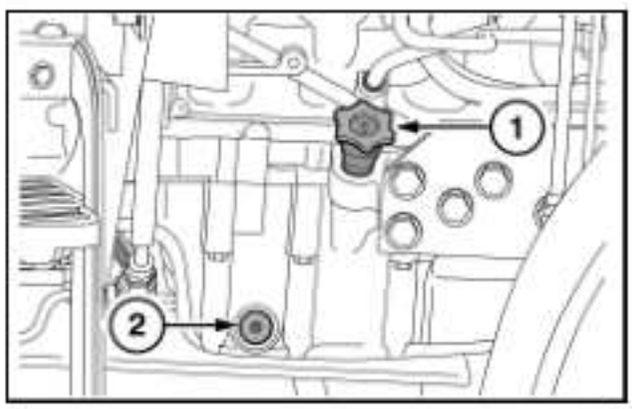


DCUTLINEIT034STA 1

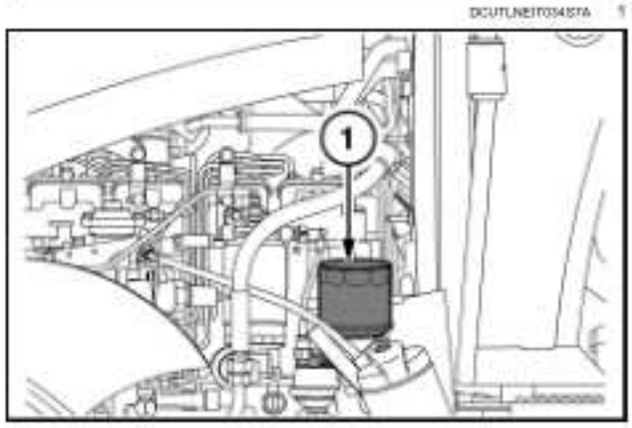

DCUTLINEIT035STA 2

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

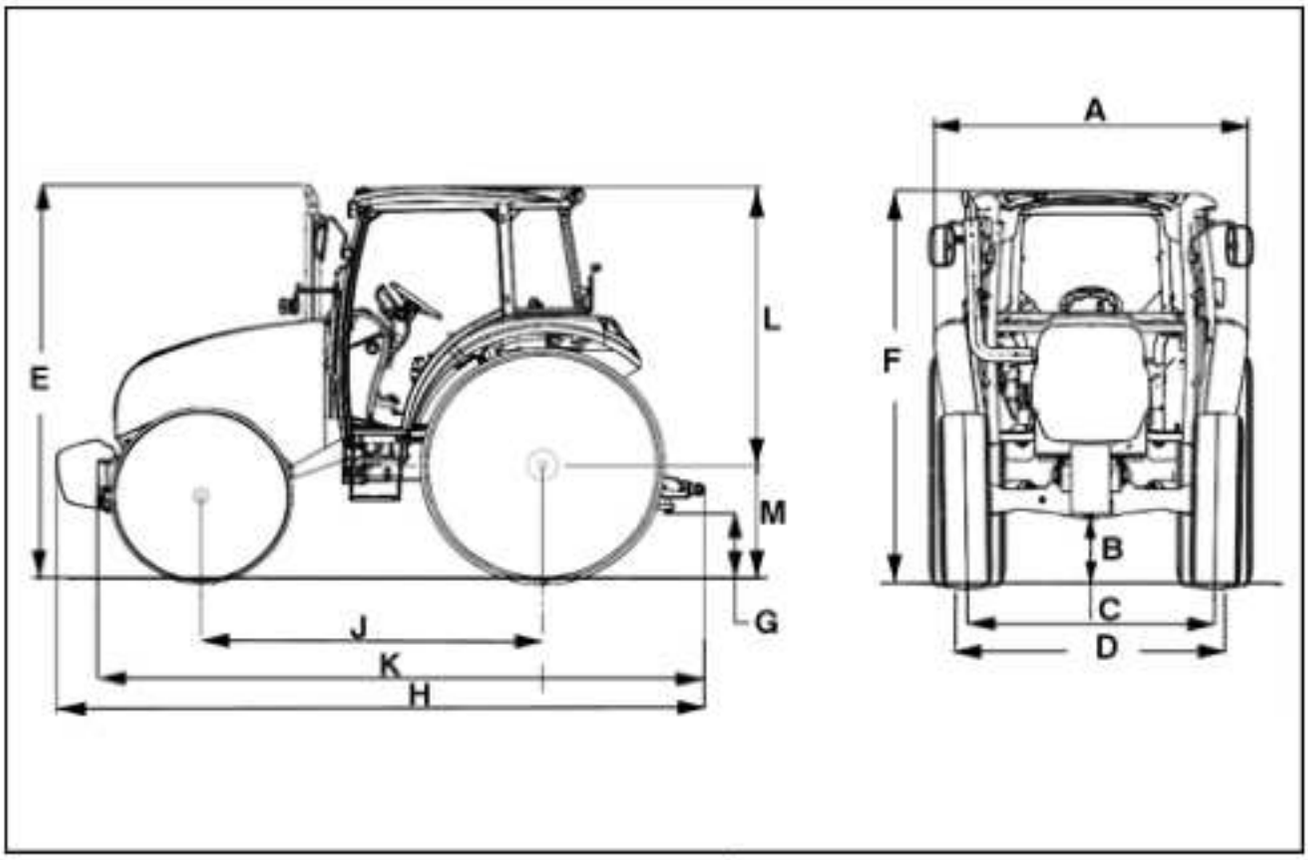

OCUTLINEIT002569 2

DIMENSIONS WITH CAB

A — With standard mudguards	**1922 mm (75.67 in)**
A — With extended mudguards	**2154 mm (84.80 in)**
B — 4WD axle clearance	**380 mm (14.96 in)**
C – 2WD	**1429 - 2029 mm (56.26 - 79.88 in)**
C – 4WD	**1545 - 1945 mm (60.83 - 76.57 in)**
D — Rear wheel track	**1327 - 1930 mm (52.24 - 75.98 in)**
E — Min.	**2420 mm (95.276 in)**
E — Max.	**2495 mm (98.23 in)**
F — Min.	**2409 mm (94.84 in)**
F — Max.	**2484 mm (97.80 in)**
G — Min.	**351 mm (13.82 in)**
G — Max.	**428 mm (16.85 in)**
H — 2WD	**3854 mm (151.73 in)**
H — 4WD	**3806 mm (149.84 in)**
K — 2WD	**3596 mm (141.57 in)**
K — 4WD	**3548 mm (139.69 in)**
J — 2WD	**2150.4 mm (84.66 in)**
J — 4WD	**2102.5 mm (82.78 in)**
L	**1784 mm (70.24 in)**
M — Min.	**625 mm (24.61 in)**
M — Max	**700 mm (27.56 in)**

MidWestTech | Case Farmall 55C, 65C, 75C Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >