Farmall 85C
Farmall 95C
Farmall 105C
Tractor

OPERATOR'S MANUAL

Part number 47435559
1st edition English
December 2012

CASE IH AGRICULTURE

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication 47435559
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
Proposition 65 1-2
Electro-magnetic interference (EMC) 1-3
International symbols 1-4
Introduction 1-6
Operator's manual storage 1-7
Tractor intended use 1-8
Ecology and the Environment 1-10
Identification plates 1-11
Component Identification 1-13

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety information 2-2
Air conditioning safety regulations 2-6
Vehicle vibration levels 2-7
Cab guard 2-8
Machine stability 2-10
Personal protective equipment (PPE) 2-12
Tractor jacking points 2-13
Hazardous chemicals 2-14
Burn prevention 2-15
Fire or explosion prevention 2-16
Getting in and out of the machine 2-17
Emergency exit 2-18
Safety signs 2-19

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General information 3-1
Cab 3-2

OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust 3-6
Pneumatically-adjusted operator seat - Adjust 3-7
Seat belt 3-9

INSTRUCTOR'S SEAT

Instructional seat - Localisation overview 3-10

FORWARD CONTROLS

Instrument cluster 3-10
Console Front console - Localisation overview 3-16

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

LEFT-HAND SIDE CONTROLS

Cableless version 3-20
Handbrake 3-21

RIGHT-HAND SIDE CONTROLS

Cableless version 3-22
Version with cab 3-23
Console Right-hand console - Localisation overview 3-24
Heating, ventilation or air-conditioning control 3-25

DISPLAY SETTINGS

Programmable display 3-27
Adjusting the dashboard/display brightness 3-28
Calibrating speed 3-30
Calibrating tool width 3-32
Programming maintenance work 3-33
Activating/deactivating buzzer 3-35
Setting units of measurement 3-36
Regenerating the diesel particulate filter (DPF) automatically/manually 3-37
Resetting the oil change counter 3-42
Viewing error codes 3-43

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules 4-1

STARTING THE UNIT

Starting the Engine 4-2
Machine movement start-up 4-5

STOPPING THE UNIT

Stopping the engine 4-6
Battery disconnect switch 4-7

MOVING THE UNIT

Transmission operation 4-8
12 x 12 transmission speed table 4-11
Speed table for 12 x 12 gearbox with additional reducer (20 x 12) 4-13
Speed table for 12 x 12 gearbox with additional reducer (20 x 20) 4-15

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Transporting the machine 5-1

RECOVERY TRANSPORT
Towing the tractor 5-2

6 WORKING OPERATIONS

2WD or 4WD
Four-wheel drive with electro-hydraulic control 6-1

DIFFERENTIAL LOCK
Mechanical differential lock 6-1
Electrohydraulic differential lock 6-3

REMOTE CONTROL VALVES
Safety rules 6-4
Rear remote control valve(s) 6-5
Single/double action hydraulic valves 6-7

REAR POWER TAKE-OFF (PTO)
Safety rules 6-8
General 6-9
Speed adjustment 6-10
Electrohydraulically controlled power take-off 6-11
Mechanically controlled power take-off 6-12
Power take-off speeds 6-13

HYDRAULIC LIFT
General safety and precautions 6-14
Hydraulic lift with mechanical control 6-15

THREE POINT HITCH
Three-point linkage 6-17
Three-point linkage dimensions 6-19
Additional equipment attachment points 6-20

TOWBAR
General safety rules 6-22
Swinging drawbar 6-23


REAR TOW HITCH
General safety rules 6-24

MAXIMUM PERMITTED LOADS

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Single/double action hydraulic valves

Single/double acting switching

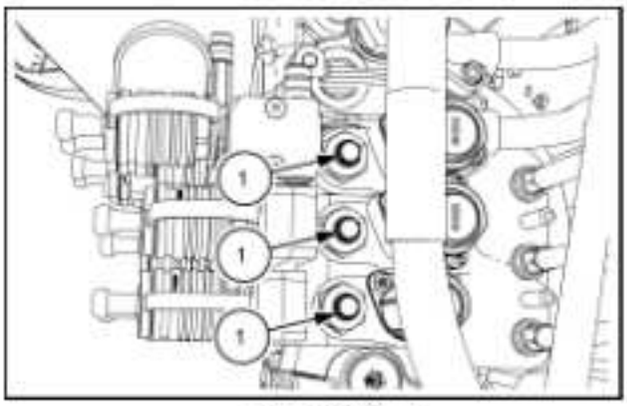

DCUTLNEIT037896A 1

To switch the control valves to:


- Single-acting, slacken screw **(1)** near to the distributor control lever pivot until it stops.
- Double-acting, tighten the screw **(1)** fully.

When using single-acting, in order to quickly identify the coupler to which the implement is to be connected, actuate the distributor lever and observe the two lines to which the couplers are connected: the line carrying the oil should move.

For greater safety, check that the line to which the implement is connected using single-acting is the line on the distributor body connected furthest from the change-over screw.

NOTICE: *Each control lever is provided with a coloured plastic cap, making it possible to identify the coupler to which it is connected (fitted with a plastic cap of the same colour).*

Double-acting cylinder operation

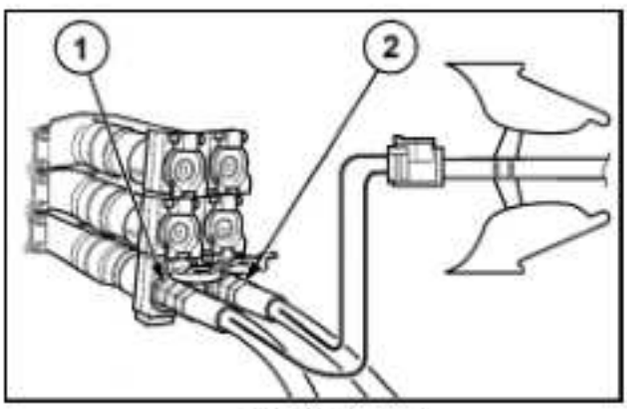


DCAPLTSNE31038A 2

Connect the delivery hose **(1)** on the left coupling of the auxiliary distributor. Connect the outlet hose **(2)** on the right coupling of the auxiliary distributor.

To extend a double-acting cylinder, move the control lever into the 'extension' (raise) position; to retract the cylinder, move the lever into the 'retraction' (lower) position.

Single-acting cylinder operation

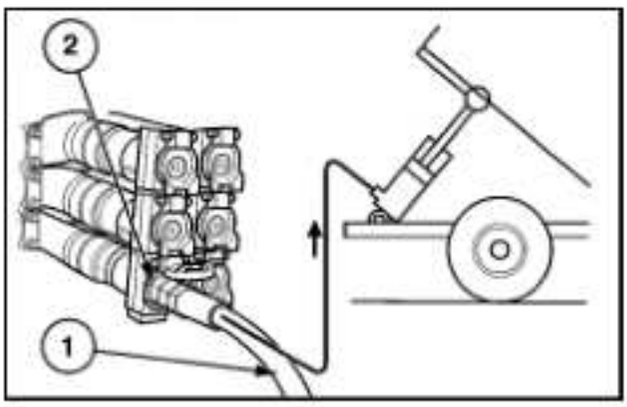

DCAPLTSNE31039A 3

Connect the hose **(1)** from the single acting cylinder to the left-hand coupling **(2)** of the auxiliary control valve.

To extend a single acting cylinder, move the control lever into the 'extension' (raise) position; to retract the cylinder, move the lever beyond the 'retraction' (lower) position into the 'float' position.

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

7 - MAINTENANCE

GENERAL INFORMATION

General safety before you service

⚠ DANGER

Improper operation or service of this machine can result in an accident.
Do not operate this machine or perform any lubrication, maintenance, or repair on it until you have read and understood the operation, lubrication, maintenance, and repair information.
Failure to comply will result in death or serious injury.

D0018A

⚠ DANGER

Improper operation or service of this machine can result in an accident.
Any unauthorized modifications made to this machine can have serious consequences. Consult an authorized dealer on changes, additions, or modifications that may be required for this machine. Do not make any unauthorized modifications.
Failure to comply will result in death or serious injury.

D0038A

⚠ WARNING

Avoid injury! Always do the following before lubricating, maintaining, or servicing the machine.
1. **Disengage all drives.**
2. **Engage parking brake.**
3. **Lower all attachments to the ground, or raise and engage all safety locks.**
4. **Shut off engine.**
5. **Remove key from key switch.**
6. **Switch off battery.**
7. **Wait for all machine movement to stop.**

Failure to comply could result in death or serious injury.

W1023A

⚠ WARNING

Maintenance hazard!
Before you start servicing the machine, attach a DO NOT OPERATE warning tag to the machine in a visible area.
Failure to comply could result in death or serious injury.

W0084A

⚠ WARNING

Maintenance hazard!
Always perform all service procedures punctually at the intervals stated in this manual. This ensures optimum performance levels and maximum safety during machine operation.
Failure to comply could result in death or serious injury.

W0133A

⚠ WARNING


Improper operation or service of this machine can result in an accident.
Read and understand the SAFETY INFORMATION Section before you perform any maintenance, service, or repairs. Read and understand the specific service procedures for the components you plan to work with before you start servicing the machine.
Failure to comply could result in death or serious injury.

W0138A

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

9 - SPECIFICATIONS

Dimensions and weights

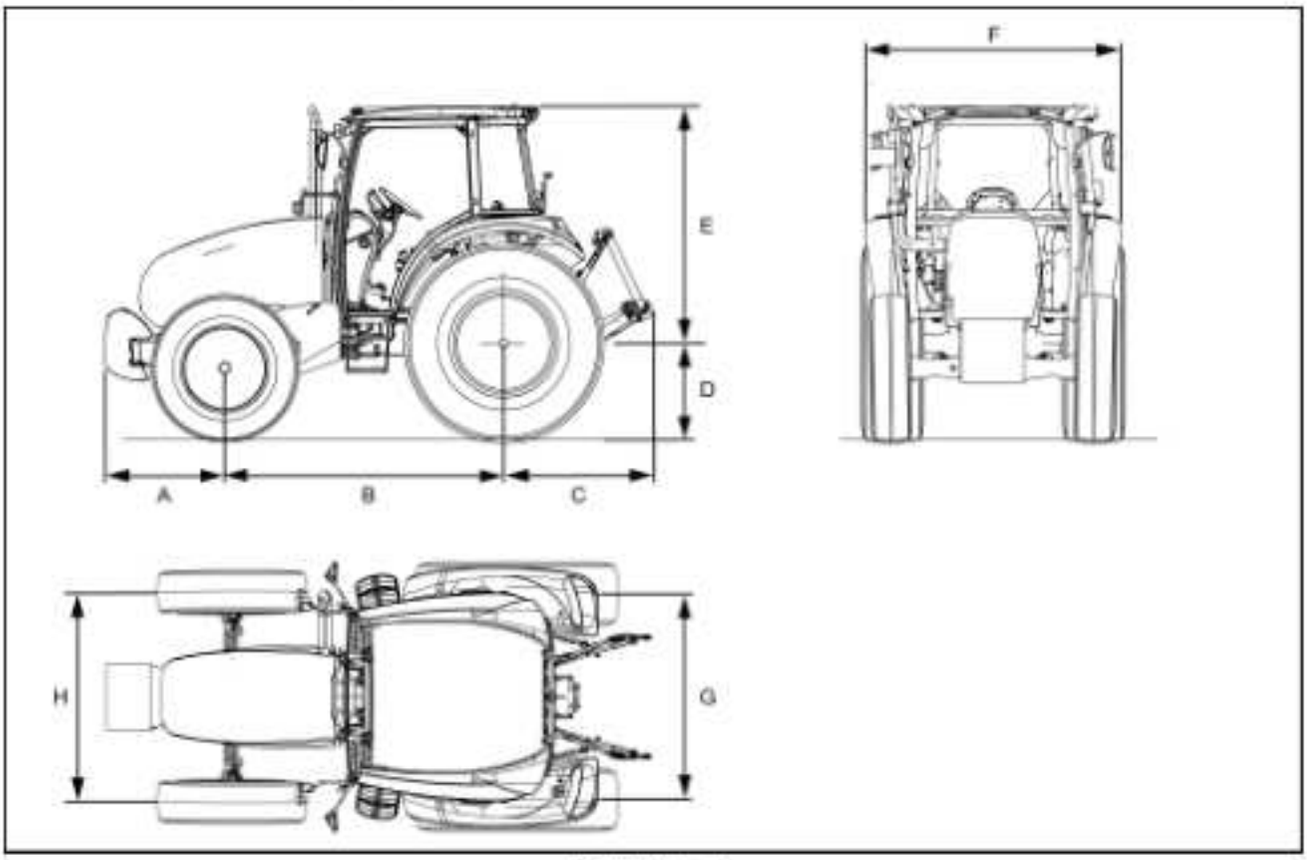

DCUTLINE1T0015BP 1

Reference	Dimension
A	648 mm (25.51 in)
B • 2WD	2316 mm (91.18 in)
B • 4WD	2258 mm (88.90 in)
C	1143 mm (45.00 in)
D	Tire index radius
E	1859 mm (73.19 in)
F	1923 mm (75.71 in)
G	1337 - 1937 mm (52.64 - 76.26 in)
H • 2WD	1429 - 2029 mm (56.26 - 79.88 in)
H • 4WD	1235 - 1947 mm (48.62 - 76.65 in)

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >