SERVICE MANUAL

300FP / 380FP

Header

Part number 47461392

English

January 2013

Copyright © 2013 CNH Belgium N.V. All Rights Reserved.

Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Hydraulic systems 35

[35.000] Hydraulic systems 35.1

Electrical systems 55

[55.000] Electrical system 55.1

[55.100] Harnesses and connectors 55.2

Attachments/Headers 58

[58.120] Attachment/Header feed auger 58.1

[58.900] Belt feeding 58.2

Product feeding 60

[60.220] Pickup 60.1

MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Basic instructions - How to use and navigate through this Manual 3
Advice 10
Foreword 11
Safety rules 12
Basic instructions 16
Torque 19
Basic instructions - Chain Wear Tables - Roller Chains 21
Conversion factors 23
Product identification 24

MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >

Contents

Attachments/Headers - 58

Attachment/Header feed auger - 120

SERVICE

Feed auger
- Remove 3
- Install 7

Feed auger drive chain
- Remove 11
- Install 13

Retractable finger assembly
- Remove 15
- Install 16
- Holder - Replace 17
- Service instruction - Timing check 19
- Service instruction Timing setting / adjustment 20

Torque limiter
- Remove 22
- Install 24


MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >

Torque

Minimum hardware tightening torques (in N m or lb in /lb ft) for normal assembly applications unless otherwise stated

NOTICE: *Shown below is the suggested initial torque tightening sequences for general applications, tighten in sequence from item 1 through to the last item of the hardware.*

The minimum hardware tightening torque on drawings, in specifications etc. have priority.
The applicable CNH Standard is ENS7001.

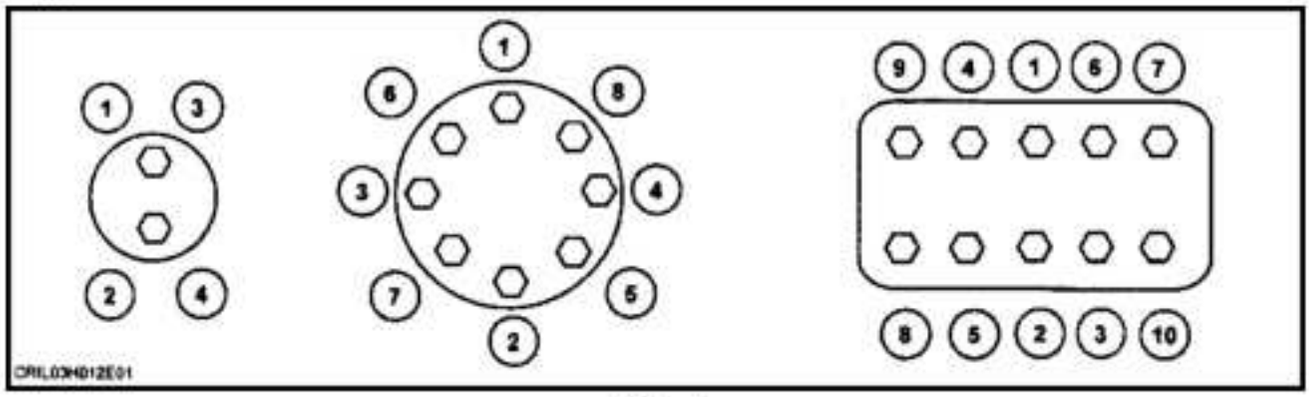

1

Metric hardware


	Class 8.8 in N m (lb in or lb ft)			Class 10.9 in N m (lb in or lb ft)		
Nominal Size	Plated nut	Lock nut	Hardened nut	Plated nut	Lock nut	Hardened nut
M3	1.3 N·m (11.5 lb in)	0.7 N·m (6.2 lb in)	1.2 N·m (10.6 lb in)	1.8 N·m (15.9 lb in)	0.9 N·m (8.0 lb in)	1.6 N·m (14.2 lb in)
M4	2.9 N·m (25.7 lb in)	1.6 N·m (14.2 lb in)	2.6 N·m (23.0 lb in)	4.2 N·m (37.2 lb in)	2.3 N·m (20.4 lb in)	3.7 N·m (32.7 lb in)
M5	5.9 N·m (52.2 lb in)	3.2 N·m (28.3 lb in)	5.3 N·m (46.9 lb in)	8.5 N·m (75.2 lb in)	4.6 N·m (40.7 lb in)	7.6 N·m (67.3 lb in)
M6	10.1 N·m (89.4 lb in)	5.5 N·m (48.7 lb in)	9.1 N·m (80.5 lb in)	14.5 N·m (10.7 lb ft)	7.9 N·m (69.9 lb in)	13 N·m (9.6 lb ft)
M8	24.5 N·m (18.1 lb ft)	13.5 N·m (10.0 lb ft)	22 N·m (16.2 lb ft)	35.1 N·m (25.9 lb ft)	19.3 N·m (14.2 lb ft)	31.5 N·m (23.2 lb ft)
M10	48.7 N·m (35.9 lb ft)	26.8 N·m (19.8 lb ft)	43.8 N·m (32.3 lb ft)	69.5 N·m (51.3 lb ft)	38.2 N·m (28.2 lb ft)	62.5 N·m (46.1 lb ft)
M12	85 N·m (62.7 lb ft)	46.7 N·m (34.4 lb ft)	76.5 N·m (56.4 lb ft)	121 N·m (89.2 lb ft)	66.5 N·m (49.0 lb ft)	108.9 N·m (80.3 lb ft)
M14	135 N·m (99.6 lb ft)	74.2 N·m (54.7 lb ft)	121.5 N·m (89.6 lb ft)	193 N·m (142.3 lb ft)	106.1 N·m (78.3 lb ft)	173.7 N·m (128.1 lb ft)
M16	210 N·m (154.9 lb ft)	115.5 N·m (85.2 lb ft)	189 N·m (139.4 lb ft)	301 N·m (222 lb ft)	165.5 N·m (122.1 lb ft)	270.9 N·m (199.8 lb ft)
M18	299 N·m (220.5 lb ft)	164.4 N·m (121.3 lb ft)	269.1 N·m (198.5 lb ft)	414 N·m (305.4 lb ft)	227.7 N·m (167.9 lb ft)	372.6 N·m (274.8 lb ft)
M20	425 N·m (313.5 lb ft)	233.72 N·m (172.4 lb ft)	382.5 N·m (282.1 lb ft)	587 N·m (432.9 lb ft)	322.8 N·m (238.1 lb ft)	528.3 N·m (389.7 lb ft)
M22	579 N·m (427 lb ft)	318.4 N·m (234.8 lb ft)	521.1 N·m (384.3 lb ft)	801 N·m (590.8 lb ft)	440.5 N·m (324.9 lb ft)	720.9 N·m (531.7 lb ft)
M24	735 N·m (542.1 lb ft)	404.2 N·m (298.1 lb ft)	661.5 N·m (487.9 lb ft)	1016 N·m (749.4 lb ft)	558.8 N·m (412.1 lb ft)	914.4 N·m (674.4 lb ft)
M27	1073 N·m (791.4 lb ft)	590.1 N·m (435.2 lb ft)	967.5 N·m (713.6 lb ft)	1486 N·m (1096 lb ft)	817.3 N·m (602.8 lb ft)	1337 N·m (986.1 lb ft)
M30	1461 N·m (1077.6 lb ft)	803.5 N·m (592.6 lb ft)	1315 N·m (969.9 lb ft)	2020 N·m (1489.9 lb ft)	1111 N·m (819.4 lb ft)	1818 N·m (1340.9 lb ft)

MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >

Wire harnesses - Overview

Pickup harness

X12 - Auger speed sensor (B14)
X54 - Recognition sensor (A49)
X182 - Marker lights (E39) / (E40)
X301 - Reel rpm sensor (B50)
X26 - Main connector
X167 - Movable wheels solenoid (Y42)
X300 - Oil pump solenoid (Y41)

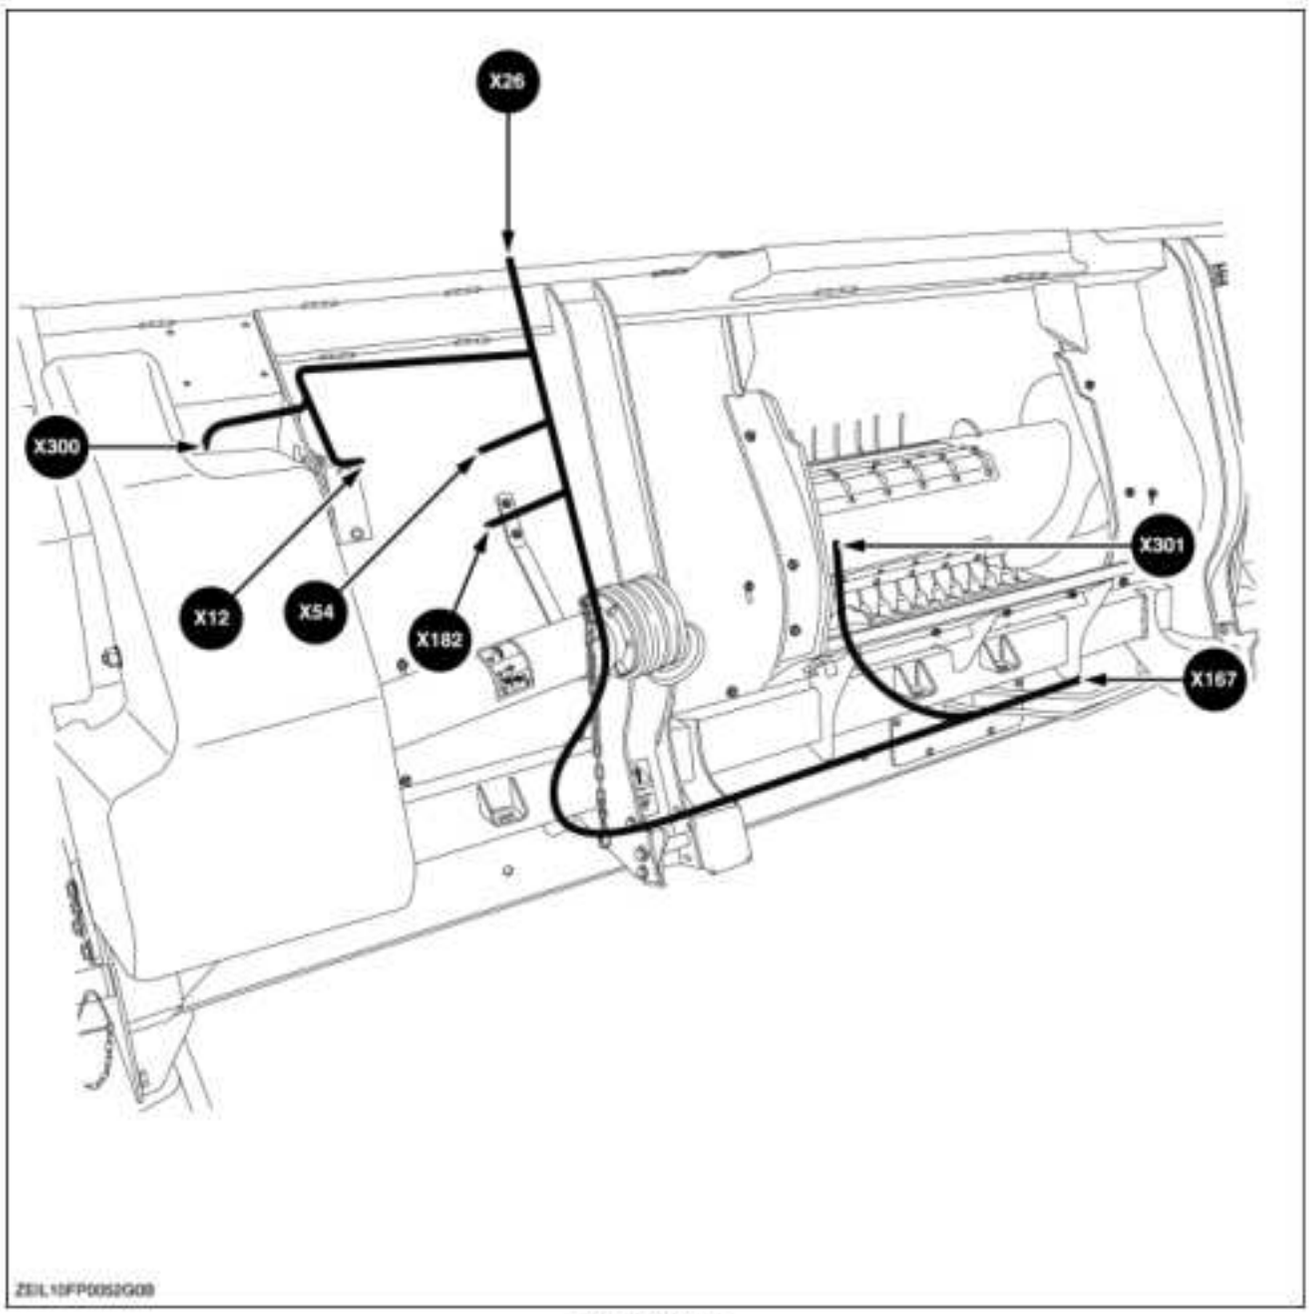


ZELX0FP0052G08 1

MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >

Shafts - Remove


Prior operation:
Torque limiter - Remove (58.120).
Prior operation:
Feed auger drive chain - Remove (58.120).

1. Remove the four bolts **(17)**.

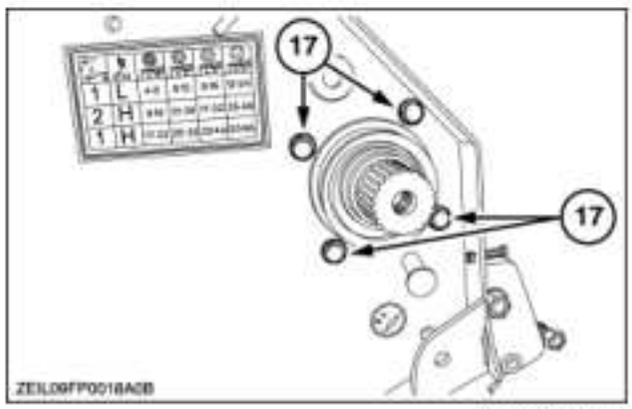


ZEILO9FP0018A0B 1

2. Remove the drive shaft **(19)** with the bearing housing **(18)**.
3. Remove the two plates **(24)**.
4. Remove the sprockets **(20)**.

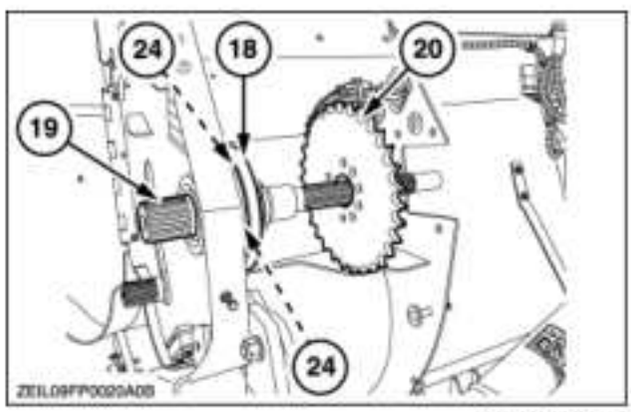

ZEILO9FP0020A0B 2

5. Flatten the locking ring **(21)**.
6. Remove the ring **(22)** and the locking ring **(21)** from the drive shaft **(19)**.

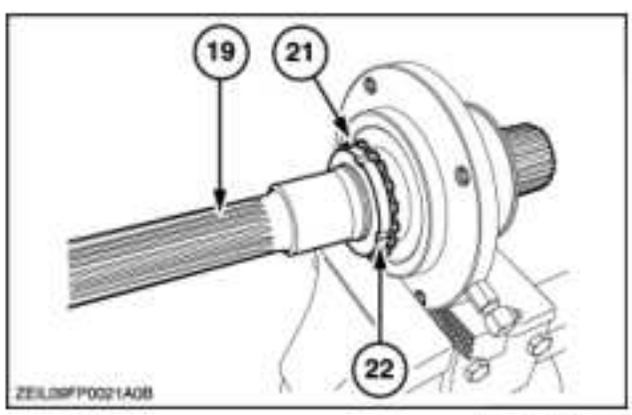

ZEILO9FP0021A0B 3

MidWestTech | New Holland 300FP, 380FP Header Service Manual | Publication 4746... Order the manual at mid-west-tech.com >