330 Turbo True-Tandem Harrow (22 – 42 Foot)

Vertical Tillage

OPERATOR'S MANUAL

Part number 47553821

3rd edition English

September 2013

Replaces part number 84321958

CASE IH AGRICULTURE

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manual | Publication 47553821

Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

To the owner 1-1
Safety features — Amber reflectors 1-2
Product identification 1-3
Left and right side of the machine 1-4

2 SAFETY INFORMATION

Safety rules 2-1
Safety features 2-2
Decal information 2-8
Ecology and the Environment Ecology and the environment 2-13
Hand signals 2-14

3 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Before operating your 330 Turbo 3-1
Jack stand 3-2
Disconnecting the implement 3-3

4 WORKING OPERATIONS

FIELD OPERATION

General information Setup Instructions 4-1
Torque charts 4-2
Required building and equipment 4-3
Safety precautions 4-4
Coil tine harrow mounting 4-6
Coil tine setup instructions 4-10
Coil tine harrow mount locations Coil tine harrows for single fold machines 4-16

Coil tine harrow mounting for double fold machines 4-34
Coil tine harrow mount locations for double fold machines 4-42
Coil tine setup instructions 4-52
Rear jack stand for double fold machine 4-58
Round bar basket setup instructions 4-61
Round bar basket mount locations 4-68
Toolbar - Dimension 4-71
Round bar basket setup instructions for double fold machines 4-76
Round bar basket mount locations for double fold machines 4-86
Rear jack stand for double fold machine 4-96
General information 4-99
Coil tine harrow - adjusting and operating 4-100
Coil tine harrow - tips for setting 4-104
Coil tine harrow adjustment 4-105

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manua... Order the manual at mid-west-tech.com >

Adjustment handle storage 4-107
Leveling basket adjustment 4-108

5 MAINTENANCE

MAINTENANCE CHART

Lubrication and maintenance chart 5-1

Every 50 hours

Coil tine harrow mounting arm 5-2
Rear basket arm 5-2
Rolling basket bearing 5-2

STORAGE

Preparing for storage 5-3
Removing from storage 5-4

6 TROUBLESHOOTING

SYMPTOM(S)

Coil tine harrow leveling attachment 6-1
Round bar leveling attachment 6-2

7 SPECIFICATIONS


Tractor requirements 7-1
Leveling attachment 7-1

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manua... Order the manual at mid-west-tech.com >

3 - TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Before operating your 330 Turbo

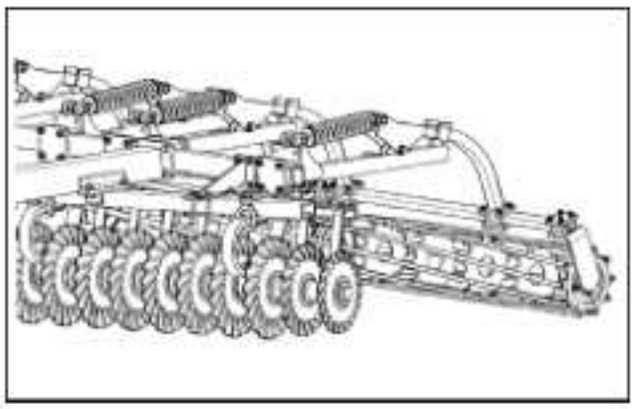

GOS 13TILO997AA 1

Before operating your 330 Turbo with round bar basket or coil tine harrow leveling attachment, do the following:

1. Check all hardware and pins for wear. Tighten or torque as required. Refer to the "Torque" information starting on page **4-2** for correct torque requirements.
2. Make sure rear jack stand is raised up prior to transporting or field operation. Refer to "Jack stand" on page **3-2** for operating instructions.
3. Check tires for correct air pressure. See the "Tires and wheels" information in the "Specifications" section of the 330 Turbo Operator's manual for tire pressures.
4. Check all safety equipment.
5. Read and understand the operating instructions in this manual.

Transporting

⚠WARNING

Unexpected movement!
Implements equipped with rear-mounted attachments or rear-towed equipment may tip back when disconnecting from the tractor in the transport position. Use a rear jack stand to prevent the implement from tipping back.
Failure to comply could result in death or serious injury.

W0017A

- The leveling attachment sections are raised from the ground for transport by raising the 330 Turbo.
- Leveling attachments mounted on hinged wings of the 330 Turbo move upward when the wings are raised.

NOTE: *The 330 Turbo comes with a rear jack stand when the round bar basket or coil tine harrow leveling attachment is ordered.*

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manua... Order the manual at mid-west-tech.com >

1. Position the **2642 mm** (**104 in**) harrow tube **(2)** to the outer per dimensions shown in "Coil tine harrow mount locations for double fold machines" starting on page **4-42**.
2. Assemble **2642 mm** (**104 in**) harrow tube **(2)** to outer with tine harrow mount plates **(5)**, **5/8 x 6 in** hex bolts **(6)**, and **5/8 in** lock nuts **(3)**.
3. Tighten **5/8 in** hardware to specifications listed in "Torque charts" starting on page **4-2**.
4. Position tine harrow mounts **(8)** to **2642 mm** (**104 in**) harrow tube **(2)** per dimensions shown in "Coil tine harrow mount locations for double fold machines" starting on page **4-42**.
5. Assemble tine harrow mounts **(5)** to **2642 mm** (**104 in**) harrow tube **(2)** with flats **(4)**, **3/4 x 5–1/2 in** hex bolts **(7)**, and **3/4 in** lock nuts **(3)**.

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manua... Order the manual at mid-west-tech.com >


5 - MAINTENANCE

MAINTENANCE CHART

Lubrication and maintenance chart

Maintenance action	Grease	Page no.
Every 50 hours		
Coil tine harrow mounting arm		5-2
Rear basket arm		5-2
Rolling basket bearing		5-2

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manua... Order the manual at mid-west-tech.com >

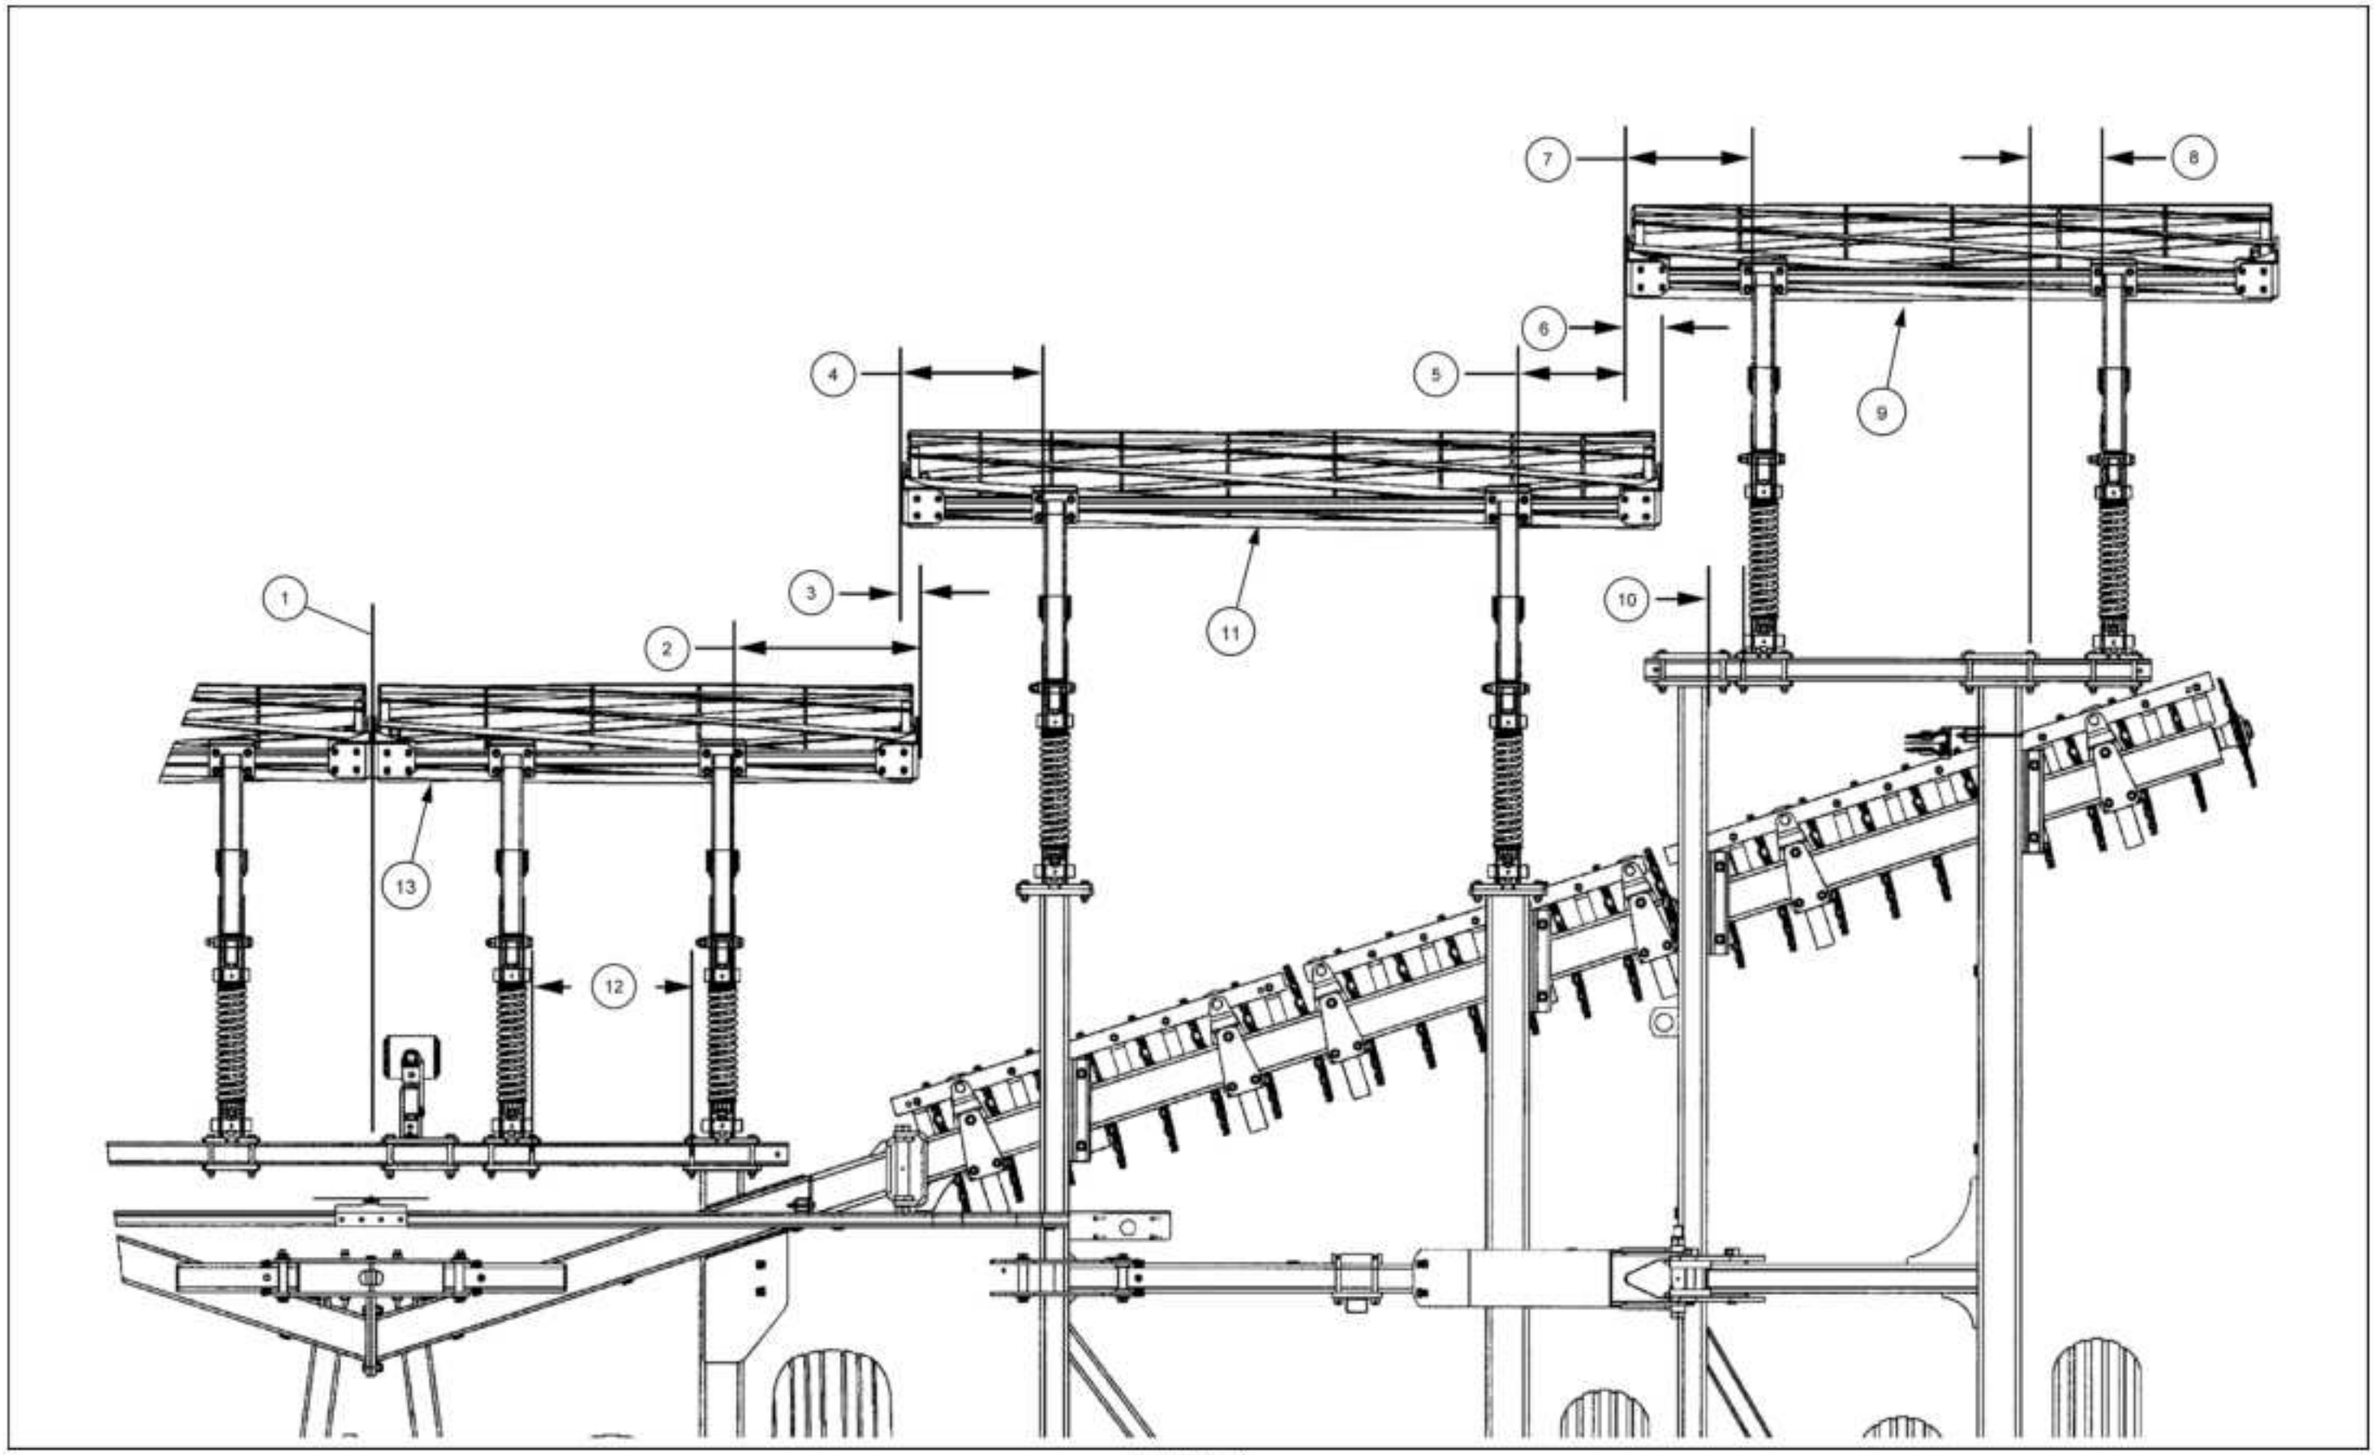

MidWestTech | Case 330 Turbo True Tandem Harrow Vertical Tillage Operator's Manual | Publication 47553821

Order the manual at mid-west-tech.com >