Farmall 85C
Farmall 95C
Farmall105C
Tractor

OPERATOR'S MANUAL

Part number 47604404
2nd edition English
September 2013

CE

CASE IH AGRICULTURE

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication 47604404

Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
EC Declaration of Conformity 1-3
Commission directive 2010/52/EU 1-5
Noise level 1-12
Electro-magnetic interference (EMC) 1-13
International symbols 1-14
Introduction 1-16
Operator's manual storage 1-17
Tractor intended use 1-18
Ecology and the Environment 1-20
Identification plates 1-21
Approval data plate 1-23
Component Identification 1-24

2 SAFETY INFORMATION

Safety rules 2-1
Safety information 2-2
Air conditioning safety regulations 2-6
Vehicle vibration levels 2-7
Cab guard 2-8
Machine stability 2-10
Personal protective equipment (PPE) 2-12
Tractor jacking points 2-13
Hazardous chemicals 2-14
Burn prevention 2-15
Fire or explosion prevention 2-16
Getting in and out of the machine 2-17
Emergency exit 2-18
Safety signs 2-19

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General information 3-1
Cab 3-2

OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust 3-6
Pneumatically-adjusted operator seat - Adjust 3-7
Seat belt 3-9

PASSENGER'S SEAT

Passenger seat 3-10

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

FORWARD CONTROLS

Instrument cluster 3-11
Console Front console - Localisation overview 3-16

LEFT-HAND SIDE CONTROLS

Cableless version 3-20
Version with cab 3-20
Handbrake 3-21

RIGHT-HAND SIDE CONTROLS

Cableless version 3-22
Version with cab 3-23
HI-LO version with cab 3-24
Console Right-hand console - Localisation overview 3-25
Heating, ventilation or air-conditioning control 3-26

EXTERIOR CONTROLS

Trailer electrical socket 3-28

DISPLAY SETTINGS

Programmable display 3-29
Adjusting the dashboard/display brightness 3-30
Calibrating speed 3-32
Calibrating tool width 3-34
Programming maintenance work 3-35
Activating/deactivating buzzer 3-37
Setting units of measurement 3-38
Regenerating the diesel particulate filter (DPF) automatically/manually 3-39
Resetting the oil change counter 3-44
Viewing error codes 3-45

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules 4-1

STARTING THE UNIT

Starting the Engine 4-3
Machine movement start-up 4-5

STOPPING THE UNIT

Stopping the engine 4-6
Battery disconnect switch 4-7

MOVING THE UNIT

Transmission operation 4-8

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

12 x 12 transmission speed table 4-12
Speed table for 12 x 12 gearbox with additional reducer (20 x 12)..... 4-14
Speed table for 12 x 12 gearbox with additional reducer (20 x 20)..... 4-16
Transmission speed table 12 x 12 with "HI-LO" (24 x 24)..... 4-18

5 TRANSPORT OPERATIONS

ROAD TRANSPORT
Transporting the machine 5-1

RECOVERY TRANSPORT
Towing the tractor..... 5-2

6 WORKING OPERATIONS

FOUR WHEEL DRIVE (4WD)
Four-wheel drive with electro-hydraulic control..... 6-1

DIFFERENTIAL LOCK
Mechanical differential lock..... 6-2
Electrohydraulic differential lock..... 6-3

REMOTE CONTROL VALVES
Safety rules..... 6-4
Rear remote control valve(s) 6-5
Single/double action hydraulic valves 6-7


REAR POWER TAKE-OFF (PTO)
Safety rules..... 6-8
General 6-9
Speed adjustment 6-9
Electrohydraulically controlled power take-off 6-10
Mechanically controlled power take-off..... 6-12
Power take-off speeds..... 6-14
Power Take-Off (PTO) fender switch operation 6-15

FRONT POWER TAKE-OFF (PTO)
Safety rules..... 6-17
Front Power Take-Off (PTO)..... 6-18

REAR HYDRAULIC LIFT
General safety and precautions 6-19
Hydraulic lift with mechanical control..... 6-20
Lift-O-Matic® control - Operating..... 6-22

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Version with cab

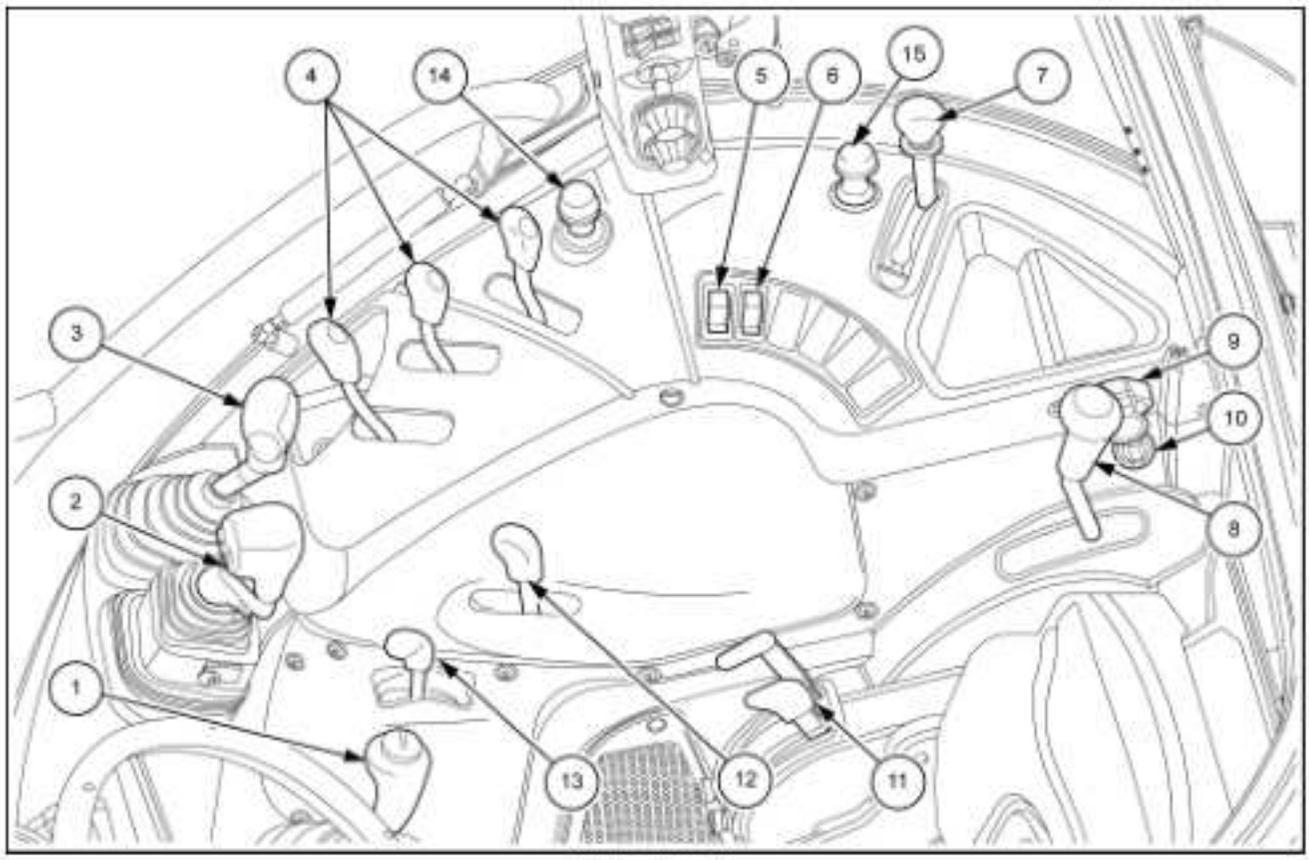

1. Range gear lever.
2. Joystick to operate ventral spool valves.
3. Gear lever.
4. Auxiliary control valve levers.
5. Four–wheel drive engagement selection switch.
6. Differential lock selection switch.
7. PTO speed selection lever.
8. Hydraulically operated towing hitch lever.
9. Implement power socket for **25 A** always powered.
10. Single-pole auxiliary **8 A** socket; powered with the key switch in position '**on**' .
11. Mechanically operated hydraulic lift levers.
12. Control Lever **Lift-O-Matic™**
13. Hand throttle lever.
    Adjust the engine speed. Push forward to gradually increase the rpm, or pull back to decrease.
14. Knob for engaging rear electro-hydraulically operated power take-off.
15. Knob for engaging front electro-hydraulically operated power take-off.


NOTE: *A detailed description of the controls is given in the "Operation" section in the relevant chapter.*
Some of the controls might not be present depending on the tractor configuration.

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Front hitch - Grease

Front lift with multifunction axle support


1. Using a grease gun, pump grease **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** into the grease fittings **(1)** shown (on each side).

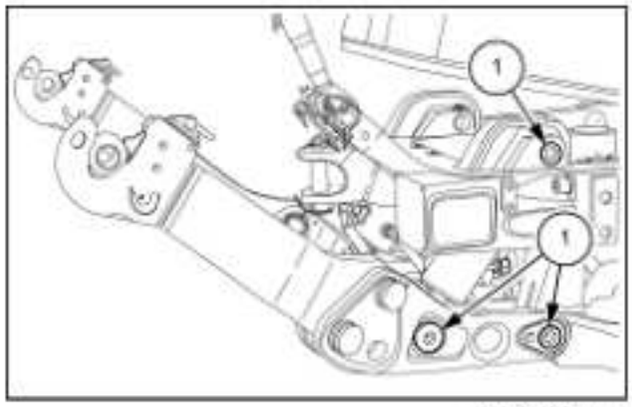

MOIL13TR01181AB 1

Front lift with standard axle support

2. Using a grease gun, pump grease **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** into the grease fittings **(1)** shown.

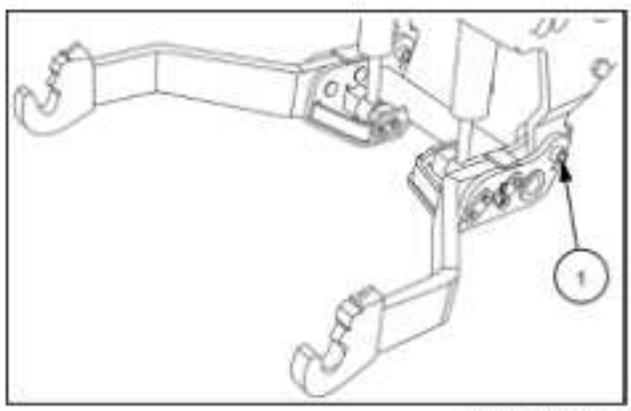

MOIL13TR01244AA 2

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >

TRACTOR WEIGHT (Less ballast, less operator, with fuel)		
	Without cab	With cab
2WD	**3070 kg (6768 lb)**	**3290 kg (7253 lb)**
4WD	**3380 kg (7452 lb)**	**3600 kg (7937 lb)**

FRONT BALLAST WEIGHTS		
	Standard axle support	Multifunctional axle support
1 Plate	**40 kg (88 lb)**	
Ballast support	**60 kg (132 lb)**	**90 kg (198 lb)**
Towing hook	**80 kg (176 lb)**	
4 plates + support + hook	**300 kg (661 lb)**	**330 kg (728 lb)**
6 plates + support + hook	**380 kg (838 lb)**	**410 kg (904 lb)**

REAR BALLAST WEIGHTS — All tires excluding 24 in	
1 ring	**50 kg (110 lb)**
4 rings (2 rings per wheel)	**200 kg (441 lb)**

MidWestTech | Case Farmall 85C, 95C, 105C Tractor Operator's Manual | Publication... Order the manual at mid-west-tech.com >