4206
4208
4212
4406
4408
4412
4416

Corn Header

OPERATOR'S MANUAL

Part number 47650190

2nd edition English

September 2014

Replaces part number 47362882

CASE IH AGRICULTURE

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator's Manual | Publication 47650190

Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Intended use 1-2
Electro-Magnetic Compatibility (EMC) 1-4
Manual scope and required training level 1-5
Product identification 1-6
Machine orientation - Machine orientation 1-7
Operator's manual storage on the machine 1-8

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules 2-2
Ecology and the environment 2-6
Power Take Off (PTO) 2-7
Basic instructions - Access to machine components 2-9
Safety signs - Rigid headers 2-10
Safety signs - Rigid 16–row headers 2-25
Safety signs - Folding headers 2-42
Road travel signs and decals 2-56
Instructional decals 2-59

3 TRANSPORT OPERATIONS

ROAD TRANSPORT

Preparing for road transport - Rigid 3-1
Preparing for road transport - Folding 3-2
Flip-up header - Overview 3-4
Preparing for road transport - Lifting the rigid header 3-5
Preparing for road transport - Lifting the flip-up header 3-7

4 WORKING OPERATIONS

GENERAL INFORMATION

Attaching the header 4-1
Attachments/Headers - Operating 4-3
Stalk rolls 4-6
Deck plates 4-7
Gathering chain assembly 4-8
Auger 4-10
Auger cover 4-11
Stalk chopper 4-12
Tall corn attachment 4-13
Auger divider 4-14
Row unit angle 4-15
Automatic lubrication system 4-16

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

5 MAINTENANCE

GENERAL INFORMATION

General maintenance 5-1
General information 5-2
Lubrication decal 5-3

MAINTENANCE CHART

Maintenance chart 5-5

Daily

Chains 5-6
Automatic oiling system 5-7

Every 50 hours

Lubrication points 5-8
Attachments/Headers - Cleaning 5-11

Every 100 hours

Lubrication points 5-12
Stalk roll gearboxes 5-14
Stalk chopper gearboxes 5-15

Every 400 hours

Stalk roll gearboxes 5-16
Stalk chopper gearboxes 5-17

As required

Pivot points 5-18
Gathering chain guide shoe 5-18
Weed knife adjustment 5-19
Stalk chopper blades 5-20
Stalk rolls 5-21
Auger drive chain 5-23
Main drive chain 5-24
Automatic oiling system 5-25

Once per season

Threaded rods 5-26
Stalk roll gearboxes 5-26

STORAGE

Preparation for storage 5-27

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

6 TROUBLESHOOTING
SYMPTOM(S)
Troubleshooting 6-1

7 SPECIFICATIONS
Vehicle dimensions and shipping weight 7-1
Operating speeds 7-5

8 ACCESSORIES
Attachments/Headers - Overview - Optional equipment 8-1

9 FORMS AND DECLARATIONS
Service record 9-1
Delivery report - Owner copy 9-2
Delivery report - Dealer copy 9-3

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

Auger divider

⚠ DANGER

Crushing hazard!

1. **Disengage all drives.**
2. **Engage parking brake.**
3. **Lower all attachments to the ground, or raise and engage all safety locks.**
4. **Shut off engine.**
5. **Remove key from key switch.**
6. **Switch off battery.**
7. **Wait for all machine movement to stop.**

Failure to comply will result in death or serious injury.

D8131A

⚠ CAUTION

Escaping fluid!

Hydraulic fluid or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury. To prevent personal injury: Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and all components are in good condition. Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. If injured by leaking fluid, see your doctor immediately.

Failure to comply could result in minor or moderate injury.

C3104A


The hydraulic auger dividers are used with down crop to keep the crop from falling off the end of the dividers and moving towards the center of the corn header.

The hydraulic auger dividers are hydraulically driven and operated from the combine.

NOTE: *The corn headers are equipped with standard hydraulic tubes for the auger divider attachment.*

The auger divider on the left-hand side rotates clockwise, and the auger dividers on the right-hand side rotates counter-clockwise.

NOTE: *Make sure the auger dividers rotate towards the center of the corn header. If the auger dividers are rotating in the incorrect direction, the hydraulic hoses may be connected backwards.*

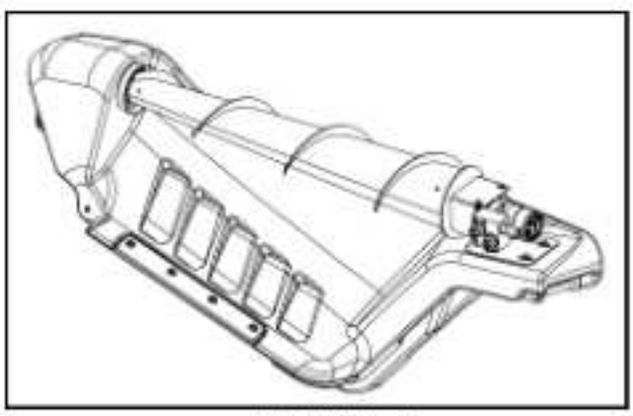

NH613GH3032AA 1


MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

Every 100 hours

Lubrication points

Grease the right-hand and left-hand folding frame pivot pin.


NOTE: *Applies to folding corn headers only.*

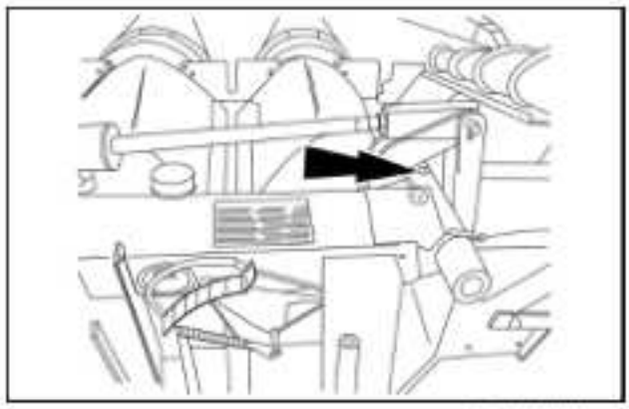

1


Grease the right-hand and left-hand hexagonal shaft quick auger couplers.

NOTE: *Applies to folding corn headers only.*

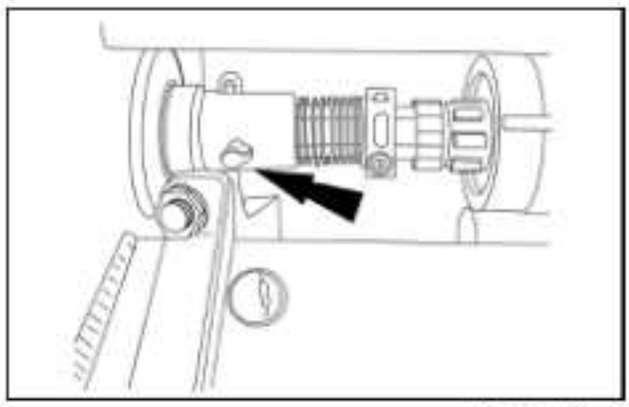

2

Grease the folding corn header auger couplers.

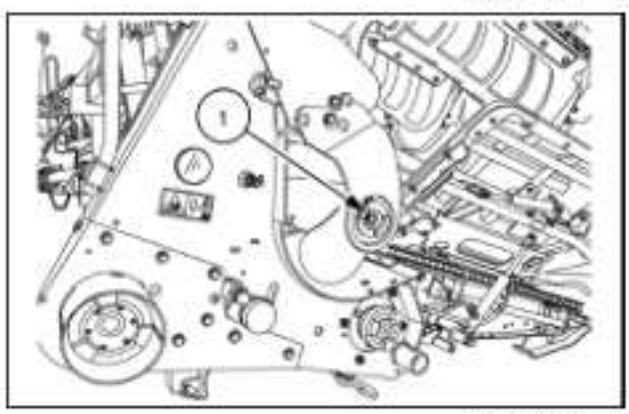

3

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

Dimensions

Header Model	Number of header rows	Dimension (D) (closed header) mm (in)	Dimension (E) mm (in)	Inter-row spacing mm (in)	Outer dimensions mm (in)	Outer dimensions (F) (closed header) mm (in)
4408F – 30	8	2047 mm (81 in)	3280 mm (129 in)	750 mm (30 in)	6394 mm (252 in)	3498 mm (138 in)
4412F - 30	12	2100 mm (83 in)	3027 mm (119 in)	762 mm (30 in)	6390 mm (252 in)	3300 mm (130 in)

Model	Number of Rows	Row Spacing		Frame Type	Weight without choppers		Weight with choppers	
		Inches	cm		LBS	KG	LBS	KG
4408F – 30	8	30	76.2	Folding	6726	3051	7390	3352
4412F - 30	12	30	76.2	Folding	9686	4393	10418	4726

NOTE: *If corn head is equipped with hydraulic auger dividers, add* ***68.0 kg*** *(****150.0 lb****). Additional weight is added when a dust screen in installed.*

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >


WARNING
Stand clear from the wing while it is unfolding. Failure to comply could result in death or serious injury.

Quantity: 2
47404450




47404450 32

(10) Right-hand side in between the wing

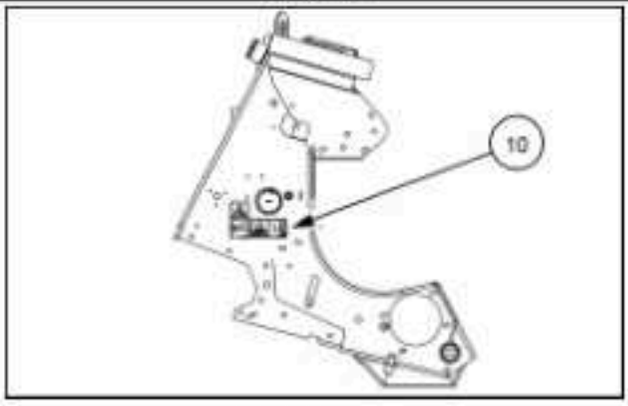

NHL14GH0018AA 33

(10) Left-hand side in between the wing

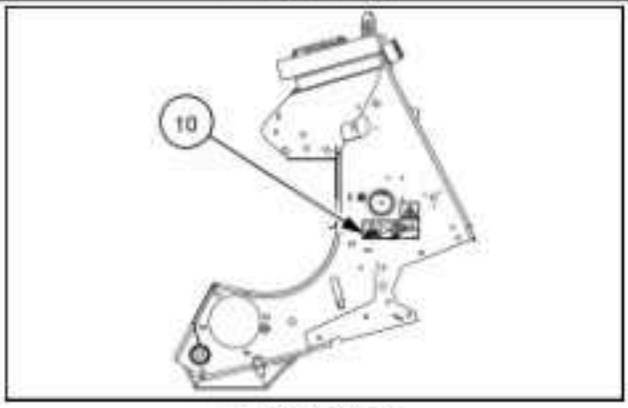


NHL14GH0018AA 34

WARNING
Knife tip path
Keep hands and feet away.
Failure to comply could result in death or serious injury.
Quantity: 1
84586897




84586897 35

(11) On the far left-hand side chopper guard

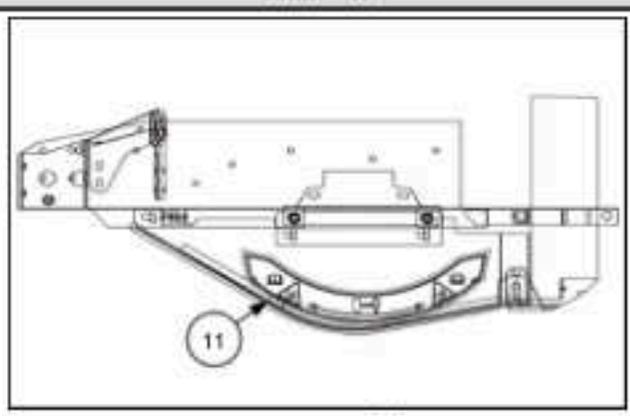

NHL13GH0026AA 36

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >

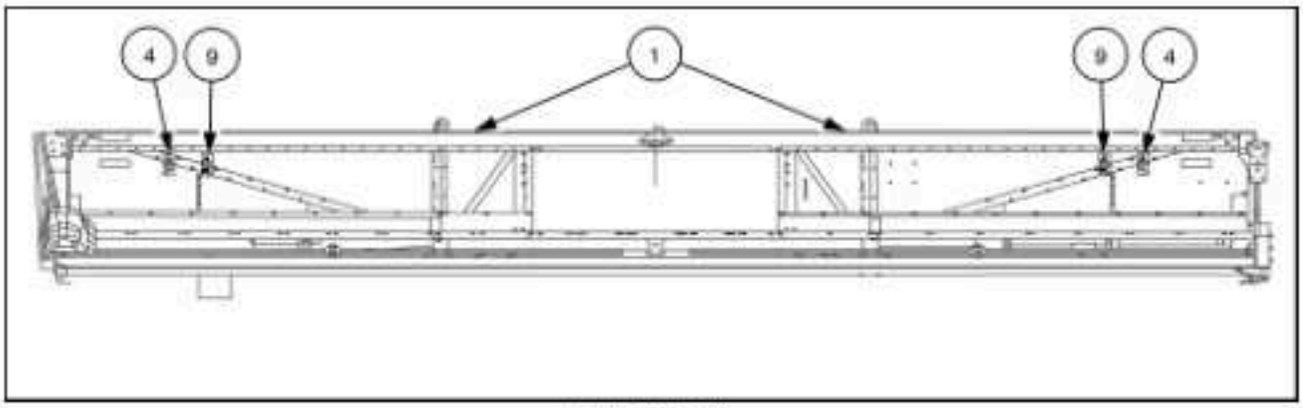

NHL14GH03258EA 3

Front

WARNING

Overhead lifting hazard.

Lift and handle heavy components using lifting equipment with appropriate lifting capacity.

Ensure that units are supported by suitable slings and hooks.

Ensure that no persons or pets are in the vicinity of the load being lifted

Failure to comply could result in death or serious injury.


Quantity: 2

84593097




84593097 4

(1) Left-Hand (LH) side of the feeder house opening top beam.

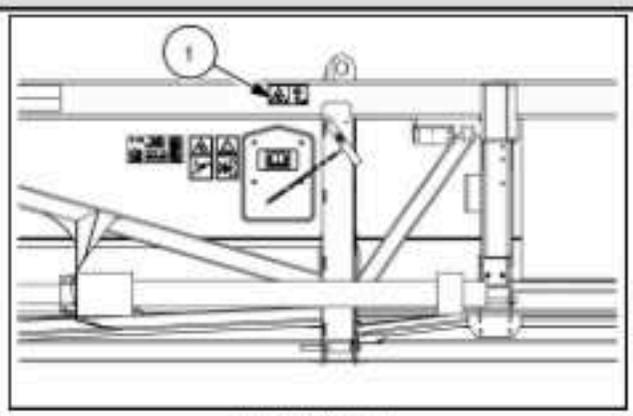

NHL14GH03031AA 5

(1) Right-Hand (RH) side of the feeder house opening top beam.

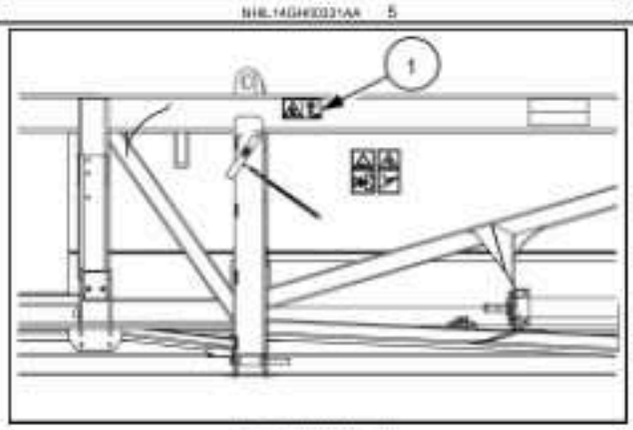

NHL14GH03032AA 6

MidWestTech | Case 4206, 4208, 4212, 4406, 4408, 4412, 4416 Corn Header Operator'... Order the manual at mid-west-tech.com >