# OPERATOR'S MANUAL

## Workmaster™ 50
## Workmaster™ 60
## Workmaster™ 70

Tractor

**Part number 47690424**
1st edition English
May 2015

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publication 47690424

Order the manual at mid-west-tech.com >

# Contents


## 1 GENERAL INFORMATION

Note to the owner ..... 1-1
Electro-magnetic compatibility (EMC) ..... 1-3
Product Identification Number (PIN) ..... 1-4
Machine orientation ..... 1-6
Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment - Product overview ..... 1-7

## 2 SAFETY INFORMATION

Personal safety ..... 2-1
Safety rules ..... 2-2
Proposition 65 ..... 2-9
Ecology and the environment ..... 2-10
Safety signs ..... 2-11
Instructional signs ..... 2-21

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Before operating ..... 3-1

### OPERATOR'S SEAT

Operator's seat ..... 3-1
Seat belt ..... 3-2

### FORWARD CONTROLS

Instrument cluster - Localization overview ..... 3-3
Hand controls and switches ..... 3-8
Clutch pedal ..... 3-11
Brake pedals - Control identification ..... 3-12
Transmission - Control identification ..... 3-13
Foot throttle control - Control identification ..... 3-14

### LEFT-HAND SIDE CONTROLS

Transmission - Control identification ..... 3-15
Four-Wheel Drive (4WD) ..... 3-16
Power Take-Off (PTO) - Control identification ..... 3-17

### RIGHT-HAND SIDE CONTROLS

Parking brake ..... 3-18
Differential lock pedal ..... 3-19
Transmission - Control identification ..... 3-20

### DISPLAY SETTINGS

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program ..... 3-21


MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Adjusting the dashboard/display brightness ..... 3-22
Activating/deactivating buzzer ..... 3-24
Programming maintenance work ..... 3-25
Resetting the oil change counter ..... 3-27
Viewing error codes ..... 3-28

4 OPERATING INSTRUCTIONS

STARTING THE UNIT
Starting the tractor ..... 4-1

STOPPING THE UNIT
Shut off the engine ..... 4-6

MOVING THE UNIT
Roll Over Protective Structure (ROPS) frame - Basic instructions ..... 4-6

5 TRANSPORT OPERATIONS

ROAD TRANSPORT
Towing attachments ..... 5-1

RECOVERY TRANSPORT
Towing the tractor ..... 5-2

6 WORKING OPERATIONS

GENERAL INFORMATION
Field operation ..... 6-1

POWER TAKE OFF (PTO)
Two-speed rear Power Take-Off (PTO) - Grouped Safety Message ..... 6-1
Attaching Power-Take Off (PTO) driven equipment ..... 6-2
Power Take Off (PTO) ..... 6-3

THREE POINT LINKAGE
Three-point linkage ..... 6-6
Attaching three-point equipment ..... 6-6
Detaching three-point equipment ..... 6-8
Lift rods, lower links and top link ..... 6-9

HYDRAULIC SYSTEM
Hydraulic systems - Operating ..... 6-11

WHEEL TRACK ADJUSTMENT
Wheel tread settings ..... 6-14

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

## BALLASTING AND TIRES

Ballasting and tires ..... 6-19

# 7 MAINTENANCE

## GENERAL INFORMATION

Lubrication and maintenance general information ..... 7-1
Refueling the tractor ..... 7-3
Fuel saving tips for optimum performance ..... 7-4
Biodiesel fuel ..... 7-6
Machine shields and guards - Basic instructions ..... 7-7
Consumables ..... 7-8
Protecting the electrical system during charging or welding ..... 7-9
General battery maintenance ..... 7-10

## MAINTENANCE CHART

Frame - Maintenance chart ..... 7-11

### Every 10 hours of operation or daily

Engine oil level ..... 7-13
Engine cooling system ..... 7-13
Steering oil reservoir level ..... 7-14

### After the first 50 hours of operation

Clutch pedal free play ..... 7-15
Brake pedal free play ..... 7-15
Wheels and tires ..... 7-15
Hydraulic oil filter ..... 7-15

### Every 50 hours

Clutch pedal free play ..... 7-16
Brake pedal free play ..... 7-16
Wheels and tires ..... 7-17
Transmission oil level or hydraulic oil level ..... 7-17
Front axle differential oil level ..... 7-18
Front wheel hub oil level (4WD) ..... 7-18
Air cleaner ..... 7-19

### Every 150 hours

Battery electrolyte level ..... 7-20

### Every 300 hours

Engine oil and filter ..... 7-20
Engine air cleaner outer element ..... 7-22
Hydraulic oil filter ..... 7-26


MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

# Brake pedals - Control identification


**⚠WARNING**

**Loss of control hazard!**
**One-sided brake force exists if you do not use the brake pedal latch, and if you do not depress the left and right pedals at the same time. ALWAYS use the brake pedal latch when traveling at transport speeds and/or when a trailer with hydraulic or air-applied brakes is attached to the machine.**
**Failure to comply could result in death or serious injury.**

W0275A

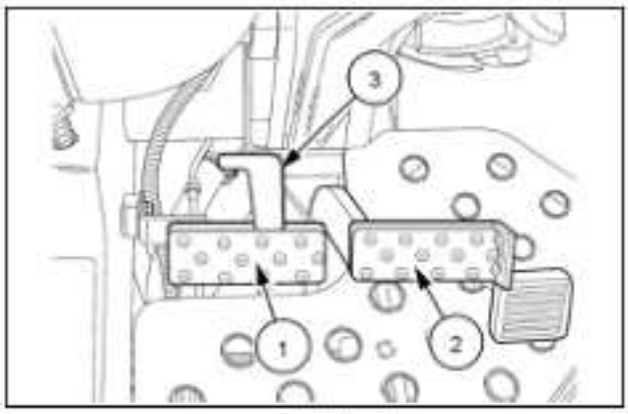


1

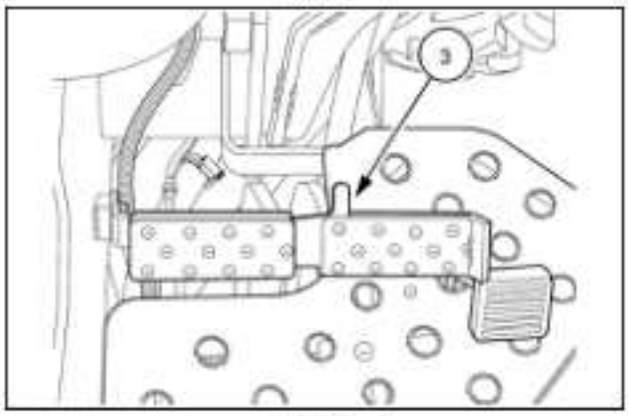


2

## Brake pedals

The left-hand and right-hand foot brakes **(1)** & **(2)**, may be operated independently to assist turning in confined spaces or locked together for normal stopping. When operating in the field the brake pedals may be unlocked. However, due to the proximity of the pedals to one another, it is still possible to apply both brakes together when required. To lock the pedals together, pivot the latch **(3)** into the right-hand brake pedal **(2)** slot.

***NOTE:*** *The brake latch is used to lock both brake pedals together. Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.*




MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

# Hydraulic oil filter

The hydraulic oil filter **(1)** is installed on the right-hand side of the engine.

1. Clean the area around the filter. Remove the filter and discard.
2. Clean the inlet gallery and the face of the filter mounting.

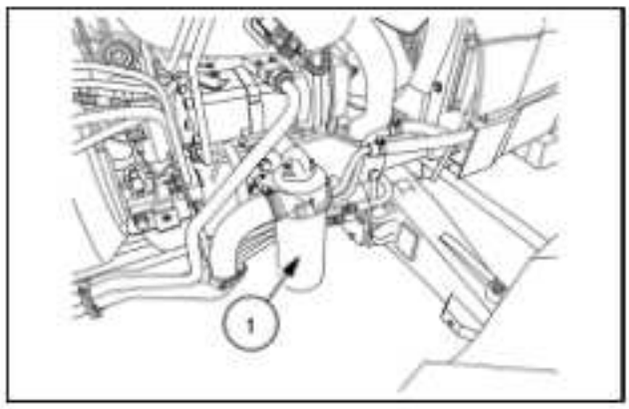


GNIL14TP69S06AA 1

3. Apply clean oil around the rubber seal of the new filter and install on the tractor.
4. Tighten until the faces just meet, then tighten the hydraulic oil filter further 3/4 of a turn. Do not over tighten.



MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

**2WD/4WD Dimension**

| Dimension | | | | |
|---|---|---|---|---|
| A | Overall Width | 1690.0 mm (66.5 in) | 1714.0 mm (67.5 in) | |
| B | Under front axle | 495.0 mm (19.5 in) | | 405.0 mm (15.9 in) |
| C | Front Standard Track Setting | 1385.0 mm (54.5 in) | | 1322.0 mm (52.0 in) |
| D | Rear Standard Track Setting | 1336.0 mm (52.6 in) | | |
| E | To Top of Exhaust | 2300.0 mm (90.6 in) | 2317.0 mm (91.2 in) | |
| F | Less Cab (top of seat/ROPS) | 2450.0 mm (96.5 in) | 2478.0 mm (97.6 in) | |
| G | Under Standard Drawbar | 429.0 mm (16.9 in) | 456.0 mm (18.0 in) | |
| H | Weight carrier | 285.0 mm (11.2 in) | | 175.0 mm (6.9 in) |
| | Front weights | 500.0 mm (19.7 in) | | 389.0 mm (15.3 in) |
| J | Wheel base | 1970.0 mm (77.6 in) | | 1960.0 mm (77.2 in) |
| K | Overall Length | 3290.0 mm (129.5 in) | | 3404.0 mm (134.0 in) |
| L | Rear Axle to top of ROPS | 1795.0 mm (70.7 in) | | |
| M | Drawbar to Rear Axle | 226.0 mm (8.9 in) | | |
| N | Ground to Top of ROPS when Folded | 1927.0 mm (75.9 in) | 1957.0 mm (77.0 in) | |

## Tractor total weight

| Model | 2WD | 4WD |
|---|---|---|
| | 3000.0 kg (6613.9 lb) | |



MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >