DV210
Tier 3
Vibratory Roller

OPERATOR'S MANUAL

Part number 47703698
2nd edition English
June 2014
Replaces part number 84287233

CASE CONSTRUCTION

MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 477036...
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Intended use 1-2
Electro-Magnetic Compatibility (EMC) 1-4
Product identification 1-5
Operator's Manual storage on the machine 1-6
Machine orientation 1-7
Machine components 1-8

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules - California Proposition 65 Warning 2-2
Safety rules 2-3
Safety rules - General 2-9
Safety rules - Basic operating 2-10
General maintenance safety rules 2-12
Safety rules - Fire or explosion prevention 2-13
Safety rules - Battery 2-14
Safety rules - Operator presence system 2-15
Safety rules - Seat belt 2-16
Safety rules - Roll Over Protective Structure (ROPS) 2-17
Safety rules - Air-conditioning system 2-19
Personal Protective Equipment (PPE) 2-20
Do Not Operate hang tag 2-21
Safety rules - Hazardous chemicals 2-22
Safety rules - Utility precautions 2-23
Safety rules - Electrical storm safety 2-24
Safety rules - Mounting and dismounting 2-25
Ecology and the environment 2-26
Hand signals 2-27
Safety signs 2-30

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Proper entry and exit 3-1

OPERATOR'S SEAT

Operator seat 3-2
Control identification 3-4

FORWARD CONTROLS

Front controls 3-6
Left-hand cluster 3-11
Right-hand cluster 3-13

MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >

Steering wheel position 3-15

LEFT-HAND SIDE CONTROLS
Left-hand side controls 3-16

RIGHT-HAND SIDE CONTROLS
Right-hand side controls 3-18

OVERHEAD CONTROLS
Overhead controls 3-20

EXTERIOR CONTROLS
Battery master switch 3-22
Beacon socket 3-22

MULTIFUNCTIONAL DISPLAY CONTROL
Multifunctional display control 3-23
Navigation basics 3-24
Engine fault signaling 3-33
Engine shutdown alarm 3-35

CAB CONTROLS AND ADJUSTMENTS
Control tie rod for heating valve 3-37
Storage pockets 3-37
Anti-glare (sun) shade 3-37
Washer fluid reservoir 3-38
Rearview mirrors 3-38
Cab ventilation air filter 3-38
Armrest on the door 3-39
Hand pump control lever 3-40
Fire extinguisher (recommended) 3-40
First aid box storage compartment 3-41

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT
Inspection of new machines 4-1
Before starting the engine 4-2
Running-in period 4-3

STARTING THE UNIT
Starting the engine 4-4
Starting is blocked 4-6
Assisted starting (Jump-starting) 4-8

STOPPING THE UNIT
Stopping the machine and the engine 4-10

MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >

Emergency stop of the machine 4-12

MOVING THE UNIT
Machine travel and reversing 4-14

PARKING THE UNIT
Machine parking 4-21

5 TRANSPORT OPERATIONS
ROAD TRANSPORT
Traveling on public roads 5-1

PREPARING FOR ROAD TRANSPORT
Loading the machine onto a transport trailer 5-2

SHIPPING TRANSPORT
Machine transport (on a trailer) 5-3

RECOVERY TRANSPORT
Machine towing 5-4

6 WORKING OPERATIONS
GENERAL INFORMATION
Operating the machine at low temperatures 6-1
Operating the machine at high temperatures and humidity 6-2
Operating the machine at high altitudes 6-3
Operating the machine in extremely dusty environment 6-4


COMPACTION
Operating with vibration on compacted and hard materials 6-5
Machine travel and reversing including vibration 6-6
Sprinkling 6-8

7 MAINTENANCE
GENERAL INFORMATION
Tightening torques 7-1
General specification - Biodiesel Fuels 7-4
Lifting and lowering the hood 7-5
Fluids and lubricants 7-7
Engine oil viscosity — Recommended operating temperature range 7-13
Lubrication and maintenance 7-14
Lubrication chart 7-15


MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >

Hand pump control lever

The hand pump control lever **(44)** is used to control the hand pump when lifting or lowering the hood. The control lever inserts into the hand pump.

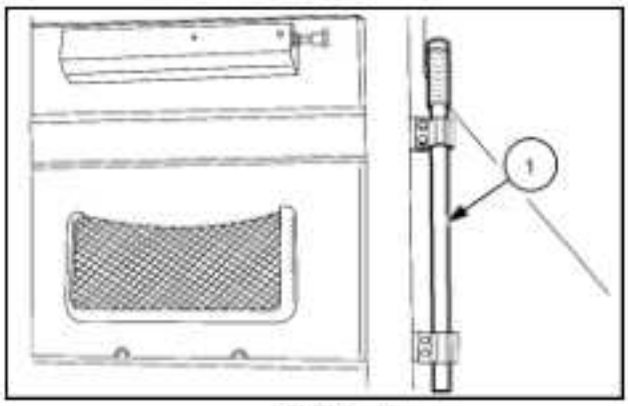

SS12M108 1

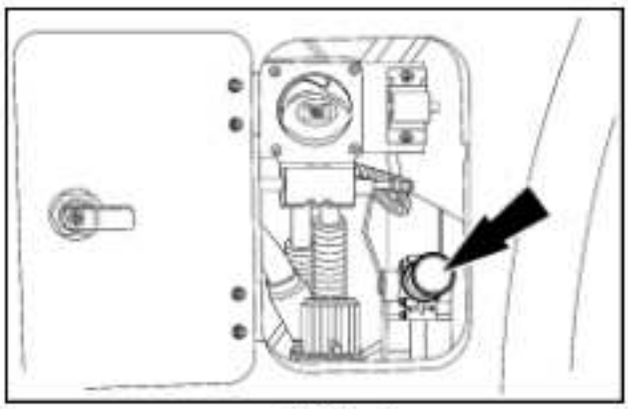


SS12D201 2

Fire extinguisher (recommended)

Place for fire extinguisher holder installation.

NOTICE: *It is recommended that the machine be equipped with a fire extinguisher.*

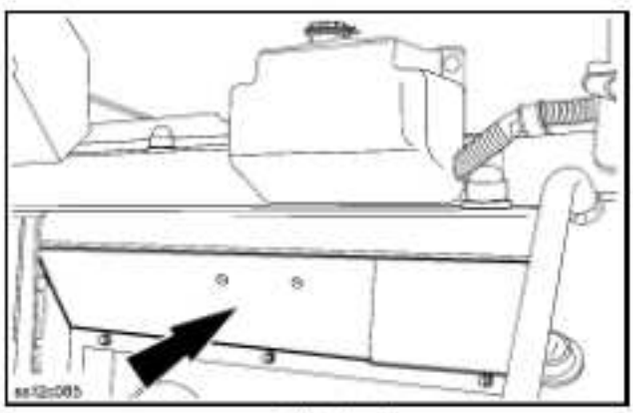

SS12C085 1


MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >

Air filter element

The proper maintenance of the air filter and of the entire intake pipe system, the rubber parts in particular, will ensure maximal protection of the engine against the effects of dust and prolong the life of the element and its efficiency.
The inherent sign of a clogged filter is smoke from the exhaust pipe, higher fuel consumption, power loss, and increased engine temperature.

Principles of correct filter element replacement:


- Slowly pull out the clogged element as carefully as possible.
- Always clean the inner bodies of the cleaner in a way that prevents dust penetrating inside the engine feed pipes.
- Clean the seating faces of the gasket in the cleaner body.
- Inspect for traces of dust traces in the removed element. Any traces would be an indication of its leakage in the filter body.
- Press the gasket on the new element, check whether it is flexible.
- Make sure the gasket is seated properly.
- The air filter has two parts - the main element and the safety element.
  - Replace the main element when signaled by the clogged air filter indicator light.
  - Replace the safety element after three main element replacements.
  - Check that the air filter and intake pipes are properly fastened and free from leaks.
  - Saturation of the air filter element will be signaled by the clogged air filter indicator light.

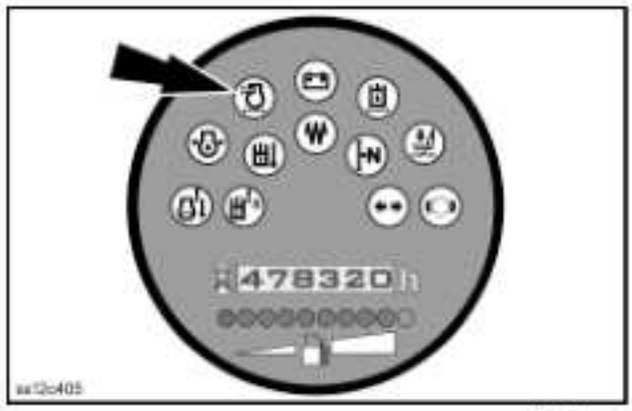

NOTICE: *Never use damaged elements or elements other than those required!*
Do not remove the elements just for checking purposes!
Do not leave the filter opened longer than necessarily required!
Never operate the machine with filter body damaged!

MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >

Dimension

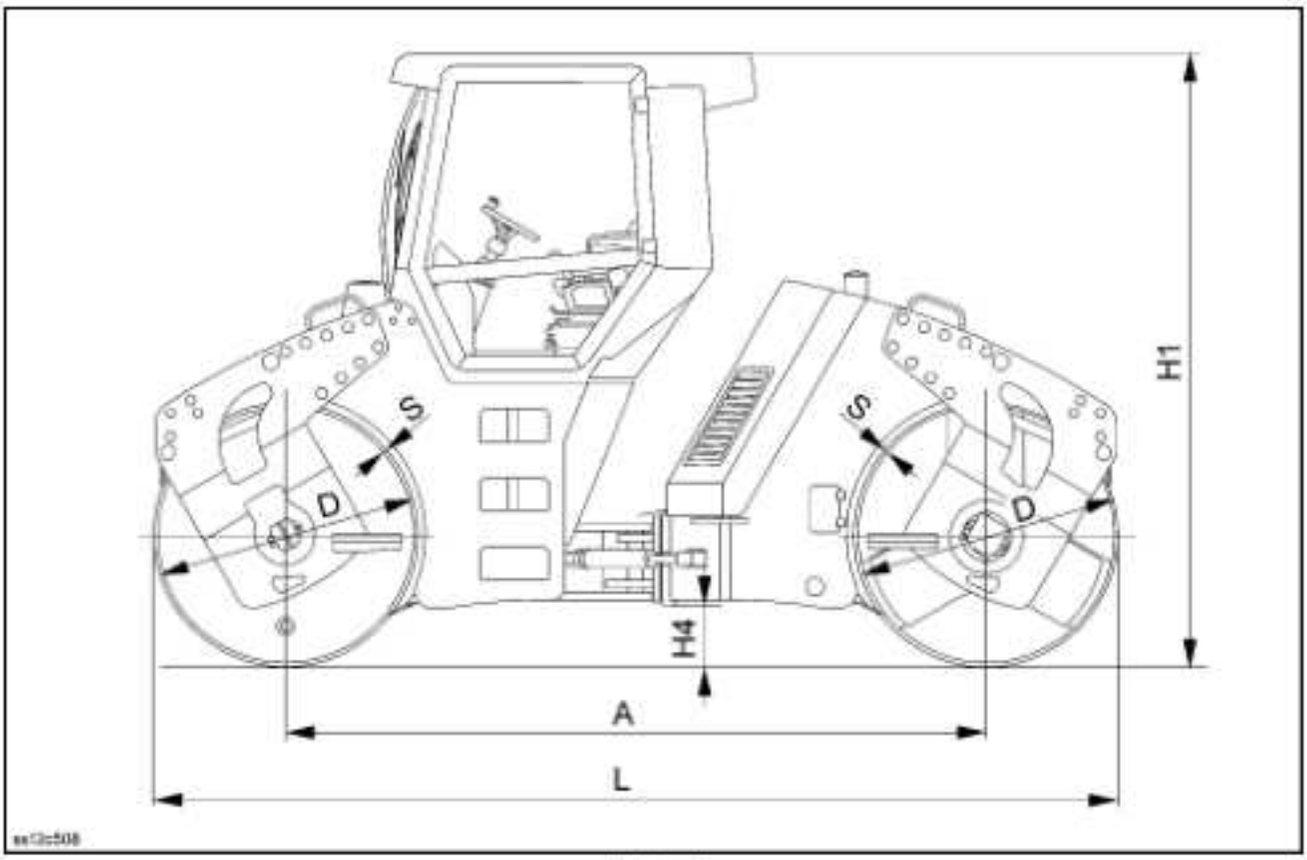

A	D	H1	H4	L	S
3460 mm (136.2 in)	1300 mm (51.2 in)	3020 mm (118.9 in)	310 mm (12.2 in)	4760 mm (187.4 in)	22 mm (0.87 in)

MidWestTech | Case DV210 Tier 3 Vibratory Roller Operator's Manual | Publication 47... Order the manual at mid-west-tech.com >