FARMALL® 50A
FARMALL® 60A
FARMALL® 70A
Tractor

OPERATOR'S MANUAL

Part number 47752713
1st edition English
May 2015

CASE IH AGRICULTURE

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 47752713
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Electro-magnetic compatibility (EMC) 1-3
Product Identification Number (PIN) 1-4
Machine orientation 1-6
Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment - Product overview 1-7

2 SAFETY INFORMATION

Personal safety 2-1
Safety rules 2-2
Proposition 65 2-9
Ecology and the environment 2-10
Safety signs 2-11
Instructional signs 2-21

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Before operating 3-1

OPERATOR'S SEAT

Operator's seat 3-1
Seat belt 3-2

FORWARD CONTROLS

Instrument cluster - Localization overview 3-3
Hand controls and switches 3-8
Clutch pedal 3-11
Brake pedals - Control identification 3-12
Transmission - Control identification 3-13
Foot throttle control - Control identification 3-14

LEFT-HAND SIDE CONTROLS

Transmission - Control identification 3-15
Four-Wheel Drive (4WD) 3-16
Power Take-Off (PTO) - Control identification 3-17

RIGHT-HAND SIDE CONTROLS

Parking brake 3-18
Differential lock pedal 3-19
Transmission - Control identification 3-20

DISPLAY SETTINGS

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program 3-21

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

Adjusting the dashboard/display brightness 3-22
Activating/deactivating buzzer 3-24
Programming maintenance work 3-25
Resetting the oil change counter 3-27
Viewing error codes 3-28

4 OPERATING INSTRUCTIONS

STARTING THE UNIT
Starting the tractor 4-1

STOPPING THE UNIT
Shut off the engine 4-6

MOVING THE UNIT
Roll Over Protective Structure (ROPS) frame - Basic instructions 4-6

5 TRANSPORT OPERATIONS

ROAD TRANSPORT
Towing attachments 5-1

RECOVERY TRANSPORT
Towing the tractor 5-2

6 WORKING OPERATIONS

GENERAL INFORMATION
Field operation 6-1

POWER TAKE OFF (PTO)
Two-speed rear Power Take-Off (PTO) - Grouped Safety Message 6-1
Attaching Power-Take Off (PTO) driven equipment 6-2
Power Take Off (PTO) 6-3

THREE POINT LINKAGE
Three-point linkage 6-6
Attaching three-point equipment 6-6
Detaching three-point equipment 6-8
Lift rods, lower links and top link 6-9

HYDRAULIC SYSTEM
Hydraulic systems - Operating 6-11

WHEEL TRACK ADJUSTMENT
Wheel tread settings 6-14

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

BALLASTING AND TIRES

Ballasting and tires 6-19

7 MAINTENANCE

GENERAL INFORMATION

Lubrication and maintenance general information 7-1
Refueling the tractor 7-3
Fuel saving tips for optimum performance 7-4
Biodiesel fuel 7-6
Machine shields and guards - Basic instructions 7-7
Consumables 7-8
Protecting the electrical system during charging or welding 7-9
General battery maintenance 7-10

MAINTENANCE CHART

Frame - Maintenance chart 7-11

Every 10 hours of operation or daily

Engine oil level 7-13
Engine cooling system 7-13
Steering oil reservoir level 7-14

After the first 50 hours of operation

Clutch pedal free play 7-15
Brake pedal free play 7-15
Wheels and tires 7-15
Hydraulic oil filter 7-15

Every 50 hours

Clutch pedal free play 7-16
Brake pedal free play 7-16
Wheels and tires 7-17
Transmission oil level or hydraulic oil level 7-17
Front axle differential oil level 7-18
Front wheel hub oil level (4WD) 7-18
Air cleaner 7-19

Every 150 hours

Battery electrolyte level 7-20

Every 300 hours

Engine oil and filter 7-20
Engine air cleaner outer element 7-22
Hydraulic oil filter 7-26


MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

Brake pedals - Control identification


⚠WARNING

Loss of control hazard!
One-sided brake force exists if you do not use the brake pedal latch, and if you do not depress the left and right pedals at the same time. ALWAYS use the brake pedal latch when traveling at transport speeds and/or when a trailer with hydraulic or air-applied brakes is attached to the machine.
Failure to comply could result in death or serious injury.

W0275A

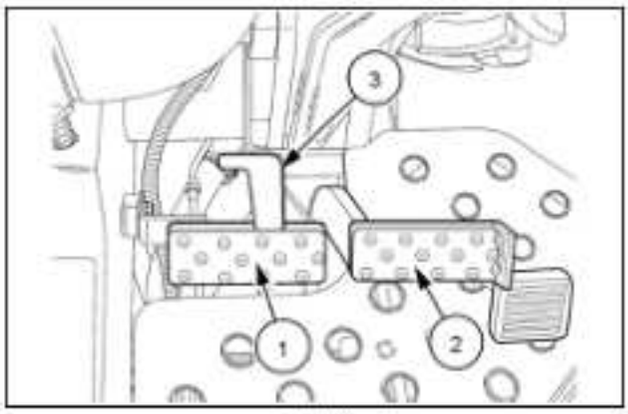

1

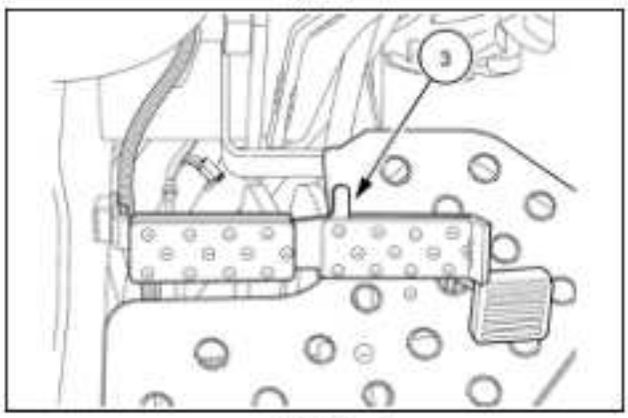

2

Brake pedals

The left-hand and right-hand foot brakes **(1)** & **(2)**, may be operated independently to assist turning in confined spaces or locked together for normal stopping. When operating in the field the brake pedals may be unlocked. However, due to the proximity of the pedals to one another, it is still possible to apply both brakes together when required. To lock the pedals together, pivot the latch **(3)** into the right-hand brake pedal **(2)** slot.


NOTE: *The brake latch is used to lock both brake pedals together. Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.*

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

Hydraulic oil filter

The hydraulic oil filter **(1)** is installed on the right-hand side of the engine.

1. Clean the area around the filter. Remove the filter and discard.
2. Clean the inlet gallery and the face of the filter mounting.

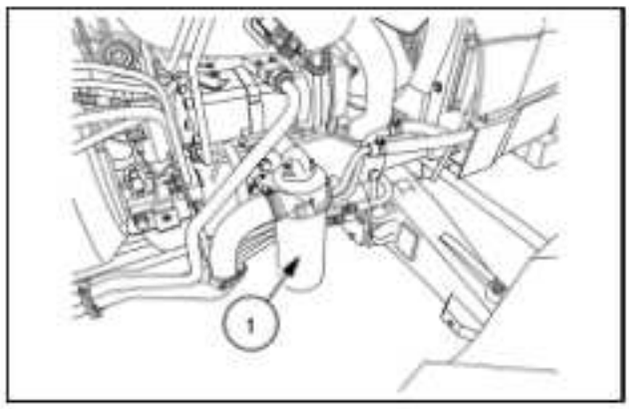

GNIL14TP0030AA 1

3. Apply clean oil around the rubber seal of the new filter and install on the tractor.
4. Tighten until the faces just meet, then tighten the hydraulic oil filter further 3/4 of a turn. Do not over tighten.

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >

2WD/4WD Dimension

Dimension				
A	Overall Width	1690.0 mm (66.5 in)	1714.0 mm (67.5 in)	
B	Under front axle	495.0 mm (19.5 in)		405.0 mm (15.9 in)
C	Front Standard Track Setting	1385.0 mm (54.5 in)		1322.0 mm (52.0 in)
D	Rear Standard Track Setting	1336.0 mm (52.6 in)		
E	To Top of Exhaust	2300.0 mm (90.6 in)	2317.0 mm (91.2 in)	
F	Less Cab (top of seat/ROPS)	2450.0 mm (96.5 in)	2478.0 mm (97.6 in)	
G	Under Standard Drawbar	429.0 mm (16.9 in)	456.0 mm (18.0 in)	
H	Weight carrier	285.0 mm (11.2 in)		175.0 mm (6.9 in)
	Front weights	500.0 mm (19.7 in)		389.0 mm (15.3 in)
J	Wheel base	1970.0 mm (77.6 in)		1960.0 mm (77.2 in)
K	Overall Length	3290.0 mm (129.5 in)		3404.0 mm (134.0 in)
L	Rear Axle to top of ROPS	1795.0 mm (70.7 in)		
M	Drawbar to Rear Axle	226.0 mm (8.9 in)		
N	Ground to Top of ROPS when Folded	1927.0 mm (75.9 in)	1957.0 mm (77.0 in)	

Tractor total weight

Model	2WD	4WD
	3000.0 kg (6613.9 lb)	

MidWestTech | Case Farmall 50A, 60A, 70A Tractor Operator's Manual | Publication 4... Order the manual at mid-west-tech.com >