DV209C
DV210C
Tier 4A
Vibratory Roller

SERVICE MANUAL

Part number 47772910
1st edition English
December 2014

CASE CONSTRUCTION

MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Publication 47772910
Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Machine completion and equipment 05

[05.102] Machine completion 05.1

Engine 10

[10.001] Engine and crankcase 10.1

[10.216] Fuel tanks 10.2

[10.400] Engine cooling system 10.3

Hydrostatic drive 29

[29.218] Pump and motor components 29.1

Hydraulic systems 35

[35.000] Hydraulic systems 35.1

[35.300] Reservoir, cooler, and filters 35.2

[35.752] Hydraulic fan drive cooling system 35.3

[35.353] Hydraulic travel system 35.4

[35.995] Compaction/vibration hydraulic system 35.5

Frames and ballasting 39

[39.100] Frame 39.1

[39.500] Vibratory roller 39.2

Steering 41

[41.101] Steering control 41.1

[41.200] Hydraulic control components 41.2

[41.206] Pump 41.3

[41.216] Cylinders 41.4

Wheels 44

[44.160] Compaction drums 44.1

Cab climate control 50

MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Pub... Order the manual at mid-west-tech.com >

[50.100] Heating 50.1

Electrical systems 55

[55.100] Harnesses and connectors 55.1

[55.301] Alternator 55.2

[55.302] Battery 55.3

[55.512] Cab controls 55.4

[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system 55.5

[55.408] Warning indicators, alarms, and instruments 55.6

Platform, cab, bodywork, and decals 90

[90.150] Cab 90.1

MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Pub... Order the manual at mid-west-tech.com >

Wiring harnesses - Electrical schematic sheet 17 SH-17 LIGHTING SYSTEM


MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Publication 47772910

Order the manual at mid-west-tech.com >

Battery - General specification

The machine is equipped with two batteries connected in series. The technical specifications of the batteries are as follows:

Battery Specification	
Voltage	**12 V**
Capacity	**55 A·h**

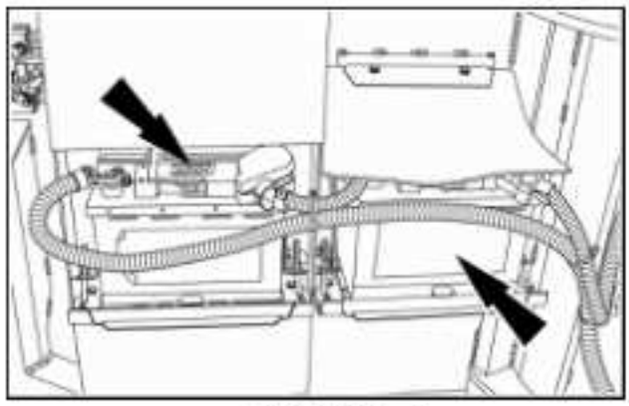

RAIL14C0M0782AA 1

Connection and disconnection


When disconnecting, always disconnect the negative terminal first.

When connecting the battery, always connect the positive terminal first.

Apply **PETROLEUM JELLY** on the terminals to avoid corrosion.


MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Pub... Order the manual at mid-west-tech.com >

12. Remove the cover **(2)**.

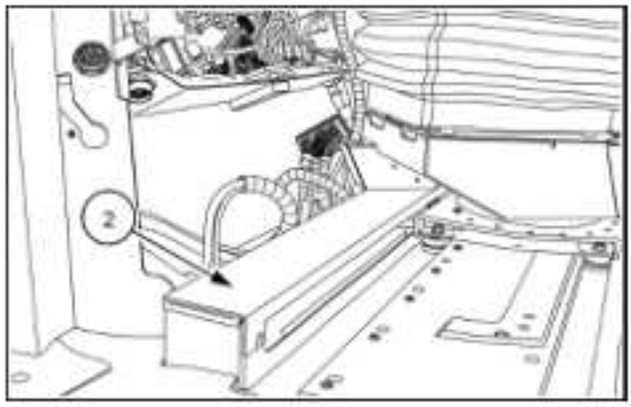


RAIL14CDM07124AA 9

13. Remove the bolts **(3)**.
14. Remove the bracket **(4)**.

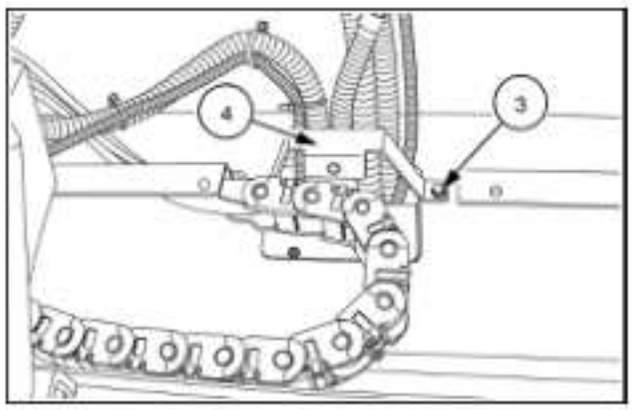


RAIL14CDM07124AA 10

15. Remove the end of the cable drag chain **(5)** from the bracket.

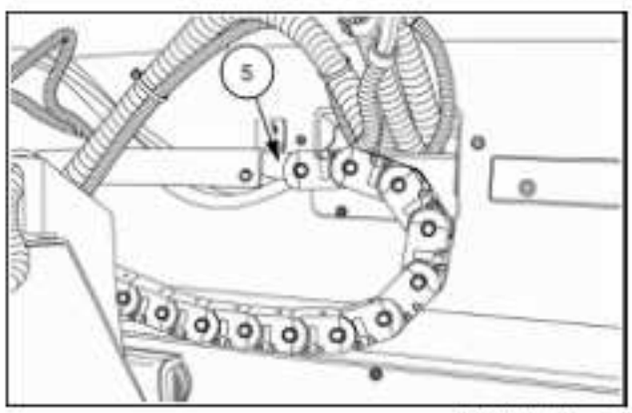


RAIL14CDM07114AA 11

16. Remove the bolts **(6)**.
17. Remove the bracket **(7)**.

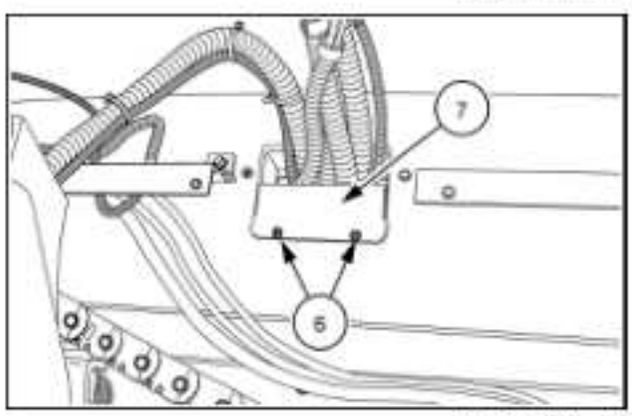

RAIL14CDM07115AA 12

MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Pub... Order the manual at mid-west-tech.com >

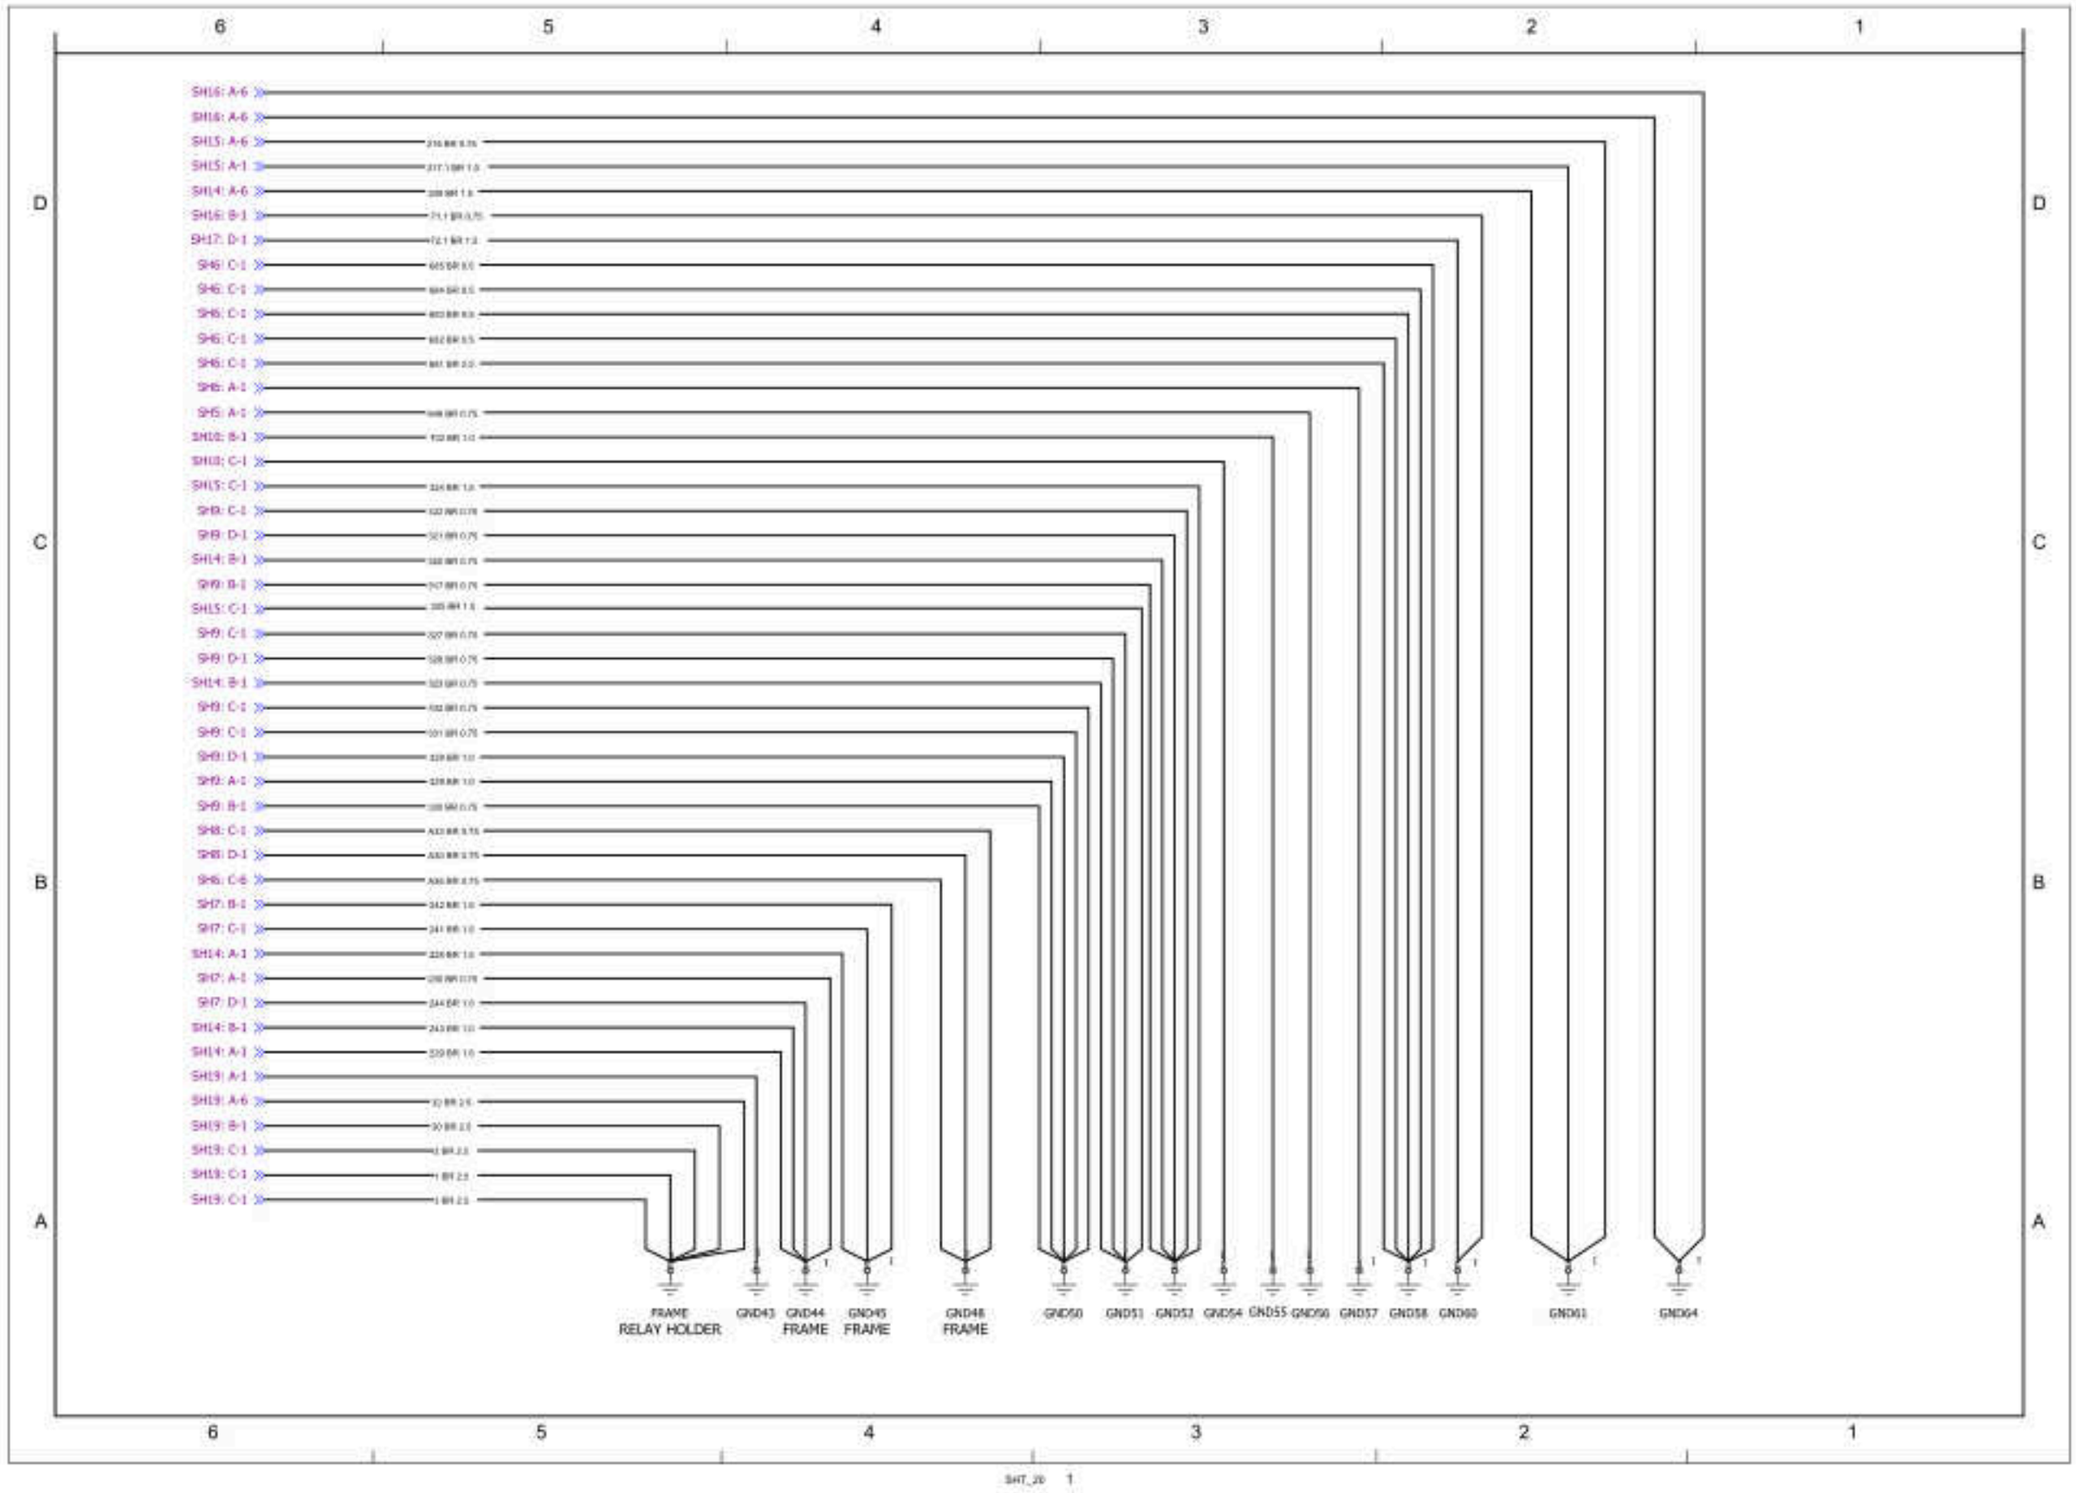

MidWestTech | Case DV209C, DV110C, Tier 4A Vibratory Roller Service Manual | Publication 47772910
Order the manual at mid-west-tech.com >