Farmall® 90C
Farmall® 100C
Farmall® 110C
Farmall® 120C
Tractor

OPERATOR'S MANUAL

Part number 47945456
3rd edition English
January 2016
Replaces part number 47830604

CASE IH AGRICULTURE

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Publication 47945456
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
Intended use 1-3
Proposition 65 1-5
Electro-Magnetic Compatibility (EMC) 1-5
Manual scope and required training level 1-6
Metric and imperial units abbreviations 1-7
Identification plates 1-9
Operator's manual storage on the machine 1-16
Machine orientation 1-17
Selective Catalytic Reduction (SCR) system 1-18

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules - General information 2-2
Safety rules – Maintenance 2-2
Safety rules - Wheels and tires 2-3
Safety rules – Explosions and fires 2-4
Safety rules – Battery 2-4
Safety rules - Passenger seat 2-5
Safety rules - Power Take-Off (PTO) 2-5
Safety rules - Seat belts 2-5
Safety rules - Operator protective structure 2-5
Safety rules - HVAC system 2-7
Safety rules - Personal Protective Equipment (PPE) 2-7
Safety rules - "Do not use" sign 2-8
Safety rules - Hazardous chemicals 2-8
Safety rules - Near utilities 2-8
Safety rules - In the event of electrical storms 2-9
Safety rules – Mounting and dismounting the machine 2-9
Safety rules - Lifting and overhead loads 2-9
Safety rules - Front end loader 2-10
Ecology and the environment 2-11
Towing the tractor for recovery 2-12
Tractor jacking points 2-13
Burn prevention 2-14
Safety signs 2-15

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Getting in and out of the machine 3-1
Getting to know the internal parts of the cab 3-2

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

Operator's seat

Mechanically-adjusted operator seat - Adjust 3-5
Pneumatically-adjusted operator seat - Adjust 3-6
Seat belt 3-8

Instructional seat

Instructional seat - Localization overview 3-9

Forward controls

Instrument cluster 3-10
Selective Catalytic Reduction (SCR) - Overview 3-15
Front controls 3-24

Left-hand side controls

Cabless version 3-27
Version with cab 3-27
Left side post controls 3-28
Hand brake lever - Operating (If fitted) 3-29

Right-hand side controls

Cabless version 3-30
Version with cab 3-31
Version with cab 3-32
Park lock 3-33
Right side post controls 3-34
Heating, ventilation or air-conditioning control 3-35

Exterior controls

Rear fender controls 3-37
Hydraulic lift 3-38
Trailer electrical socket 3-39

Display

Programmable display 3-40
Adjusting the dashboard/display brightness 3-41
Calibrating speed 3-43
Setting the implement width 3-45
Programming maintenance work 3-46
Activating/deactivating buzzer 3-48
Setting units of measurement 3-49
Viewing error codes 3-50

Warning and advisory symbols

Display warnings overview 3-51

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

4 OPERATING INSTRUCTIONS

Commissioning the unit

Basic operating safety rules 4-1
Refueling 4-2
Filling the Diesel Exhaust Fluid (DEF)/AdBlue® tank 4-3

Starting the unit

Engine operation 4-4

Stopping the unit

Stopping the engine 4-6

Moving the unit

Machine movement start-up 4-7
Operating in cold temperatures 4-8
Low idle speed management 4-9
Installation of the front loader 4-10
Removing the loader 4-11
Installing the bucket 4-12
Removing the bucket 4-14

5 TRANSPORT OPERATIONS

Road transport

Transporting the machine 5-1
Road transport of the tractor with loader installed 5-2

Recovery transport

Towing the tractor 5-3

6 WORKING OPERATIONS

Transmission

Transmission operation 6-1

Four-Wheel Drive (4WD)

Four-wheel drive with mechanical engagement 6-5
Four-wheel drive with electro-hydraulic control 6-7

Differential lock system


Mechanical differential lock 6-8
Electrohydraulic differential lock 6-9

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

Front controls

Central display navigation buttons


The menus of the central liquid crystal display on the instrument panel are navigated through with the rocker switches **(1)** and **(2)**.

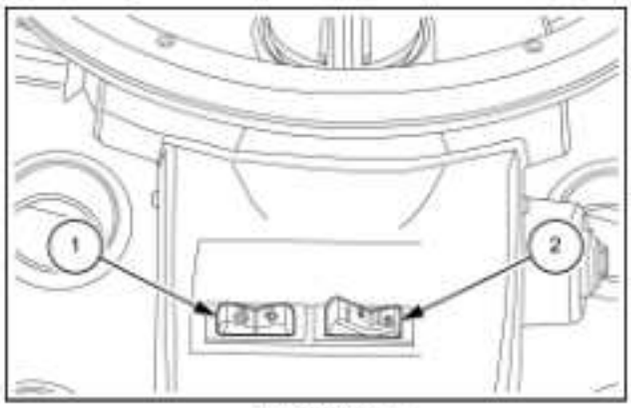

DCUTLBRNE030853A 1


Shuttle lever Synchro Shuttle™ or Power shuttle

The shuttle lever **(1)**, located to the left of the steering wheel, is used to select forward or reverse when a gear ratio is engaged.

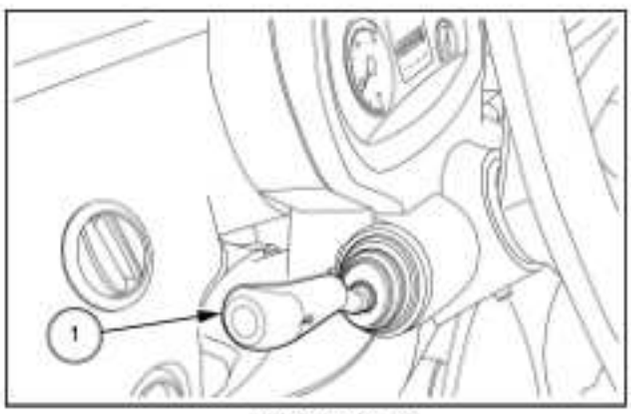

DCUTLMD1030853A 2

(1) Start switch

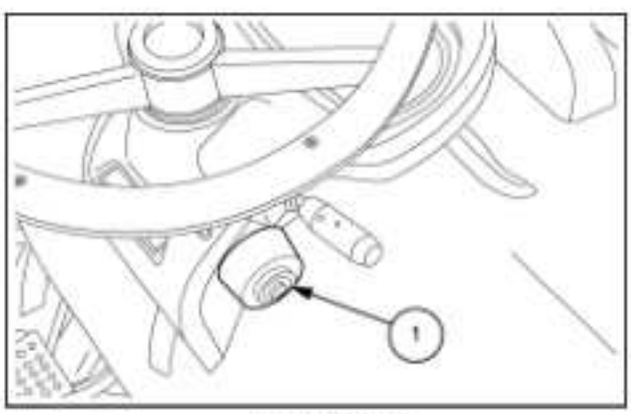


DCUTLBRNE030853A 3

(1) Hazard warning light switch.
Press switch **(1)** on the red zone to turn on all the direction indicators at the same time; when pressed, the switch also flashes. The indicator will flash at the same time as the turn signals and also the indicator lights on the instrument cluster.

A. Without cab (ROPS)

B. With cab

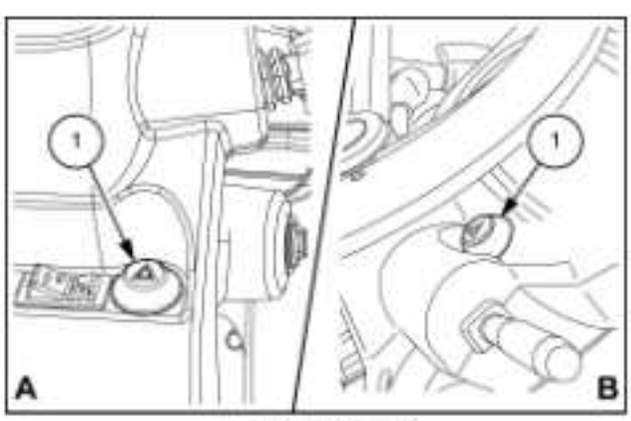


DCUTLBRNE030853A 4

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

Every 50 hours


Steering cylinder - Grease – (2WD)

1. Using a grease gun, pump **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** grease into the grease fitting **(1)**.

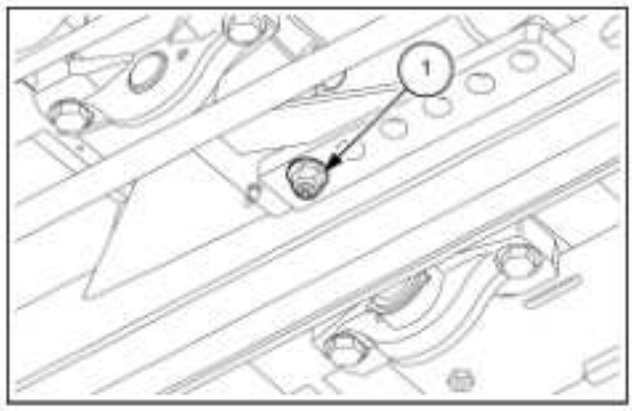


Front axle - Grease – Pivot pin (2WD)

Using a grease gun, pump **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** grease into the grease fitting **(1)**.

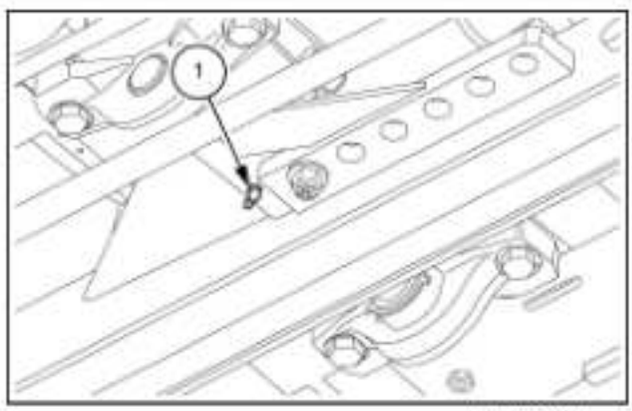

Steering knuckle - Grease – (2WD)


Using a grease gun, pump **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** grease into the grease fittings **(1)** shown (one for each side).

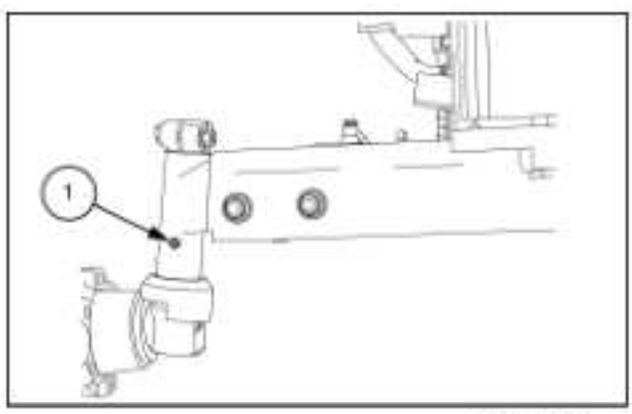

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

9 - SPECIFICATIONS

Dimensions and weights

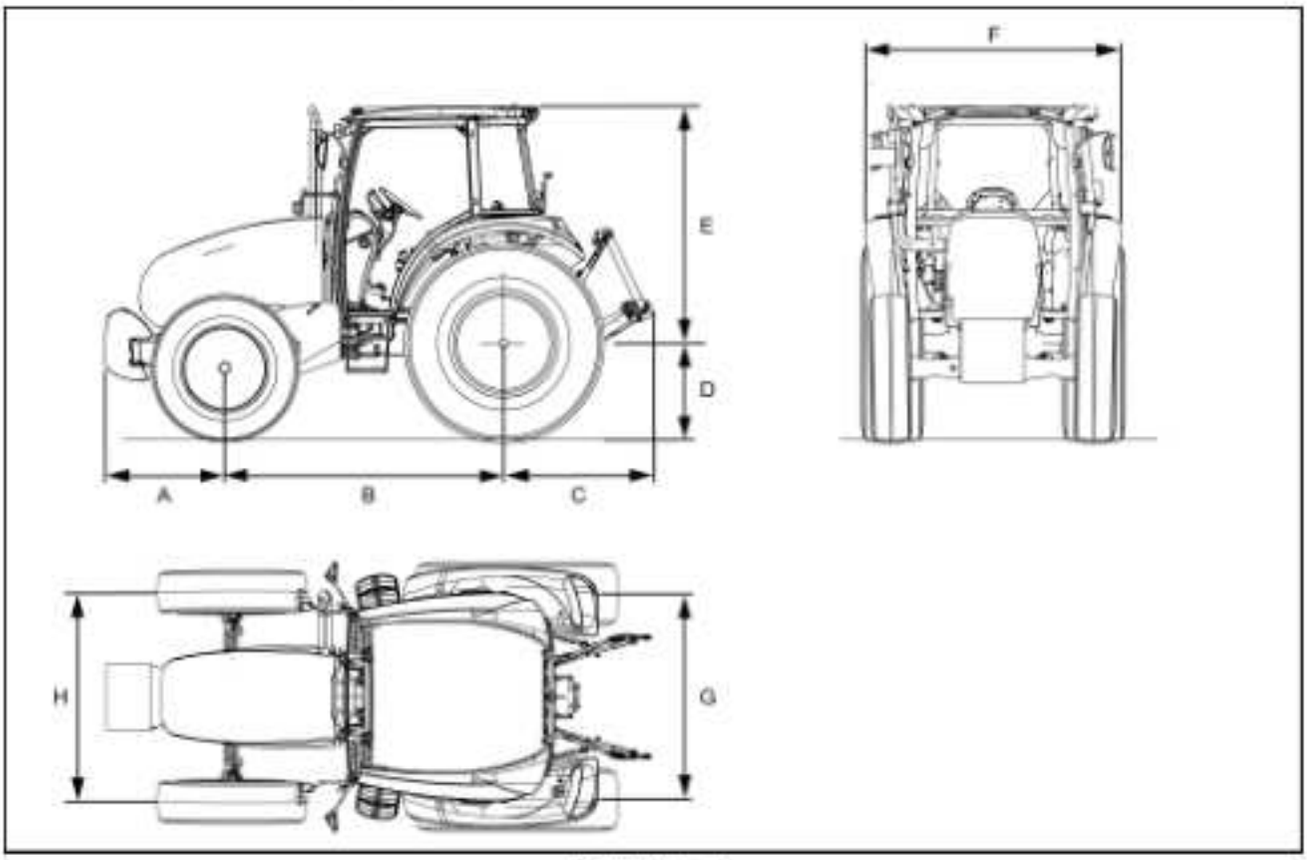

DCUTLINE1T0015BP 1


Reference	Size
A	933 mm (36.73 in)
B • 2WD	2343 mm (92.24 in)
B • 4WD	2285 mm (89.96 in)
C	831 - 881 mm (32.72 - 34.69 in)
D	Tire index radius
E	1819 mm (71.61 in)
F	1923 mm (75.71 in)
G	1337 - 1937 mm (52.64 - 76.26 in)
H • 2WD	1429 - 2029 mm (56.26 - 79.88 in)
H • 4WD	1235 - 1947 mm (48.62 - 76.65 in)

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

(11) Position: applied to the left rear mudguard.
Part number: 47127564

WARNING
Rotating parts.
Do not operate 540 PTO above rated engine speed.
Operating PTO above rated engine speed may cause failure of certain PTO equipment which may result in personal injury.

Failure to comply could result in death or serious injury.

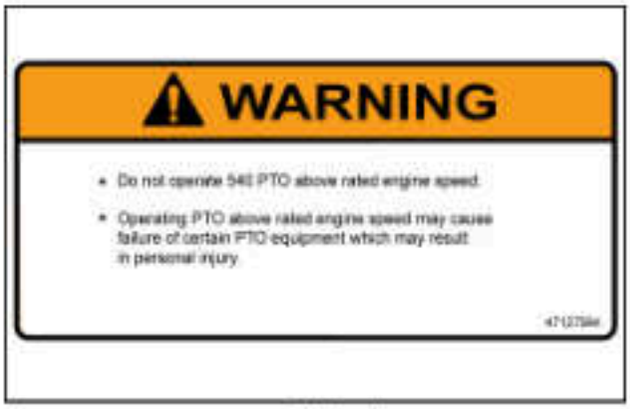

47127564 31

(12) Position: applied to the right rear mudguard.
Part number: 87576315

WARNING
Rotating parts.
Pull only from drawbar. Pulling from any other point can cause rear overturn.

Do not operate with unshielded PTO.


Disengage PTO and stop engine before servicing tractor or implements or attaching and detaching implements.

Position drawbar at 14" from end of PTO shaft to drawbar hole for 540 and 16" for 1000 PTO RPM.

When towing equipment use safety chain.

FAILURE TO FOLLOW ANY OF THE INSTRUCTIONS ABOVE CAN CAUSE SERIOUS INJURY TO THE OPERATOR OR OTHER PERSONS.

Failure to comply could result in death or serious injury.

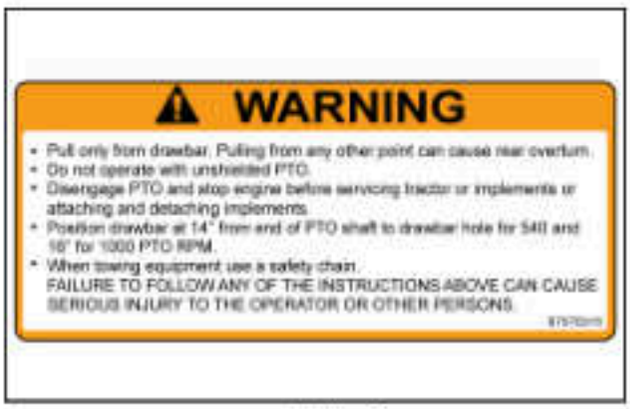

87576315 32

(13) Position: applied to the right of the Roll Over Protective Structure (ROPS).
Part number: 5189886


WARNING
Risk of bodily injury.
CORRECT POSITION FOR ROPS PROTECTION IS FULL UPRIGHT AND WITH THE HINGE LOCK PIN IN THE POSITION AS SHOWN WITH ITS RETENTION PIN SECURED, ANY OTHER POSITION IS NOT CORRECT AND COULD RESULT IN SERIOUS INJURY IN THE EVENT OF AN UPSET OR ROLLOVER.

Failure to comply could result in death or serious injury.



5189886 33

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

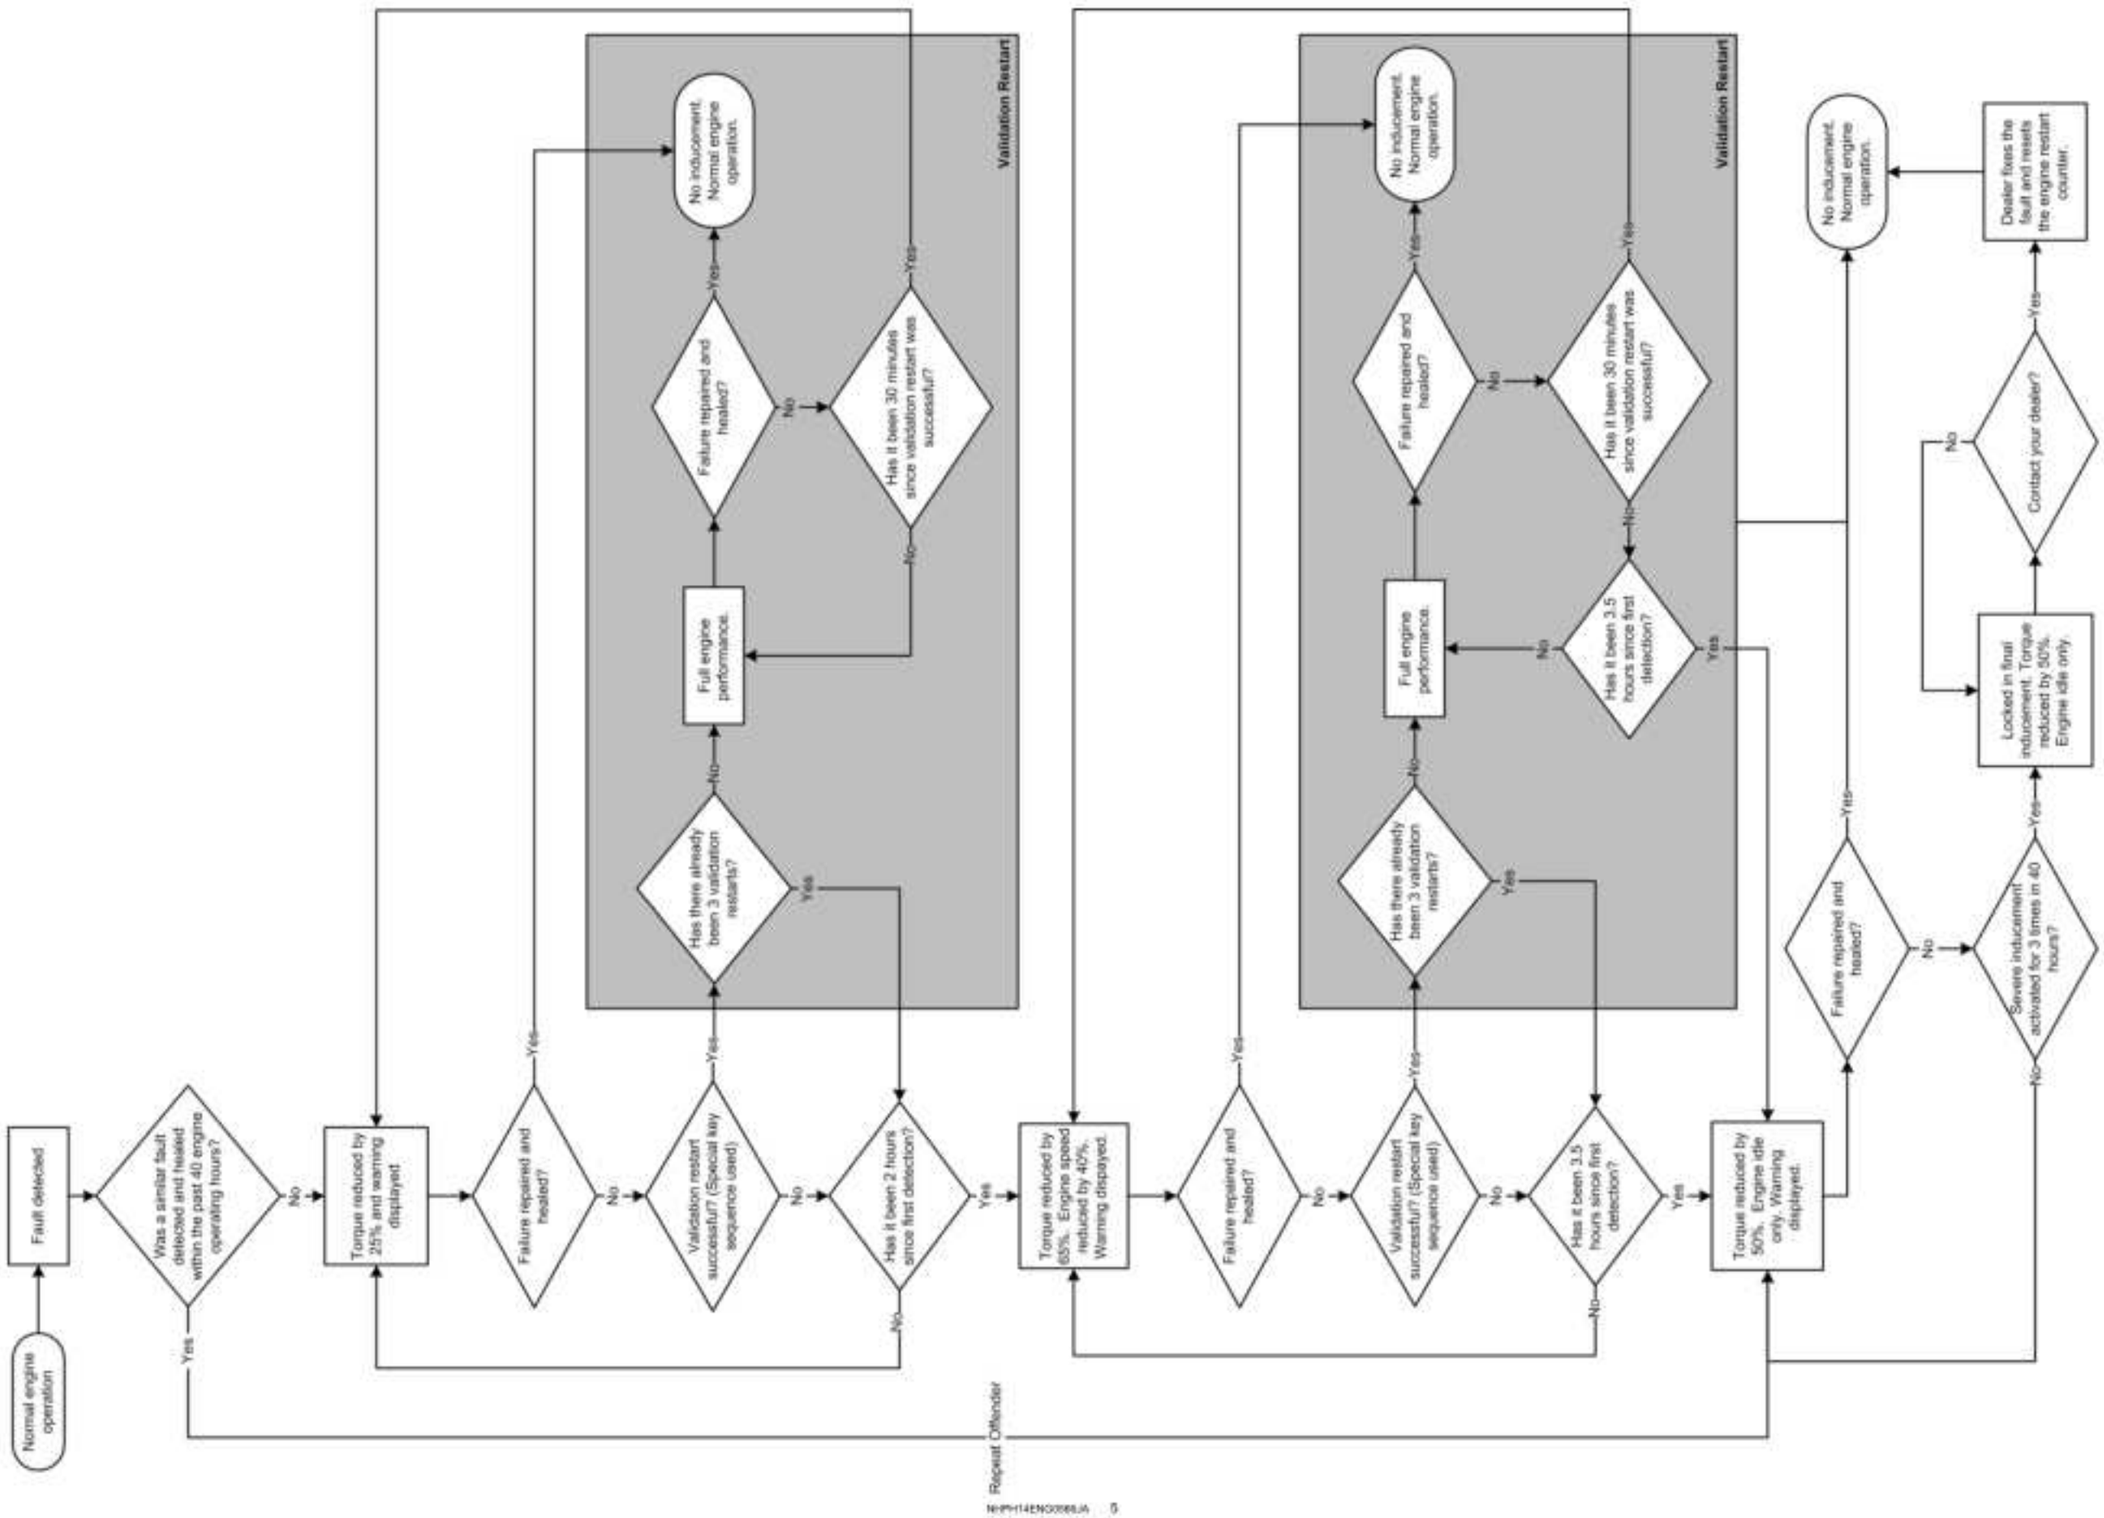

MidWestTech | Case Farmall 90C, 100C, 110C, 120C Tractor Operator's Manual | Publication 47945456

Order the manual at mid-west-tech.com >