Farmall® 65C
Farmall® 75C

Efficent Power - Tractor

PIN ZDAL00012 and above

OPERATOR'S MANUAL

Part number 47955165
5th edition English
January 2016
Replaces part number 47876015

CASE IH AGRICULTURE

Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
Proposition 65 1-3
Electromagnetic interference (EMC) 1-4
International symbols 1-5
Introduction 1-7
Operator's manual storage 1-8
Intended use 1-9
Ecology and the Environment 1-11
Identification plates 1-12

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules - General information 2-2
Safety rules – Maintenance 2-3
Safety rules - Wheels and tires 2-4
Safety rules – Explosions and fires 2-5
Safety rules - Fire extinguisher 2-5
Safety rules – Battery 2-6
Safety rules - Seat belts 2-6
Safety rules - Operator protective structure 2-7
Safety rules - HVAC system 2-9
Safety rules - Personal Protective Equipment (PPE) 2-9
Safety rules - "Do not use" sign 2-9
Safety rules - Hazardous chemicals 2-10
Safety rules - Near utilities 2-10
Safety rules - In the event of electrical storms 2-11
Safety rules – Mounting and dismounting the machine 2-11
Safety rules - Lifting and overhead loads 2-11
Ecology and the environment 2-12
Towing the tractor for recovery 2-13
Tractor jacking points 2-14
Burn prevention 2-15
Fire and explosion prevention 2-16
Mounting and dismounting 2-17
Safety signs 2-18

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Mounting and dismounting 3-1
Getting to know the internal parts of the cab 3-3
Rear-view outside mirrors - Localization overview 3-6
Clock adjustment 3-7

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

OPERATOR'S SEAT

Operator seat 3-8
Air seat 3-9
Seat belt 3-11

INSTRUCTOR'S SEAT

Instructor's seat 3-12

FORWARD CONTROLS

Instrument cluster 3-13
Front controls 3-18
Service brakes 3-21

LEFT-HAND SIDE CONTROLS

Console Left-hand console - Localization overview 3-22
Hand brake lever - Operating (If fitted) 3-22

RIGHT-HAND SIDE CONTROLS

Version with cab 3-23
Cabless version 3-25
Parking brake or parking lock - Operating 3-26
Heating, ventilation or air-conditioning control 3-27

Power sockets

Electrical systems - Localization overview 3-29

Settings and display

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program 3-30
Instrument cluster - Program 3-31
Ground speed calibration 3-33
Programming maintenance work 3-36
Activating/deactivating buzzer 3-38
Setting units of measurement 3-39
Particulate Matter Catalyst 3-40
Resetting the oil change counter 3-45
Viewing error codes 3-46

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules 4-1
Refueling 4-2

STARTING THE UNIT

Starting the engine 4-3

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

STOPPING THE UNIT
Stopping the engine 4-5

MOVING THE UNIT
Machine movement start-up 4-6
Installing the loader 4-6
Removing the loader 4-8
Installing the bucket 4-9
Removing the bucket 4-11

5 TRANSPORT OPERATIONS
ROAD TRANSPORT
Tractor transporting 5-1

RECOVERY TRANSPORT
Towing the tractor 5-2

6 WORKING OPERATIONS
Transmission
Transmission operation 6-1

FOUR WHEEL DRIVE (4WD)
Four-wheel drive with mechanical engagement 6-3
Four-wheel drive with electro-hydraulic control 6-5

DIFFERENTIAL LOCK
Mechanical differential lock 6-6

REAR POWER TAKE-OFF (PTO)
Safety rules 6-7
Attaching Power-Take Off (PTO) driven equipment 6-8
Power take-off speeds 6-9
Power Take Off (PTO) 6-10
Mechanically controlled power take-off 6-11


REAR REMOTE CONTROL VALVE(S)
Remote control valves - Safety rules 6-12
Operation 6-13

REAR HYDRAULIC LIFT
General 6-15
Proportional control lever 6-16

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

Cableless version

Layout of controls for models without a cab (ROPS)

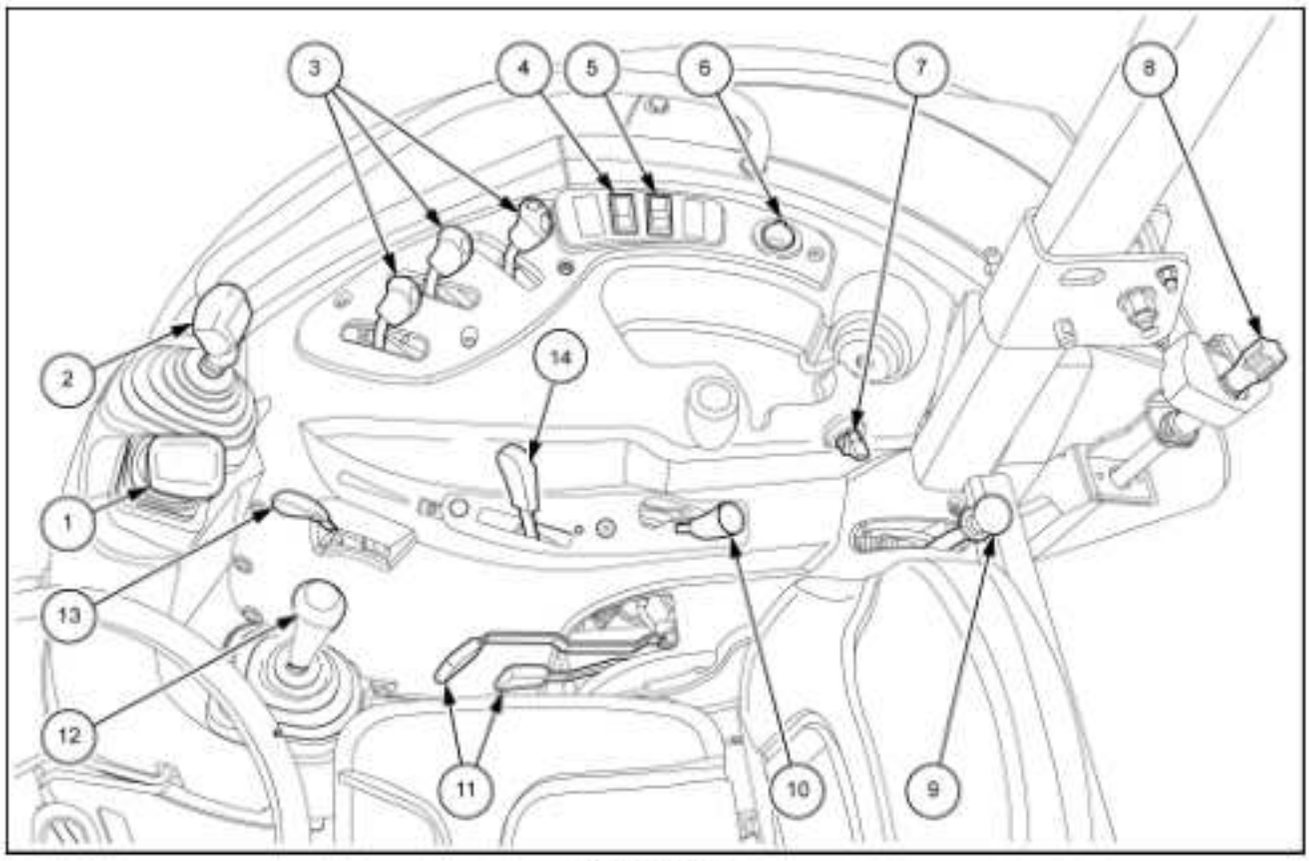

MDL13TR02343FD 1

1. Mid-mount auxiliary control valves joystick (optional).
2. Gear lever.
3. Auxiliary control valve levers.
4. Four−wheel drive engagement selection switch.
5. Front work lights on the hood.
6. Cigar/Cigarette lighter.
7. Single-pole auxiliary 8A socket powered with the key switch in the ON position.
8. Rear lever for operating the hydraulic lift from the ground.
9. Control lever for creeper engagement/disengagement
10. Control lever for PTO engagement/disengagement.
11. Control levers for hydraulic lift.
12. Range selection lever.
13. Hand throttle lever. Adjust the engine speed. Move the hand throttle lever forward to increase the engine speed; pull it backward to decrease the speed.
14. Proportional control handle (where present).

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

Maintenance - Cleaning

1. Cleaning
   - Dry air filter - External cartridge
   - Cab air filters
   - Cab recirculated air filter
   - Auxiliary services oil filter
   - Fuel prefilter

Maintenance - Test

1. Operation
   - Lights and instruments
   - Calibrate transmission clutches
   - Transmission and gear selection
   - Power Take-Off (PTO)
   - Hydraulic system (lift and remote control valve)
   - Joystick
   - Engine including throttle
   - Steering
   - Differential lock engagement and disengagement
   - 4WD engagement and disengagement
   - Brake and brake pedal latching pin
   - Neutral start switches

Maintenance - Grease


1. Greasing
   - All grease fittings

Every 50 hours

Rear three-point hitch linkage - Grease

Using a grease gun, pump **CASE IH AKCELA 251H EP MULTI-PURPOSE GREASE** into the lubricating nipples shown.

NOTE: *Pump grease into the lubricating nipple located under the sleeve (1).*

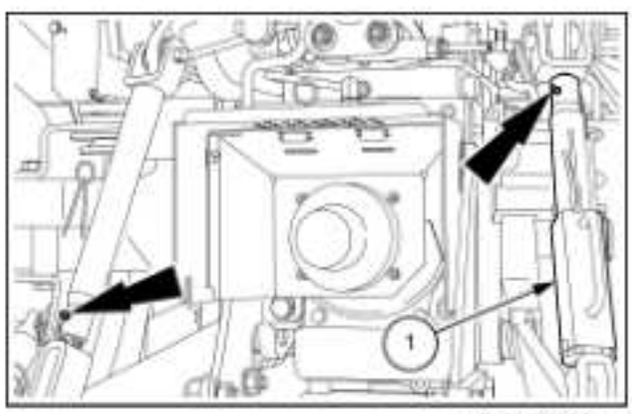

MOIL10TR32334AB 1

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

FRONT BALLAST WEIGHTS	
1 Plate	40 kg (88.18 lb)
Ballast support	60 kg (132 lb)
4 plates	160 kg (353 lb)
6 plates	240 kg (529 lb)
Towing hook	60 kg (132 lb)

REAR BALLASTS	
1 ring	50 kg (110.23 lb)
4 Rings	200 kg (440.92 lb)

WEIGHTS OF TRACTORS WITH ROPS WITHOUT BALLAST	
2WD	2280 kg (5027 lb)
4WD	2500 kg (5512 lb)

WEIGHTS OF TRACTORS WITH CAB WITHOUT BALLAST WEIGHTS	
2WD	2550 kg (5622 lb)
4WD	2830 kg (6239 lb)

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >

(9) Position: affixed to the rear of the right-hand fender.
Part Number: 87576315

WARNING
Rotating parts.
Pull only from drawbar. Pulling from any other point can cause rear overturn.

Do not operate with unshielded PTO.

Disengage PTO and stop engine before servicing tractor or implements or attaching and detaching implements.

Position drawbar at 14" from end of PTO shaft to drawbar hole for 540 and 16" for 1000 PTO RPM.

When towing equipment use safety chain.

FAILURE TO FOLLOW ANY OF THE INSTRUCTIONS ABOVE CAN CAUSE SERIOUS INJURY TO THE OPERATOR OR OTHER PERSONS.

Failure to comply could result in death or serious injury.



87576315 10

(10) Position: affixed to the rear of the left-hand fender.
Part Number: 47127564

WARNING
Rotating parts.
Do not operate 540 PTO above rated engine speed.
Operating PTO above rated engine speed may cause failure of certain PTO equipment which may result in personal injury.

Failure to comply could result in death or serious injury.



47127564 11

(11) Position: affixed at the rear, on the right-hand and left-hand mudguards.
Part Number: 87471644

DANGER
Moving parts.
ENTANGLEMENT / CRUSH HAZARD
DO NOT STAND between tractor and implement or on implement while operating external controls.
Stand clear of all moving parts.

Failure to comply will result in death or serious injury



87471644 12

MidWestTech | Case Farmall 65C, 75C Efficent Power EP Tractor Operator's Manual |... Order the manual at mid-west-tech.com >