ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

Workmaster™ 35
Workmaster™ 40
Tier 4B (final)
Compact Tractor

Workmaster™ 35 ROPS - PIN LSM0W35Rxx0010001 and above
Workmaster™ 40 ROPS - PIN LSM0W40Rxx0010001 and above

Part number 48056596
1st edition English
February 2017

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's Manual... Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Intended use 1-2
Electromagnetic Compatibility (EMC) 1-4
Product Identification Number (PIN) 1-5
Operator's manual storage 1-6
Machine orientation 1-7
Emissions overview 1-8
Proposition 65 1-11

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules 2-2
Do not operate tag 2-9
Roll Over Protective Structure (ROPS) frame - Personal safety 2-10
Ecology and the environment 2-11
Safety signs 2-12
Instructional signs 2-27
Safety features 2-35

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Access to operator's platform 3-1

Operator's seat

Seat belt 3-1
Mechanically - adjusted operator seat 3-2
Roll Over Protective Structure (ROPS) 3-3

Forward controls

Instrument panel 3-5
Engine fault code display 3-9
Hydrostatic transmission - Operate 3-16
Shuttle lever 3-17
Clutch pedal 3-18
Brake pedal 3-19
Foot throttle pedal 3-20
Hand throttle lever 3-21
Horn switch (optional) 3-22
Power Take-Off (PTO) switch 3-23
Key switch 3-24
Differential lock lever - Operating 3-25
Hydrostatic transmission pedal - Operating 3-26
Tilt steering lever - Operating 3-27

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >

Multifunction light switch 3-28
Engine Speed Management (ESM) switch 3-29
Engine Speed Management (ESM) Up/Down switch 3-29
DPF switch 3-30

Left-hand side controls
Transmission range lever 3-31
Park brake 3-32
Four-Wheel Drive(4WD) lever 3-33
Mid Power Take-Off (PTO) (optional) 3-34

Right-hand side controls
Hydraulic Power Lift (HPL) 3-35
Rear remote control valve(s) - optional 3-36
Mid-mount control valve 3-38
Mechanical transmission lever 3-40

Exterior controls
Hood release latch 3-41

4 OPERATING INSTRUCTIONS
Commissioning the unit
Engine break-in procedure 4-1
Diesel Particulate Filter (DPF) regeneration 4-2
Power Take-Off (PTO) operation 4-7
Three-point hitch 4-9
Attaching three-point equipment 4-10
Drawbar - Operating 4-13
Hydraulic lift rocker 4-14
Drop rate control valve 4-15

Starting the unit
Key switch - Operating 4-16
Glow plugs - Cold start aid 4-17
Starting the engine 4-18
Starting the engine with jumper cables 4-23

Stopping the unit
Stopping the engine 4-24
Emergency stopping the engine 4-25
Brakes 4-26

Moving the unit
Steering wheel - Adjust 4-28
Steering - Operation 4-29

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >

Transmission - Warm-up 4-30
Hydrostatic transmission - Operation 4-31
Mechanical transmission external controls - Operation 4-33

Parking the unit
Parking the tractor 4-35

5 TRANSPORT OPERATIONS
Road transport
External lighting 5-1
Turn signal / Hazard lights - Identification 5-2
Turn signal / Hazard lights - Operation 5-3
Road lights - Operation 5-4
Work lights - Operation 5-5
External lighting - Operation (optional) 5-6
Brakes and controls - Driving 5-7

Shipping transport
Transporting by truck or trailer 5-8

Recovery transport
Brakes and controls - Towing 5-8

6 WORKING OPERATIONS
General information
Ballast 6-1
Ballast weight requirements 6-2
Liquid ballast 6-4

7 MAINTENANCE
General information
General information 7-1
Safety rules diesel fuel 7-3
Biodiesel fuel 7-4
Refueling the tractor 7-5
Organic Acid Technology (OAT) coolant 7-6
Change engine coolant to Organic Acid Technology (OAT) coolant 7-7
Fluids and lubricants 7-9
Capacities 7-10

Maintenance planning
Maintenance chart 7-11

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >


Four-Wheel Drive(4WD) lever

The four wheel drive (4WD) is controlled by a lever. The lever is located on the left-hand control pod.

NOTE: *Use four wheel drive when additional traction is required while operating on loose soil, in wet, slippery conditions, or on slopes. For normal operation on firm soil, level hard surfaces, or when operating the unit at high speeds, disengage the four wheel drive to maximize tire and driveline life and to economize on fuel.*

Mechanical model


To engage the four wheel drive on mechanical model tractors, stop the tractor completely, depress the clutch pedal and move the lever **(1)** completely forward. To disengage the four wheel drive, stop the tractor completely, depress the clutch pedal and pull the lever **(1)** rearward.

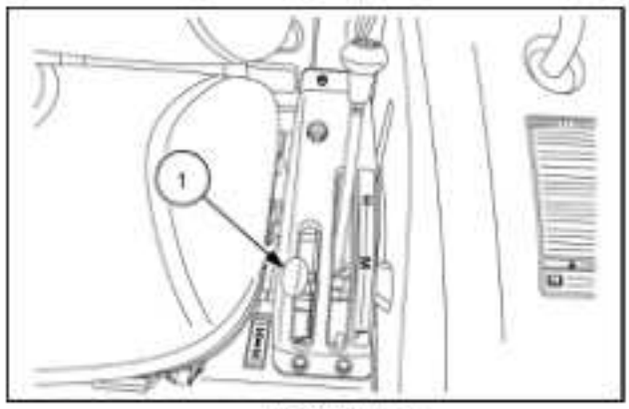

NHL12CT00005AA 1

HST model

To engage the four wheel drive on HST model tractors, stop the tractor completely and move the lever **(1)** completely forward. To disengage the four wheel drive, stop the tractor completely and pull the lever **(1)** rearward.

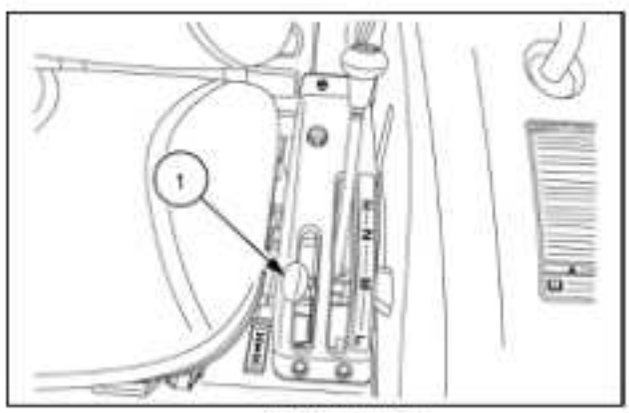

NHL12CT00006AA 2

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >


Rear counter weight bracket (Optional)

To mount cast iron weights on the rear of the tractor an optional weight bracket **(1)** must be installed on the rear 3-point hitch. A maximum of seven suitcase weights **(2)** can be fitted to the bracket.

Weight options:

A maximum of seven **27 kg** (**60 lb**) weights for a total weight of **191 kg** (**421 lb**).

A maximum of two **27 kg** (**60 lb**) weights, and five **45 kg** (**100 lb**) weights, for a total weight of **282 kg** (**622 lb**).

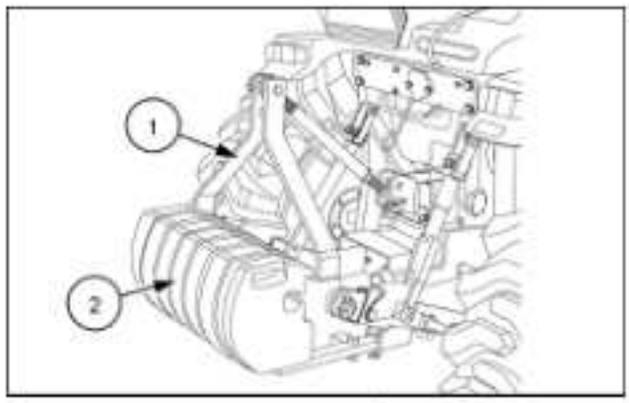


93130917 4

Ballasting box (Optional)

A category-1, 3-point hitch, **227 kg** (**500 lb**) capacity ballasting box **(1)** may be purchased as extra equipment. Load with sand, gravel, or similar loose ballast as needed.

	Weight (Empty)	Weight (Loaded)
3-Point Hitch Ballasting Box	**46 kg** (**101 lb**)	**228 kg** (**503 lb**)

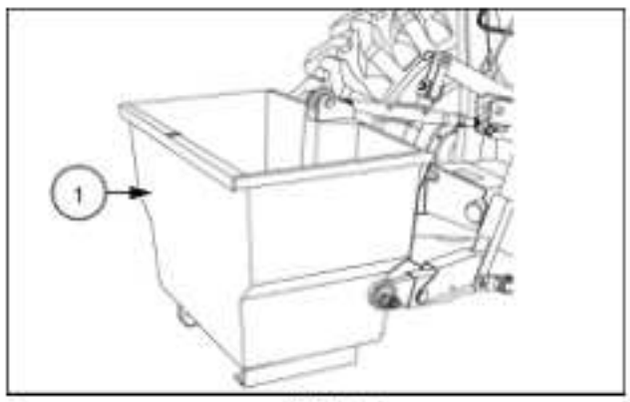

93130918 5


MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >

Hydraulic oil filter - Replace

NOTE: *Replace the hydraulic system oil filter after the first 50 hours of operation, and then following every 300 hours of operation thereafter.*

The hydraulic system uses a spin-on type oil filter **(1)**, located on the right-hand side of the tractor underneath the operator's platform. To replace the filter :

1. Unscrew the used oil filter and discard.
2. Coat the gasket on the new filter with a film of clean oil. Screw the filter into place until the gasket contacts the sealing surface, then tighten the filter by hand approximately three-quarters of a turn. Do not overtighten.
3. Start the engine and check the filter for leaks.
4. Stop the engine and check the hydraulic system oil level. Add oil if necessary.

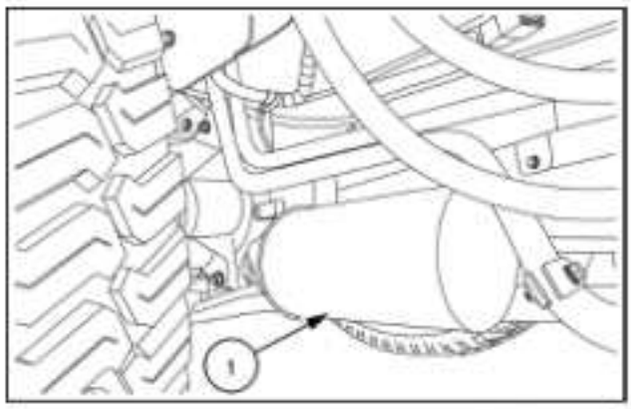

NHL13C01017AA 1

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >

(10)
Reflective red tape


-

Quantity: 2
English Part Number: MT40310801



20

(10) Location: On both rear sides of the Roll Over Protective Structure (ROPS).

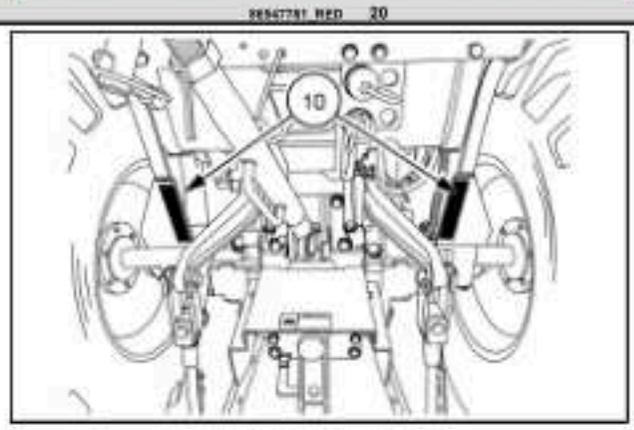

21

(11)
WARNING


- **Rotating driveline contact may cause serious injury or death.**
- **Keep all driveline, tractor and equipment shields in place during operation.**

Quantity: 1
English Part Number: MT40195650



22

(11) Location: On top of the rear PTO guard.

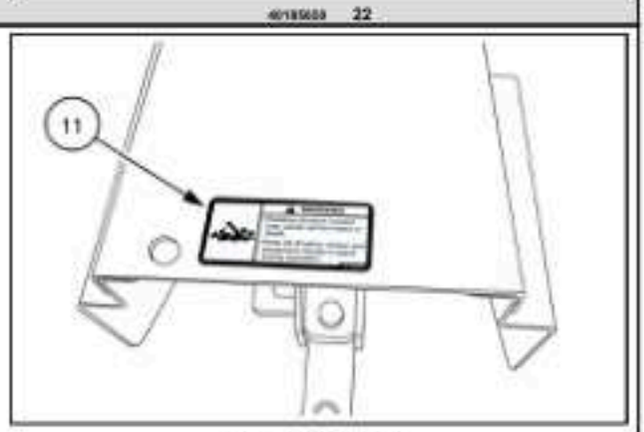

23

MidWestTech | New Holland Workmaster 35, 40 Tier 4B Compact Tractor Operator's M... Order the manual at mid-west-tech.com >