SERVICE MANUAL

E17C
Mini Excavator

Part number 48127424
English
February 2017

NEW HOLLAND CONSTRUCTION

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127424 Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Engine 10

[10.001] Engine and crankcase 10.1

[10.102] Pan and covers 10.2

[10.106] Valve drive and gears 10.3

[10.101] Cylinder heads 10.4

[10.105] Connecting rods and pistons 10.5

[10.103] Crankshaft and flywheel 10.6

[10.216] Fuel tanks 10.7

[10.206] Fuel filters 10.8

[10.218] Fuel injection system 10.9

[10.202] Air cleaners and lines 10.10

[10.254] Intake and exhaust manifolds and muffler 10.11

[10.400] Engine cooling system 10.12

[10.414] Fan and drive 10.13

[10.304] Engine lubrication system 10.14

[10.408] Oil cooler and lines 10.15

Hydraulic systems 35

[35.000] Hydraulic systems 35.1

[35.300] Reservoir, cooler, and filters 35.2

[35.106] Variable displacement pump 35.3

[35.359] Main control valve 35.4

[35.357] Pilot system 35.5

[35.355] Hydraulic hand control 35.6

[35.356] Hydraulic foot control 35.7

[35.352] Hydraulic swing system 35.8

[35.353] Hydraulic travel system 35.9

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

[35.354] Hydraulic central joint 35.10
[35.736] Boom hydraulic system 35.11
[35.737] Dipper hydraulic system 35.12
[35.738] Excavator and backhoe bucket hydraulic system 35.13
[35.734] Tool quick coupler hydraulic system 35.14
[35.739] Swing arm hydraulic system 35.15
[35.741] Dozer blade cylinders 35.16
[35.948] Frame positioning extending 35.17

Frames and ballasting 39

[39.140] Ballasts and supports 39.1

Tracks and track suspension 48

[48.130] Track frame and driving wheels 48.1
[48.100] Tracks 48.2
[48.134] Track tension units 48.3
[48.138] Track rollers 48.4

Electrical systems 55

[55.000] Electrical system 55.1
[55.100] Harnesses and connectors 55.2
[55.525] Cab engine controls 55.3
[55.201] Engine starting system 55.4
[55.301] Alternator 55.5
[55.302] Battery 55.6
[55.202] Cold start aid 55.7
[55.011] Fuel tank system 55.8
[55.012] Engine cooling system 55.9
[55.013] Engine oil system 55.10
[55.512] Cab controls 55.11
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket) 55.12

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

[55.404] External lighting 55.13
[55.405] External lighting switches and relays 55.14
[55.408] Warning indicators, alarms, and instruments 55.15
Booms, dippers, and buckets 84
[84.910] Boom 84.1
[84.912] Dipper arm 84.2
[84.100] Bucket 84.3
Dozer blade and arm 86
[86.110] Dozer blade 86.1
Platform, cab, bodywork, and decals 90
[90.160] Cab interior trim and panels 90.1
[90.114] Operator protections 90.2
[90.120] Mechanically-adjusted operator seat 90.3
[90.100] Engine hood and panels 90.4
[90.105] Machine shields and guards 90.5

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >


Hydraulic systems - Test - Dig function drift

1. Measure dig function drift, which can be caused by oil leakage in the control valve and boom, standard arm, and standard bucket cylinders, with the loaded bucket.

NOTE: *when testing the dig function drift just after cylinder replacement, slowly operate each cylinder to its stroke end to purge air.*

Preparation

1. Load bucket fully. Instead of loading the bucket, weight **(W)** of the following specification can be used.
   - W = M3 x 1.5
     Where:
     M3 = Bucket heaped capacity (m3)
     1.5= Soil specific gravity
2. Position the arm cylinder with the rod **20 – 30 mm** (**0.8 – 1.2 in**) extended from the fully retracted
3. Position the bucket cylinder with the rod **20 – 30 mm** (**0.8 – 1.2 in**) mm retracted from the fully extended position.
4. With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin **(1)** is the same as the boom foot pin **(2)**.
5. Keep the hydraulic oil temperature at **45 – 55 °C** (**113 – 131 °F**).

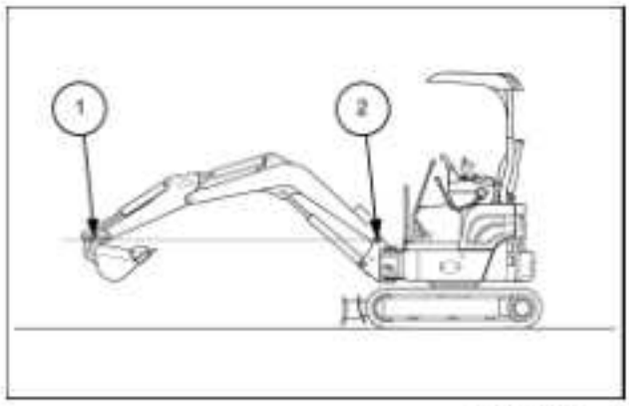

Measurement

1. Stop the engine.
2. Five minutes after the engine has been stopped, measure the changes in the positions of the boom, arm and bucket cylinders.
3. Repeat step 2 three times and calculate the average values.

Evaluation

The measured drift should be within the following specifications.

Drift to be measured	Standard value	Maximum allowable
Boom cylinder	below **10 mm** (**0.4 in**) every **5 min**	**20 mm** (**0.8 in**)
Arm cylinder	below **20 mm** (**0.8 in**) every **5 min**	**30 mm** (**1.2 in**)
Bucket cylinder	below **20 mm** (**0.8 in**) every **5 min**	**30 mm** (**1.2 in**)

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Wiring harnesses - Electrical schematic sheet 09 - Horn, timer glow and fuel sensor

Type	Components	Connectors/link	Description
Sensor	CD-2	**CD-2**	Fuel sensor
Horn	CN-20	**CN-20**	Horn
Solenoid	CN-79	**CN-79**	Solenoid valve
Relay	CR-2	**CR-2**	Horn relay
Timer glow	CR-24	**CR-24**	Timer glow
Relay	CR-35	**CR-35**	Power relay
Solenoid	CR-77	**CR-77**	Timer solenoid


MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127424

Order the manual at mid-west-tech.com >

Instrument cluster - Service instruction - Troubleshooting

Coolant temperature gauge malfunction


- Before disconnecting the connector, always turn OFF the starter switch.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

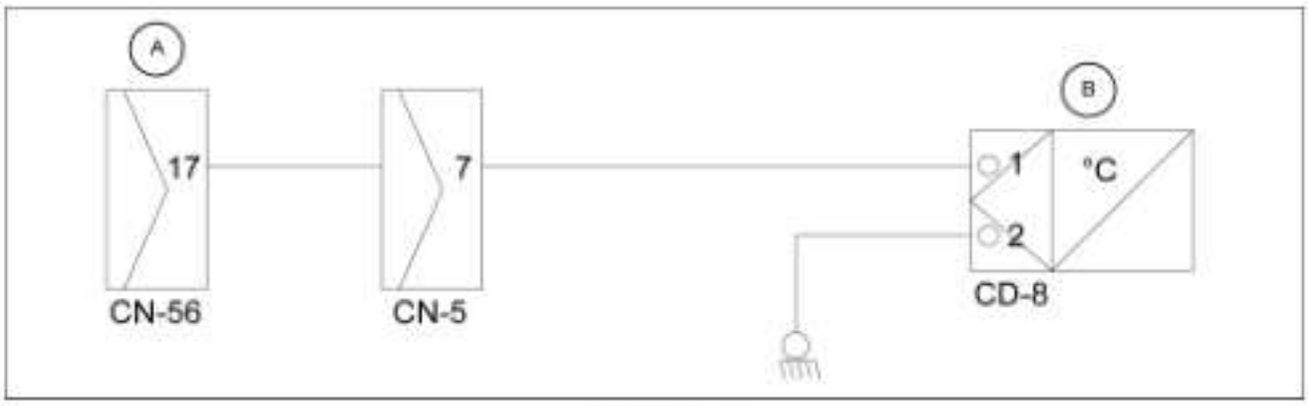

1

A. Cluster
B. Coolant temp switch

Temperature	50 °C (122 °F)	80 °C (176 °F)	100 °C (212 °F)	115 °C (239 °F) (1. red range)
Unit resistance	350 Ω	118 Ω	63.5 Ω	36.2 Ω

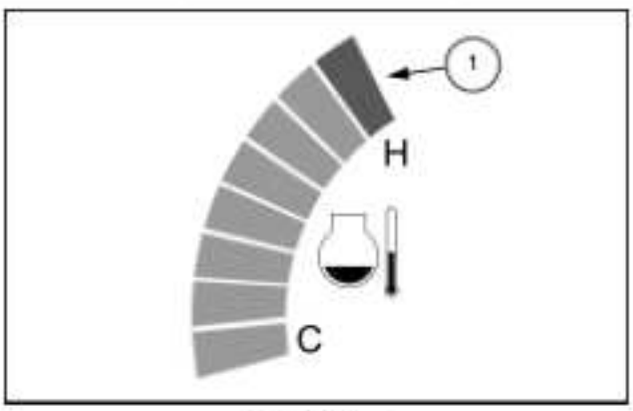

2

Turn ON the starter switch.


1. Check the operative of the lamp.
   A. If the gauge moves up and down at lamp check, proceed to step 2.
   B. If the gauge does not move up and down at the lamp check, the cluster is defective. Replace it (refer to **Instrument cluster - Remove (55.408)**).

2. Turn OFF the starter switch.
   Disconnect the harness connector **CN-56** .
   Measure the resistance between terminal 17 of the connector **CN-56** and the ground.
   A. If the resistance is equal or lesser than **2 kΩ**, proceed to step 3.
   B. If the resistance is more than **2 kΩ**, there is a disconnection in the wiring harness or a poor contact between the connector **CN-56** and the connector **CD-8**. Repair or replace it, after clean.

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Combined swing, boom, arm and bucket circuits

When the swing, boom, arm and bucket functions are operated, simultaneously each spool in the main control valve is moved to the functional position by the pilot oil pressure from the remote control valve. The oil from the P2 pump flows into the arm cylinder through, arm spool. The oil from the P1 pump flows into the boom cylinders and bucket cylinder through the boom spool, bucket spool. The oil from the P3 pump flows into the swing motor through the swing spool. The upper-structure swings and the boom, arm and bucket are operated.

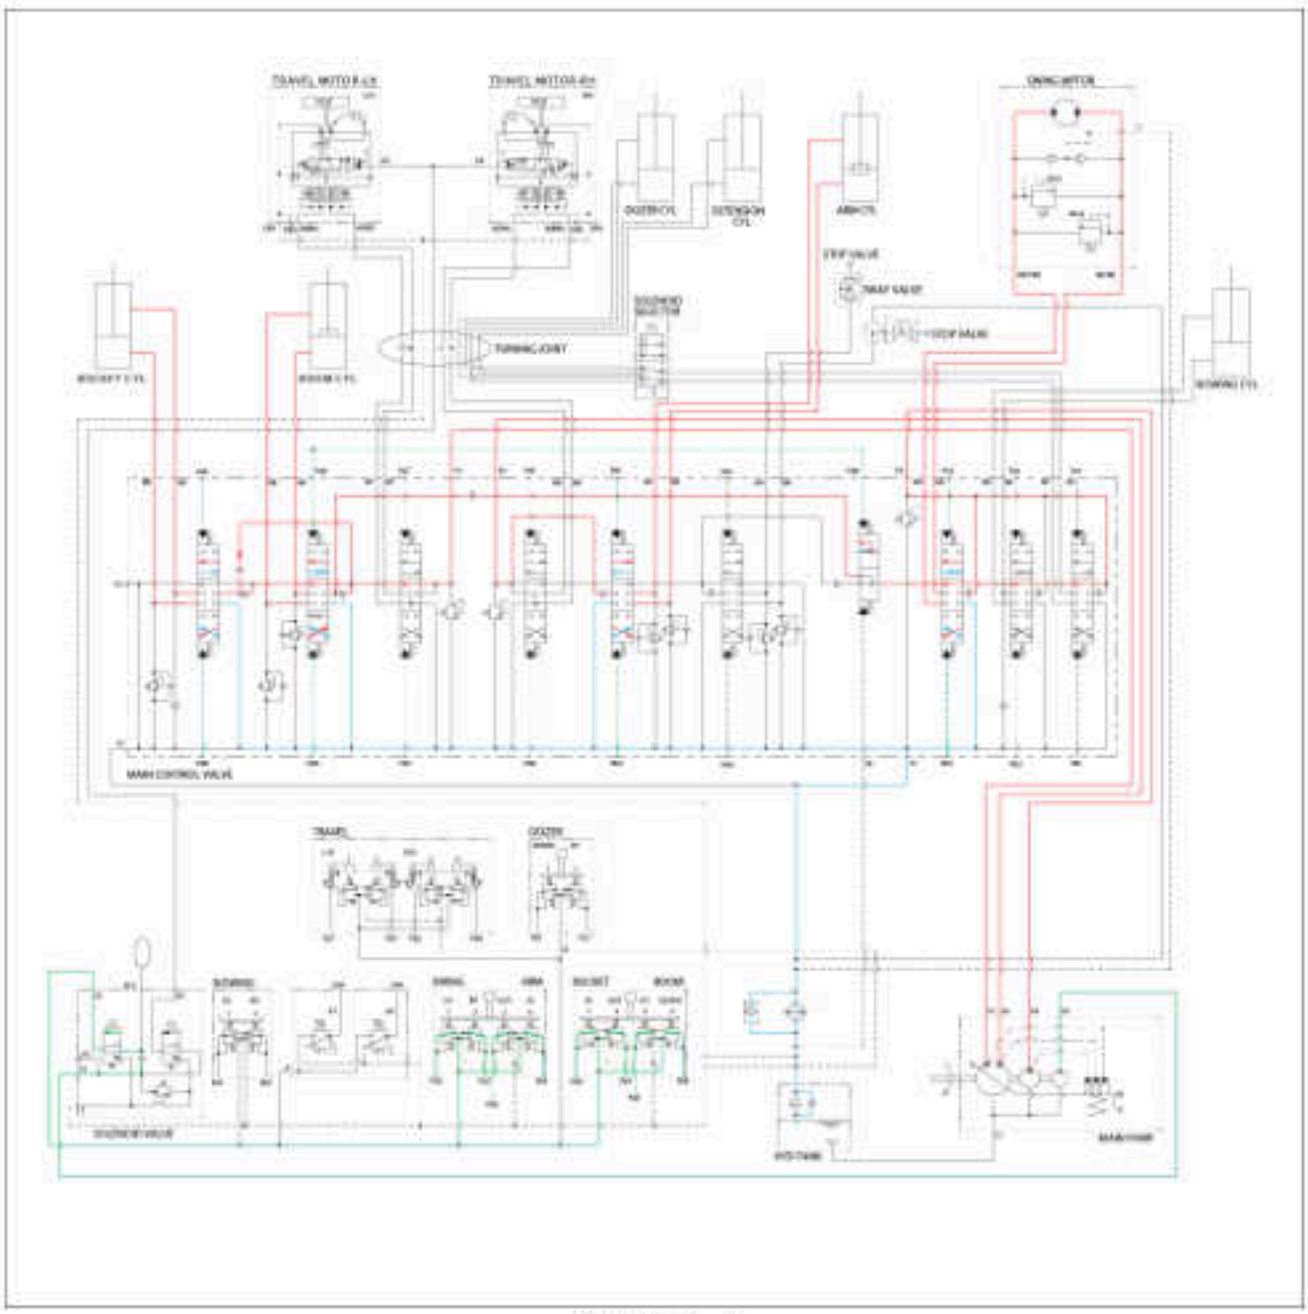

SWL17MEX1010GA 5


Pressure line

Pilot pressure line

Tank line

Secondary pilot pressure line

MidWestTech | New Holland E17C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

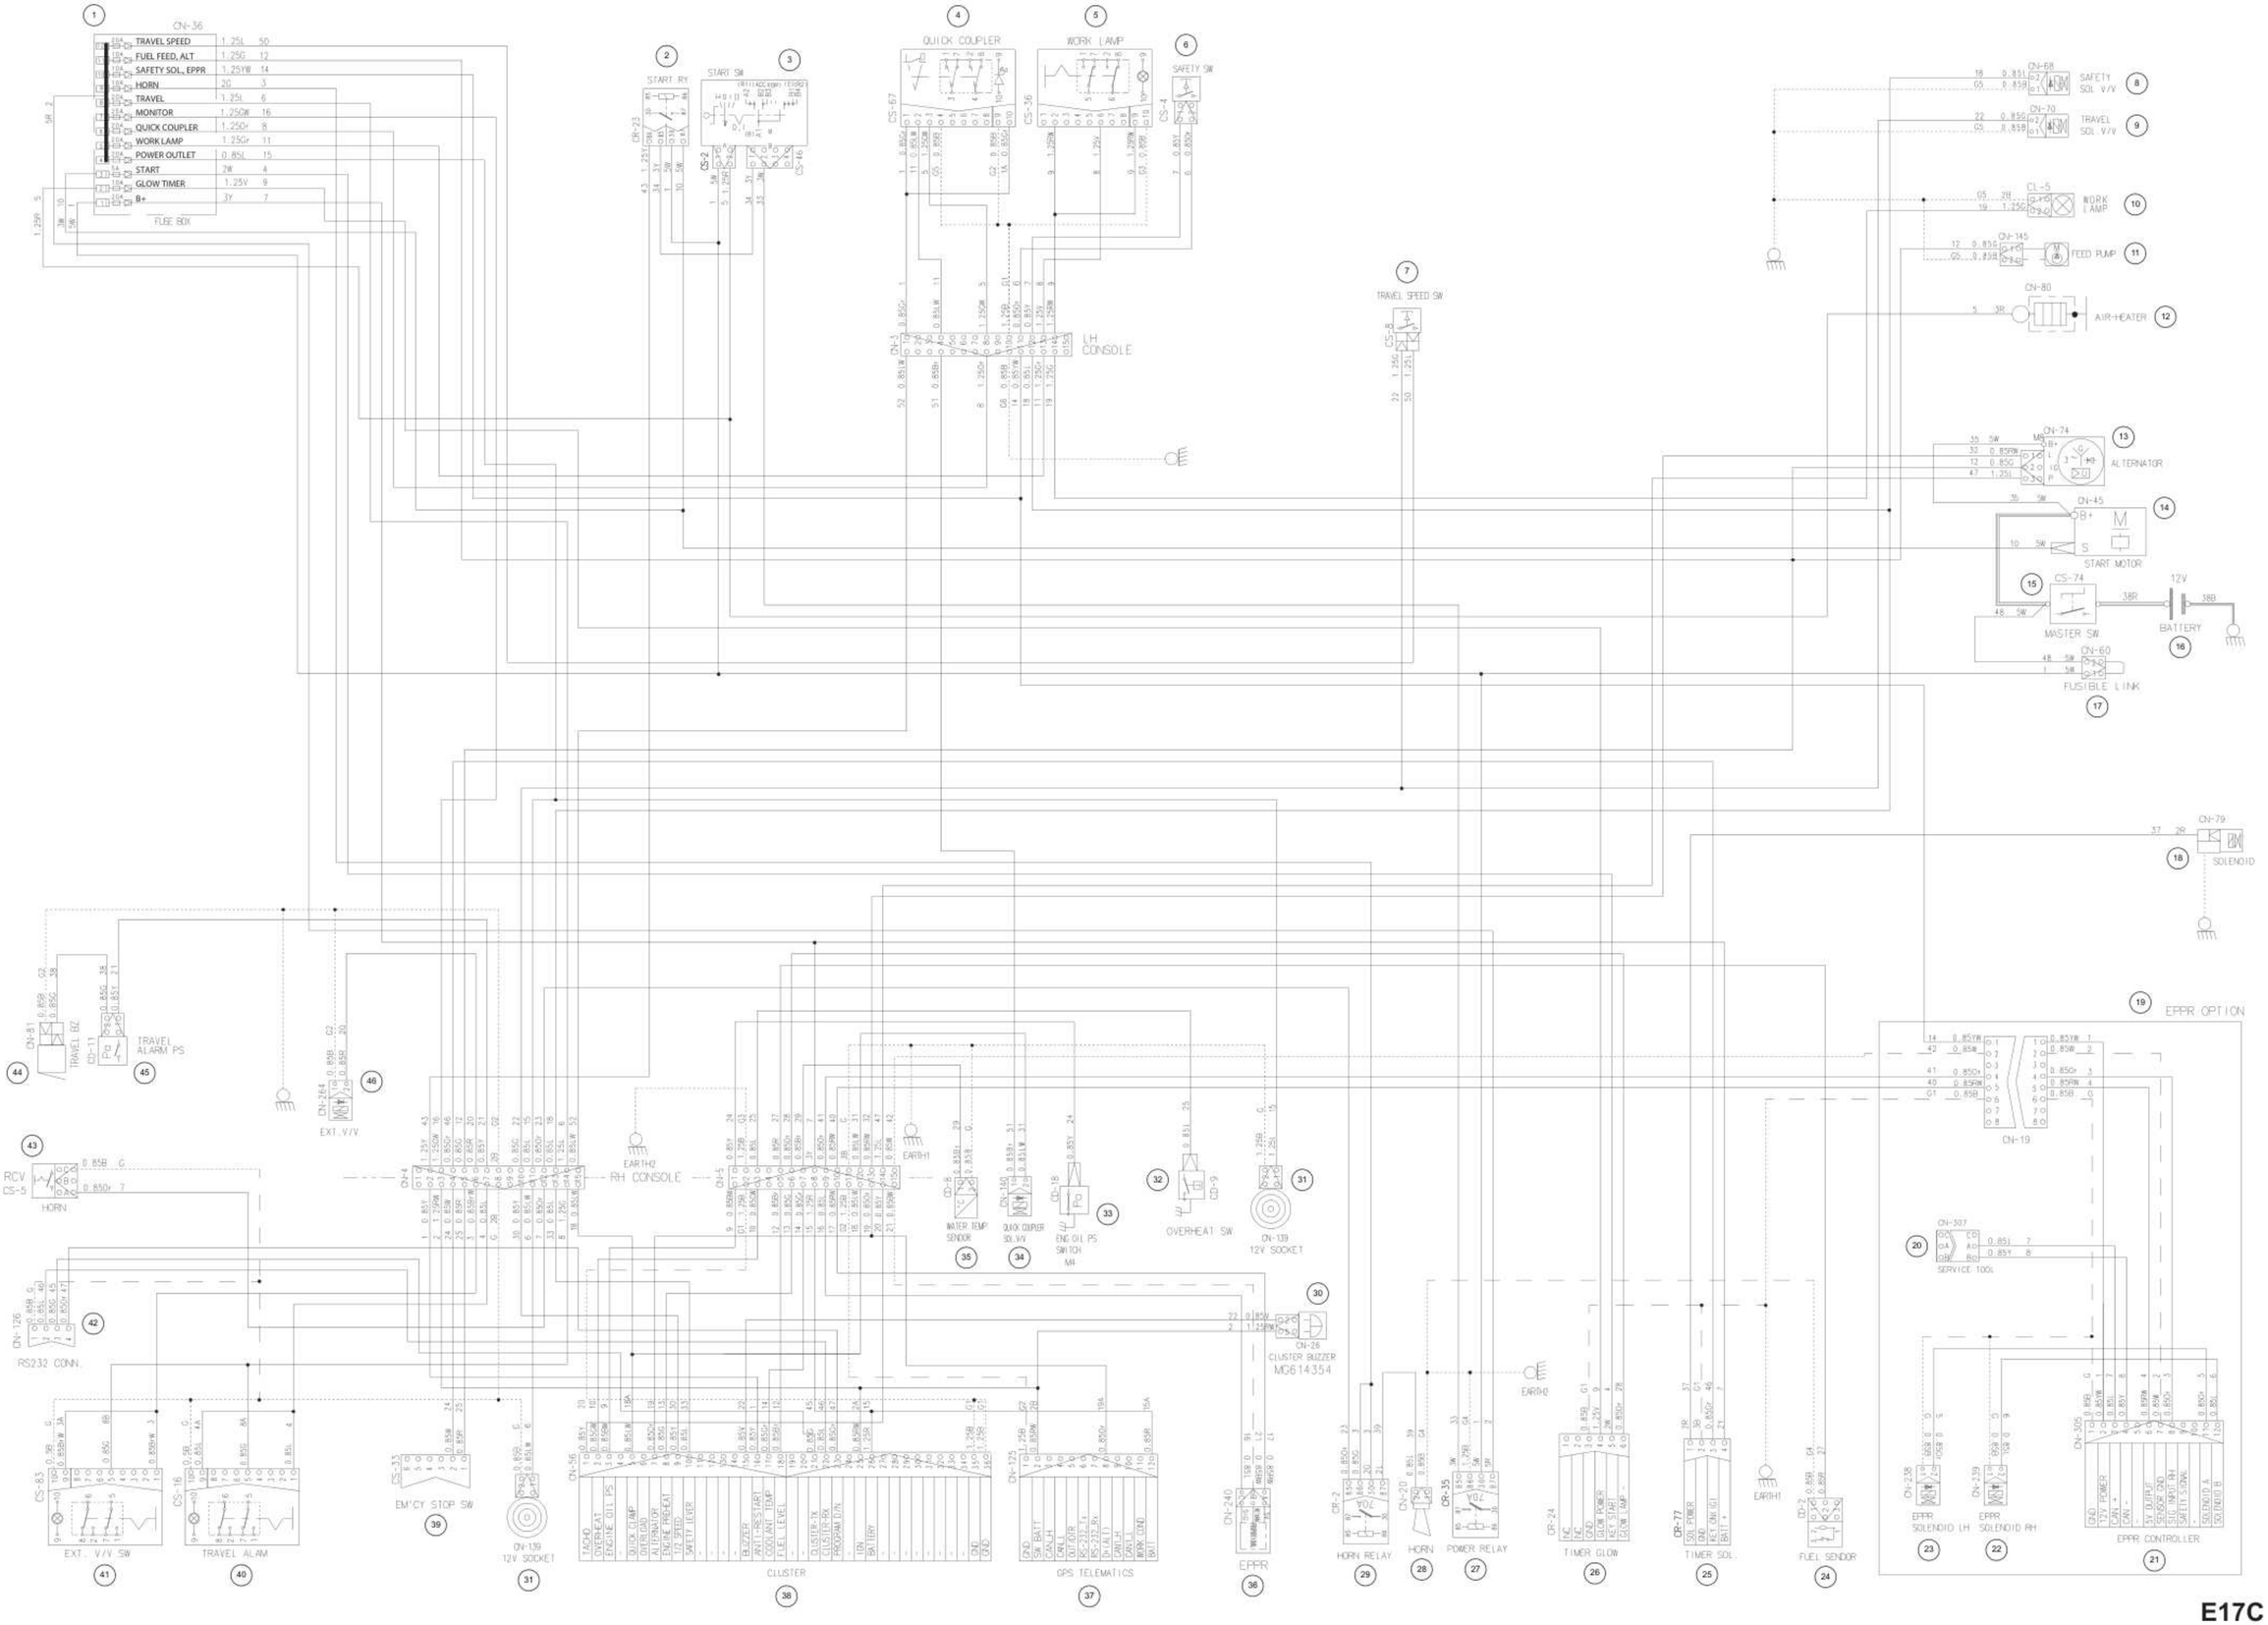

LEGEND

1. Fuse box
2. Starter relay
3. Starter switch
4. Quick coupler switch
5. Work light switch
6. Safety switch
7. Travel speed switch
8. Safety solenoid valve
9. Travel solenoid valve
10. Work lamp
11. Feed pump
12. Air-heater
13. Alternator
14. Engine starter
15. Master switch
16. Battery
17. Fusible link
18. Solenoid
19. EPPR option
20. Service tool
21. EPPR controller
22. EPPR solenoid (right)
23. EPPR solenoid (left)
24. Fuel sensor
25. Solenoid timer
26. Glow timer
27. Power relay
28. Horn
29. Horn relay
30. Cluster buzzer
31. 12V socket
32. Overload switch
33. Engine oil pressure switch
34. Quick coupler solenoid valve
35. Coolant temperature sensor
36. EPPR
37. GPS telematics
38. Cluster
39. Emergency stop switch connector
40. Travel alarm switch
41. Extension valve switch
42. RS232 connector
43. Horn switch
44. Travel buzzer
45. Travel alarm pressure switch
46. Extension solenoid valve

E17C EXCAVATOR ELECTRICAL SCHEMATIC

48125606EN

Order the manual at mid-west-tech.com >