SERVICE MANUAL

E37C

Mini Excavator

Part number 48127426
English
February 2017

NEW HOLLAND CONSTRUCTION

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127426 Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Engine 10

[10.001] Engine and crankcase 10.1
[10.106] Valve drive and gears 10.2
[10.101] Cylinder heads 10.3
[10.105] Connecting rods and pistons 10.4
[10.103] Crankshaft and flywheel 10.5
[10.216] Fuel tanks 10.6
[10.206] Fuel filters 10.7
[10.218] Fuel injection system 10.8
[10.202] Air cleaners and lines 10.9
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment 10.10
[10.400] Engine cooling system 10.11
[10.414] Fan and drive 10.12
[10.304] Engine lubrication system 10.13

Hydraulic systems 35

[35.000] Hydraulic systems 35.1
[35.106] Variable displacement pump 35.2
[35.359] Main control valve 35.3
[35.357] Pilot system 35.4
[35.355] Hydraulic hand control 35.5
[35.356] Hydraulic foot control 35.6
[35.352] Hydraulic swing system 35.7
[35.353] Hydraulic travel system 35.8
[35.354] Hydraulic central joint 35.9
[35.736] Boom hydraulic system 35.10
[35.737] Dipper hydraulic system 35.11

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

[35.738] Excavator and backhoe bucket hydraulic system 35.12
[35.739] Swing arm hydraulic system 35.13
[35.741] Dozer blade cylinders 35.14
Frames and ballasting 39
[39.140] Ballasts and supports 39.1
Tracks and track suspension 48
[48.130] Track frame and driving wheels 48.1
[48.100] Tracks 48.2
[48.134] Track tension units 48.3
[48.138] Track rollers 48.4
Electrical systems 55
[55.000] Electrical system 55.1
[55.100] Harnesses and connectors 55.2
[55.525] Cab engine controls 55.3
[55.015] Engine control system 55.4
[55.201] Engine starting system 55.5
[55.301] Alternator 55.6
[55.302] Battery 55.7
[55.011] Fuel tank system 55.8
[55.014] Engine intake and exhaust system 55.9
[55.012] Engine cooling system 55.10
[55.013] Engine oil system 55.11
[55.512] Cab controls 55.12
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket) 55.13
[55.518] Wiper and washer system 55.14
[55.404] External lighting 55.15
[55.405] External lighting switches and relays 55.16
[55.514] Cab lighting 55.17

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

[55.408] Warning indicators, alarms, and instruments 55.18

Booms, dippers, and buckets 84

[84.114] Boom pivoting support 84.1

[84.910] Boom 84.2

[84.912] Dipper arm 84.3

[84.100] Bucket 84.4

Platform, cab, bodywork, and decals 90

[90.100] Engine hood and panels 90.1


[90.105] Machine shields and guards 90.2

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

8. Using a micrometer, measure the thickness of each piston ring. Refer to **Piston - Service limits (10.105)** for specifications. Record the measurements.

NOTE: *on an engine with low hours, the pistons, piston rings and cylinders may be reused if they are found to be within specifications.*
On an engine with high hours, the pistons rings should be replaced and the cylinder honed (refer to ***Crankcase - Inspect (10.001)****) or replaced. The piston should be replaced as necessary.*


9. Place each compression piston ring in the groove as shown. Use a feeler gauge to measure the clearance between the piston ring and the piston ring land. Record the measurements. Refer to **Piston - Service limits (10.105)** for specifications. Replace the piston if not within specification.

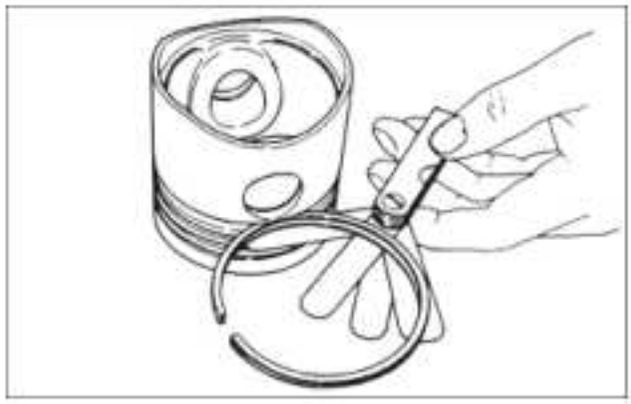

SML18VEX0427AA 4

10. To measure piston ring end gap, insert each compression piston ring **(1)**, one at a time, into the cylinder. Use a piston with the piston rings removed to slide the ring into the cylinder bore until it is approximately **30 mm (1.18 in) (2)** from the bottom of the bore. Remove the piston. Measure the end gap **(3)** of each piston ring. Record the measurements. Refer to **Piston - Service limits (10.105)** for specifications.

NOTE: *always check the piston ring end gap when installing new piston rings. Refer to* ***Piston - Service limits (10.105)****ol to adjust the piston ring end gap on new piston rings.*

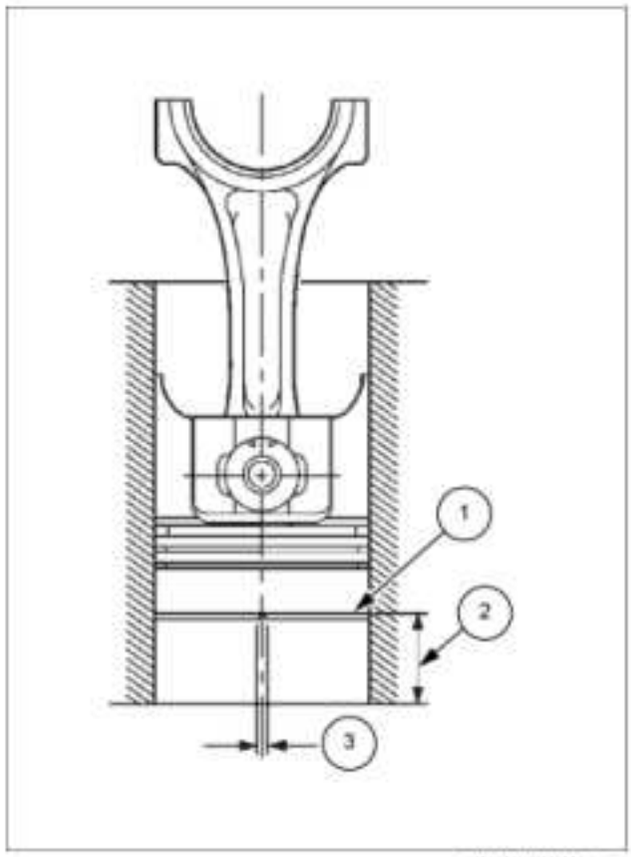

SML18VEX0428BB 5

11. Repeat the above steps for each cylinder and piston assembly.

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Wiring harnesses - Electrical schematic sheet 01 - Legend


Schematic symbols



Inline connector



Ground

GND100



Device connector




Ring terminal




Fuse




Solenoid



Relay




Switch




Speaker



Resistor



Lamp




Sensor




Receptacle connector




Plug connector




Splice



Diode



Module

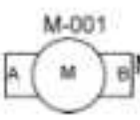

Motor


MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Windshield wiper motor - Service instruction - Troubleshooting

E37C Cab - Tier IV final engine	WE

Wiper motor malfunction

- Before disconnecting the connector, always turn OFF the starter switch.
- Before carrying out below procedure, check all the related connectors are properly inserted and short fuse No. 8 is not blown out.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

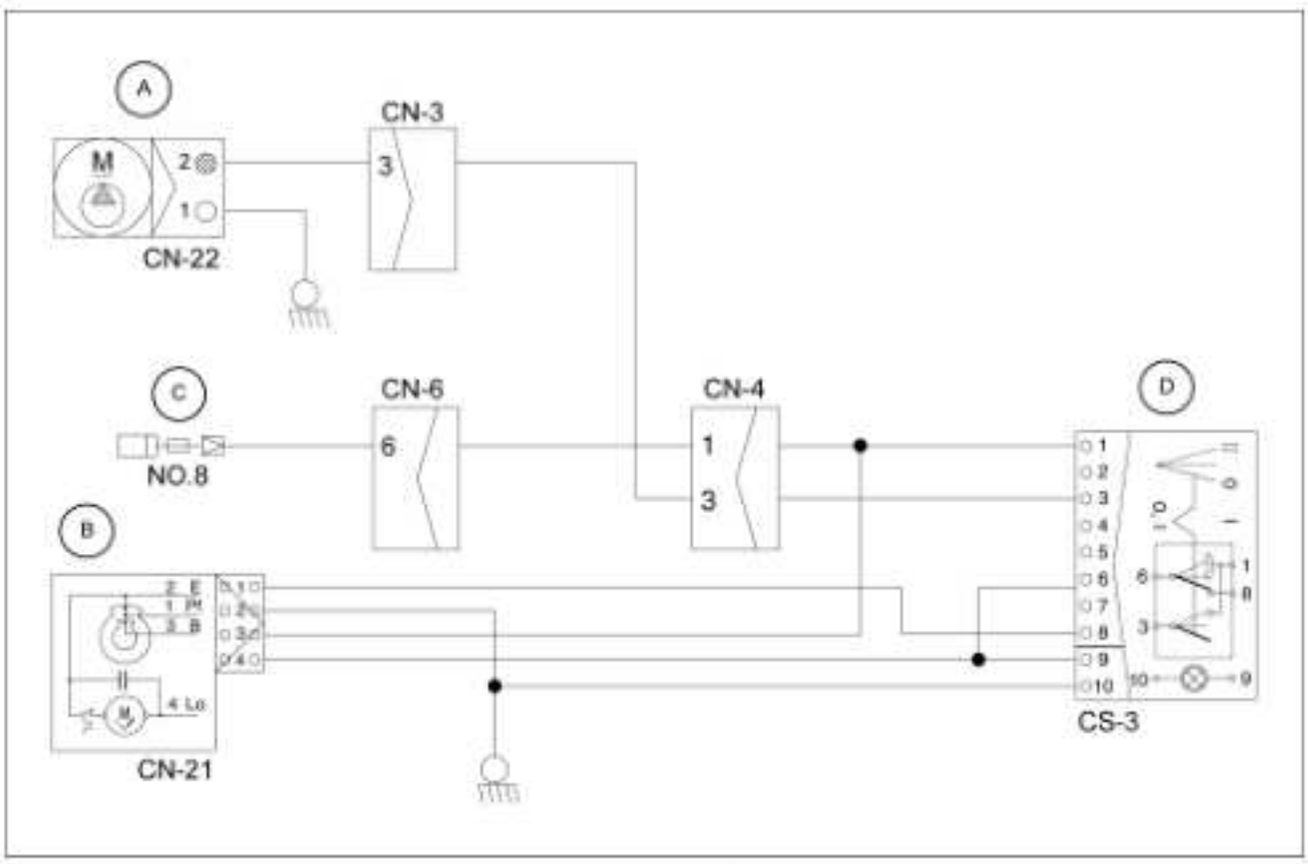

SMIL17MEX1104FB 1


A. Washer pump
B. Wiper motor
C. Fuse
D. Wiper and washer switch

1. Measure the voltage between terminal 1 of the connector **CS-3** the ground.
   A. If the voltage is within **10 – 12.5 V**, proceed to step 2.
   B. If the voltage is not within **10 – 12.5 V**, check the fuse. Replace it.
2. Turn ON the wiper switch.
   Measure the voltage between terminal 6 of the connector **CS-3** and ground.
   A. If the voltage is within **10 – 12.5 V**, proceed to step 3.
   B. If the voltage is not within **10 – 12.5 V**, the wiper switch is defective. Replace it (refer to **Wiper switches - Replace (55.518)**).
3. Turn ON the starter switch.
   Measure the voltage between terminal 3 of the connector **CN-21** and ground.

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Combined swing, boom, arm and bucket circuits

When the swing, boom, arm and bucket functions are operated, simultaneously each spool in the main control valve is moved to the functional position by the pilot oil pressure from the remote control valve.
The oil from the P2 pump flows into the arm cylinder through, arm spool.
The oil from the P1 pump flows into the boom cylinders and bucket cylinder through the boom spool, bucket spool.
The oil from the P3 pump flows into the swing motor through the swing spool.
The upper-structure swings and the boom, arm and bucket are operated.

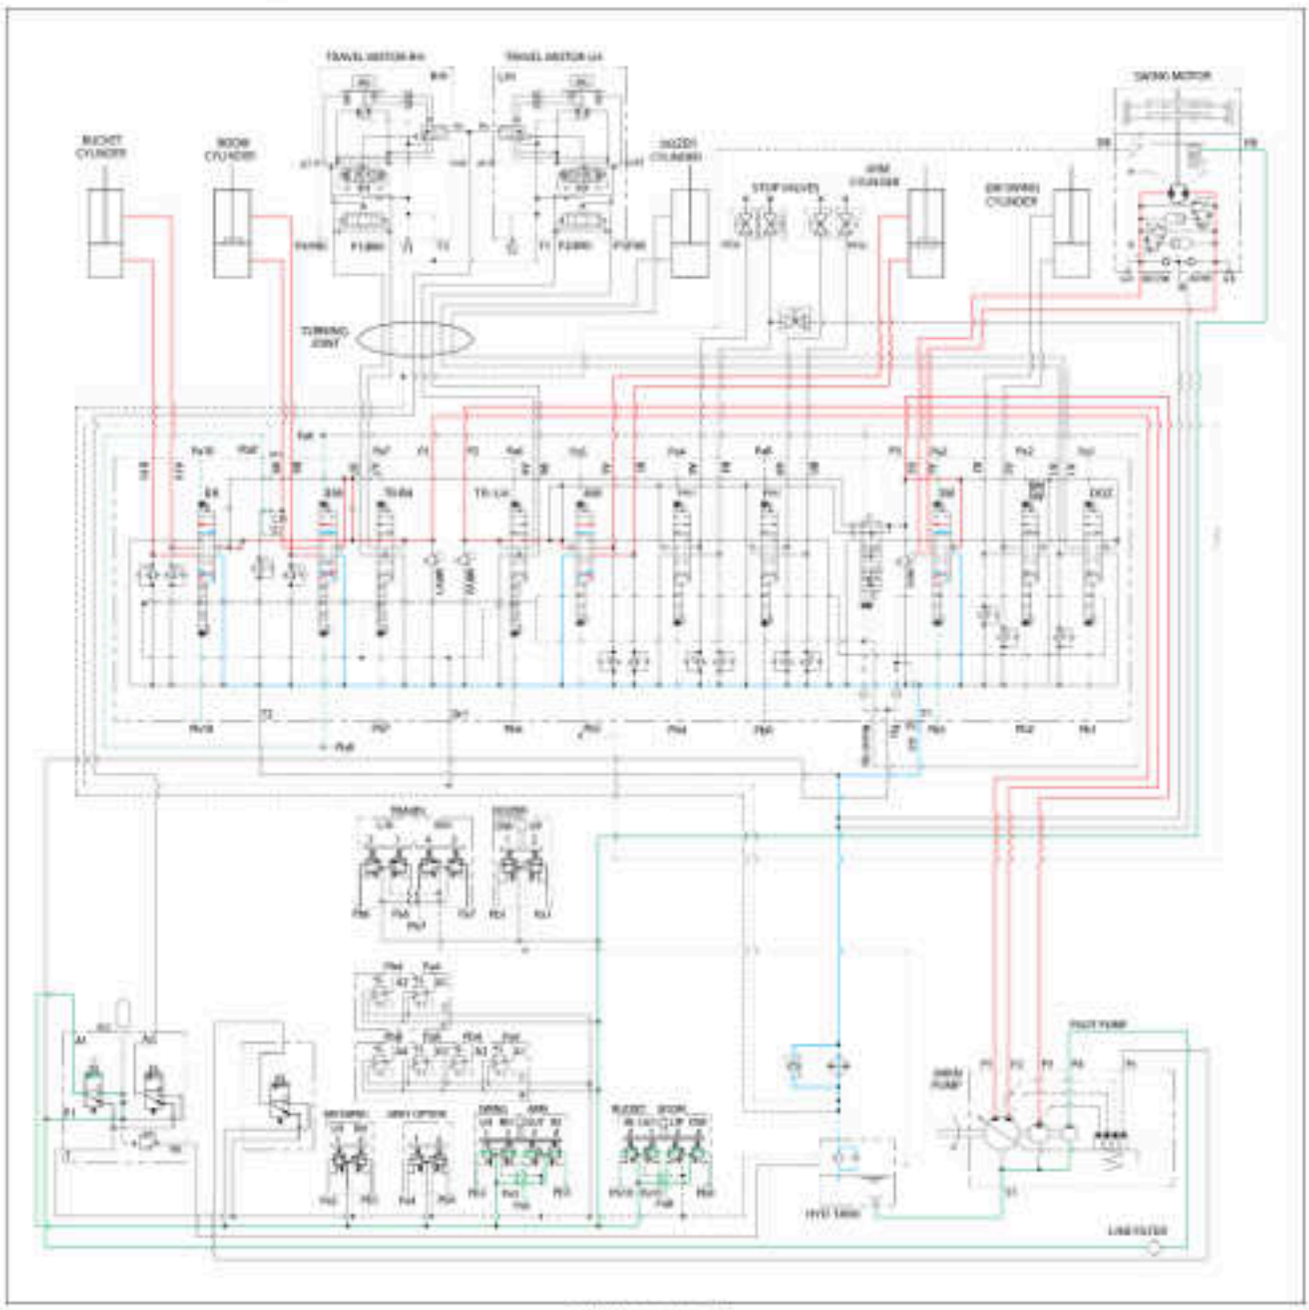

Pressure line

Pilot pressure line

Tank line

Secondary pilot pressure line

Pilot tank line

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127... Order the manual at mid-west-tech.com >

Symptoms and conditions of failures		Defective start					Engine stall after start			Defective rotation control						Insufficient engine output			Noise/vibration				Lubricant				Cool-ing wa-ter		Intake		Exhaust				Fuel			Electrics/electronics						Action	Reference
		Starter not rotate		Starter rotates			Exhaust fume				Without load				At work	Exhaust color														At work														
Cause		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	AA	BB	CC	DD	EE	FF	GG	HH	II	LL	M-M	NN	OO	PP	QQ		
UU	Fuel injection pump with injection timing excessively advanced																		x			x									x	x											Inspection and adjustment	See **Fuel injection system - Adjust (10.218)**
	Fuel injection pump with injection timing excessively retarded																x	x													x	x		x	x								Inspection and adjustment	See **Fuel injection system - Adjust (10.218)**
	Incorrect fuel															x	x	x		x											x	x				x	x							Usage of correct fuel	
	Water entered into fuel system			x	x				x					x	x		x			x											x												Drainage of fuel filter	See **Fuel-water separator filter - Replace (10.206)**
	Fuel filter clogged			x		x	x					x				x																											Cleaning or replacement	See **Fuel-water separator filter - Replace (10.206)**
	Air entered into fuel system			x	x		x							x	x	x																											Bleeding	See **Fuel-water separator filter - Replace (10.206)**
	Fuel pipe clogged, cracked			x			x									x																											Cleaning or replacement	
	Insufficient fuel feeding to fuel supply pump			x	x		x					x				x																											Check of fuel tank cock, fuel filter, fuel pipe, fuel feed pump	
	Uneven injection quantity of fuel injection pump													x	x		x	x		x		x									x	x		x										Inspection and adjustment	See **Fuel injectors - Test (10.218)**
	Fuel injection quantity too much																						x				x			x			x	x	x									Inspection and adjustment	See **Fuel injectors - Test (10.218)**
	Defective spray of fuel injection nozzle													x	x		x	x		x		x									x	x		x										Inspection and adjustment	See **Fuel injectors - Test (10.218)**
	Priming not available			x																																							Valve in priming pump pinched dust (disassembled cleaning)	See **Fuel injection system - Exploded view (10.218)**
	Strainer at feed pump inlet clogged					x						x				x																											Cleaning of strainer	
	Operation defect of CSD valve			x		x													x																									Replace the pump. Replace the CSD valve.	
	Sealing defect of fuel tank																																			x	x							Check of fuel tank and cap, as well as installation of genuine parts	
VV	Air filter clogged								x			x					x			x			x						x			x		x										Cleaning of air filter	See **Air cleaner - Cleaning (10.202)**
	Engine operation at high temperature or high land																x										x		x		x				x									Consideration of matching output reduction with load	
	Exhaust pipe clogged							x				x					x			x											x		x										Cleaning of exhaust pipe	
W-W	Fuse meltdown, disconnection	x	x				x																																x		x	Inspection and replacement of fuse. Repair or replacement of harness	For harness inspection method, see **Engine wiring harness - Static description (55.015)**
	Starter fault		x	x																																							Repair or replacement of starter	See **Engine starter - Remove (55.201)**
	Alternator fault			x																																		x					Repair or replacement of alternator	See **Alternator - Remove (55.301)**
	Wiring disconnection	x	x	x			x																																x	x	x	x		Repair or replacement of harness disconnection	
	Wiring short-circuit (insulator broken), electric power load of added device too big	x																																							x		Inspection, repair or replacement of harnesses Review of added devices	
	Battery voltage descent		x	x																																							Inspection and charging of battery	See **Battery - Check (55.302)**
	Key switch fault, disconnection	x					x																																x					Repair or replacement of harness Key switch replacement	For harness inspection method, see **Engine wiring harness - Static description (55.015)**
	Instantaneous interruption of key switch				x		x																																					Key switch replacement	
	Failure, disconnection, short-circuit of starter relay		x																																									Repair or replacement of harness Replacement of starter relay	For harness inspection method, see **Engine wiring harness - Static description (55.015)**
	Main relay fault (Error other than contact sticking that ECU can't detect)	x																																						x					Repair or replacement of harness Replacement of main relay	For harness inspection method, see **Engine wiring harness - Static description (55.015)**

MidWestTech | New Holland E37C Mini Excavator Service Manual | Publication 48127426
Order the manual at mid-west-tech.com >