OPERATOR'S MANUAL

Workmaster 50
Workmaster 60
Workmaster 70

Tractor

Part number 48135188
1st edition English
January 2018
Replaces part number 47690424V3

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publication 48135188
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Electro-magnetic compatibility (EMC) 1-3
Product Identification Number (PIN) 1-5
Machine orientation 1-7
Exhaust Gas Recirculation (EGR) exhaust treatment - Product overview 1-8

2 SAFETY INFORMATION

Personal safety 2-1
Safety rules 2-2
Proposition 65 2-9
Ecology and the environment 2-10
Safety signs 2-11
Instructional signs 2-21
Roll Over Protective Structure (ROPS) frame - Basic instructions 2-27

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Before operating 3-1

OPERATOR'S SEAT

Operator's seat 3-2
Seat belt 3-3

FORWARD CONTROLS

Instrument cluster - Localization overview 3-4
Hand controls and switches 3-9
Clutch pedal 3-13
Brake pedals - Control identification 3-13
Transmission - Control identification 3-14
Foot throttle control - Control identification 3-14

LEFT-HAND SIDE CONTROLS

Transmission - Control identification 3-15
Four-Wheel Drive (4WD) (If equipped) 3-15
Power Take-Off (PTO) - Control identification 3-16

RIGHT-HAND SIDE CONTROLS

Parking brake 3-17
Differential lock pedal 3-17
Transmission - Control identification 3-18

DISPLAY SETTINGS

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program 3-19

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Adjusting the dashboard/display brightness 3-20
Activating/deactivating buzzer 3-22
Programming maintenance work 3-23
Resetting the oil change counter 3-25
Particulate Matter Catalyst 3-26
Viewing error codes 3-31
Display warnings overview 3-32

4 OPERATING INSTRUCTIONS

STARTING THE UNIT
Starting the tractor 4-1

STOPPING THE UNIT
Shut off the engine 4-6

5 TRANSPORT OPERATIONS

ROAD TRANSPORT
Carrying the tractor on a transporter 5-1

RECOVERY TRANSPORT
Towing the tractor 5-2

6 WORKING OPERATIONS

GENERAL INFORMATION
Field operation 6-1

POWER TAKE OFF (PTO)
Two-speed rear Power Take-Off (PTO) - Grouped Safety Message 6-1
Attaching Power-Take Off (PTO) driven equipment 6-2
Power Take Off (PTO) 6-3

THREE POINT LINKAGE
Three-point linkage 6-6
Attaching three-point equipment 6-6
Detaching three-point equipment 6-7
Lift rods, lower links and top link 6-8
Towing attachments 6-10

HYDRAULIC SYSTEM
Hydraulic systems - Operating 6-11

WHEEL TRACK ADJUSTMENT
Wheel tread settings 6-14

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

BALLASTING AND TIRES

Ballasting and tires 6-19

7 MAINTENANCE

GENERAL INFORMATION

Lubrication and maintenance general information 7-1
Refueling the tractor 7-3
Fuel saving tips for optimum performance 7-4
Biodiesel fuel 7-6
Machine shields and guards - Basic instructions 7-7
Consumables 7-8
Protecting the electrical system during charging or welding 7-9
General battery maintenance 7-10

MAINTENANCE CHART

Frame - Maintenance chart 7-11

Every 10 hours of operation or daily

Engine oil level 7-13
Engine cooling system 7-13
Steering oil reservoir level 7-14

After the first 50 hours of operation

Clutch pedal free play 7-15
Brake pedal free play 7-15
Wheels and tires 7-15
Hydraulic oil filter 7-15

Every 50 hours

Clutch pedal free play 7-16
Brake pedal free play 7-16
Wheels and tires 7-17
Transmission oil level or hydraulic oil level 7-17
Front axle differential oil level 7-18
Front wheel hub oil level (4WD) 7-18
Air cleaner 7-19

Every 150 hours

Battery electrolyte level 7-20

Every 300 hours


Engine oil and filter 7-20
Engine air cleaner outer element 7-22
Hydraulic oil filter 7-25
Power Take-Off (PTO) clutch 7-26

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Transmission - Control identification

Transmission shuttle lever


The shuttle shift lever **(1)** is used to engage the transmission into forward or reverse. You must depress the clutch pedal in order to shift the transmission . Move the lever forward to enable the tractor to travel forward and rearward to enable the tractor to travel in reverse. The shuttle lever must be in the neutral (middle) position to activate the safety start system and allow the engine to start.

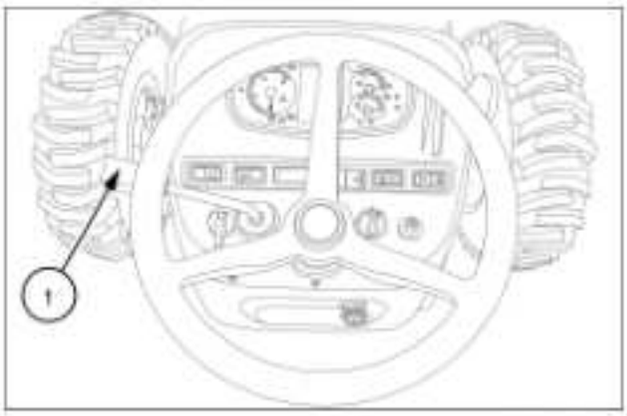

GNIL17TR0021DFA 1

Foot throttle control - Control identification

The foot throttle pedal **(1)** may be used independently of the hand throttle lever to control the speed of the tractor. Use the foot throttle pedal when you drive on the main road or on the highway.

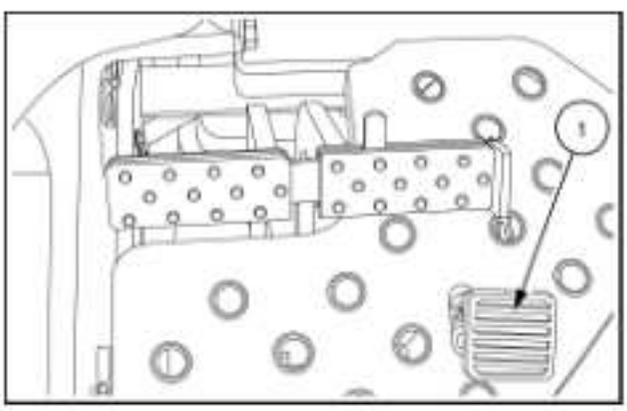


GNIL17TR0021IAA 1

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Hydraulic oil filter

The hydraulic oil filter **(1)** is installed on the right–hand side of the engine.

1. Clean the area around the filter. Remove the filter and discard.
2. Clean the inlet gallery and the face of the filter mounting.

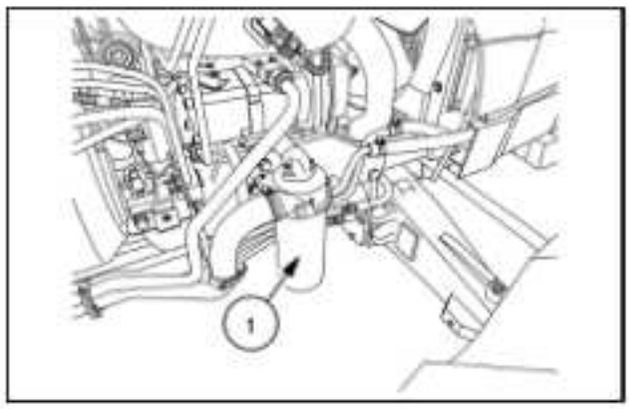

GNIL14TP69306AA 1

3. Apply clean oil around the rubber seal of the new filter and install on the tractor.
4. Tighten until the faces just meet, then tighten the hydraulic oil filter further 3/4 of a turn. Do not over tighten.

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

2WD Tractor dimension

Dimension		Workmaster™ 50	Workmaster™ 60	Workmaster™ 70
	Tire size	Front : 7.5X16 Rear : 13.6X28	Front : 7.5X16 Rear : 14.9X28	Front : 7.5X16 Rear : 14.9X28
A	Overall width	1690.0 mm (66.5 in)	1714.0 mm (67.5 in)	
B	Under front axle	495.0 mm (19.5 in)		
C	Front standard track setting	1385.0 mm (54.5 in)		
D	Rear standard track setting	1336.0 mm (52.6 in)		
F	Less cab (top of seat/ROPS)	2450.0 mm (96.5 in)	2478.0 mm (97.6 in)	
G	Under standard drawbar	429.0 mm (16.9 in)	456.0 mm (18.0 in)	
H	Weight carrier	285.0 mm (11.2 in)		
	Front weights	500.0 mm (19.7 in)		
J	Wheel base	1970.0 mm (77.6 in)		
K	Overall length	3290.0 mm (129.5 in)		
L	Rear axle to top of ROPS	1795.0 mm (70.7 in)		
M	Drawbar to rear axle	226.0 mm (8.9 in)		
N	Ground to top of ROPS when folded	1927.0 mm (75.9 in)	1957.0 mm (77.0 in)	
	To top of exhaust (Optional)	2300.0 mm (90.6 in)	2317.0 mm (91.2 in)	

4WD Tractor dimension

Dimension		Workmaster™ 50	Workmaster™ 60	Workmaster™ 70
	Tire size	Front : 9.5X24 Rear : 14.9X28	Front : 9.5X24 Rear : 14.9X28	Front : 9.5X24 Rear : 14.9X28
A	Overall width	1714.0 mm (67.5 in)		
B	Under front axle	405.0 mm (15.9 in)		
C	Front standard track setting	1322.0 mm (52.0 in)		
D	Rear standard track Setting	1336.0 mm (52.6 in)		
F	Less cab (top of seat/ROPS)	2478.0 mm (97.6 in)		
G	Under standard drawbar	456.0 mm (18.0 in)		
H	Weight carrier	175.0 mm (6.9 in)		
	Front weights	389.0 mm (15.3 in)		
J	Wheel base	1960.0 mm (77.2 in)		
K	Overall length	3404.0 mm (134.0 in)		
L	Rear axle to top of ROPS	1795.0 mm (70.7 in)		
M	Drawbar to rear axle	226.0 mm (8.9 in)		
N	Ground to top of ROPS when folded	1927.0 mm (75.9 in)	1957.0 mm (77.0 in)	
	To top of exhaust (Optional)	2317.0 mm (91.2 in)		

Tractor dimension with R4 and R3 tire

Dimension		2WD	4WD	4WD
	Tire size	Front : 11Lx15F3 Rear : R4 – 18.4x24	Front : 12.4x20 Rear : R4 – 18.4x24	Front : 9.5x24 Rear : R3 – 16.9x24
A	Overall width	1347.0 mm (53.0 in)		
B	Under front axle	478.3 mm (18.8 in)	418.7 mm (16.5 in)	411.23 mm (16.19 in)
C	Front standard track setting	1424.8 mm (56.1 in)	1540.5 mm (60.6 in)	1320.26 mm (51.98 in)
D	Rear standard track setting	1438.0 mm (56.6 in)		1438.04 mm (56.62 in)
F	Less cab (top of seat/ROPS)	1681.27 mm (66.19 in) / 2501.8 mm (98.5 in)	1673.87 mm (65.90 in) / 2496.4 mm (98.3 in)	1666.37 mm (65.61 in) / 2500.0 mm (98.4 in)
G	Under standard drawbar	464.1 mm (18.3 in)	470.0 mm (18.5 in)	462.52 mm (18.21 in)
H	Weight carrier	119.12 mm (4.69 in)		
	Front weights	334.38 mm (13.16 in)		
J	Wheel base	1970.5 mm (77.6 in)	1959.0 mm (77.1 in)	
K	Overall length	3460.5 mm (136.2 in)		

MidWestTech | New Holland Workmaster 50, 60, 70 Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >