SERVICE MANUAL

W190D
Stage IV
Wheel Loader

Part number 48144035
English
June 2017

NEW HOLLAND CONSTRUCTION

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publication... Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Engine 10

[10.001] Engine and crankcase 10.1

[10.202] Air cleaners and lines 10.2

[10.500] Selective Catalytic Reduction (SCR) exhaust treatment 10.3

[10.400] Engine cooling system 10.4

[10.414] Fan and drive 10.5

[10.310] Aftercooler 10.6

[10.304] Engine lubrication system 10.7

Transmission 21

[21.113] Powershift transmission 21.1

[21.155] Powershift transmission internal components 21.2

[21.700] Torque converter 21.3

Four-Wheel Drive (4WD) system 23

[23.314] Drive shaft 23.1

Front axle system 25

[25.100] Powered front axle 25.1

[25.102] Front bevel gear set and differential 25.2

[25.108] Final drive hub, steering knuckles, and shafts 25.3

Rear axle system 27

[27.100] Powered rear axle 27.1

[27.106] Rear bevel gear set and differential 27.2

[27.120] Planetary and final drives 27.3

Brakes and controls 33

[33.202] Hydraulic service brakes 33.1

[33.110] Parking brake or parking lock 33.2

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

Hydraulic systems 35
[35.000] Hydraulic systems 35.1
[35.300] Reservoir, cooler, and filters 35.2
[35.106] Variable displacement pump 35.3
[35.359] Main control valve 35.4
[35.357] Pilot system 35.5
[35.752] Hydraulic fan drive cooling system 35.6
[35.701] Front loader arm hydraulic system 35.7
[35.723] Front loader bucket hydraulic system 35.8
[35.734] Tool quick coupler hydraulic system 35.9
Frames and ballasting 39
[39.100] Frame 39.1
Steering 41
[41.101] Steering control 41.1
[41.200] Hydraulic control components 41.2
[41.216] Cylinders 41.3
[41.910] Auxiliary steering 41.4
Wheels 44
[44.511] Front wheels 44.1
[44.520] Rear wheels 44.2
Cab climate control 50
[50.200] Air conditioning 50.1
Electrical systems 55
[55.100] Harnesses and connectors 55.1
[55.301] Alternator 55.2
[55.302] Battery 55.3
[55.988] Selective Catalytic Reduction (SCR) electrical system 55.4

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

[55.989] Exhaust Gas Recirculation (EGR) electrical system 55.5
[55.512] Cab controls 55.6
[55.530] Camera 55.7
[55.DTC] FAULT CODES 55.8
Front loader and bucket 82
[82.100] Arm 82.1
[82.300] Bucket 82.2
Platform, cab, bodywork, and decals 90
[90.150] Cab 90.1
[90.105] Machine shields and guards 90.2

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

Loader bucket control cylinder - General specification

Bucket cylinder	Approximate weight: **199.2 kg (439.2 lb)**

Loader bucket control cylinder - Torque

Gland bolt of the bucket cylinder	**420 – 500 N·m (310 – 369 lb ft)**

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >


B. If you do not find damage and the display indicates only normal readings, erase the fault code and continue operation.

Wiring harnesses - Electrical schematic sheet 17 (55.100)

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

B. If you do not find damage and the display indicates only normal readings, then erase the fault code and continue operation.


MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

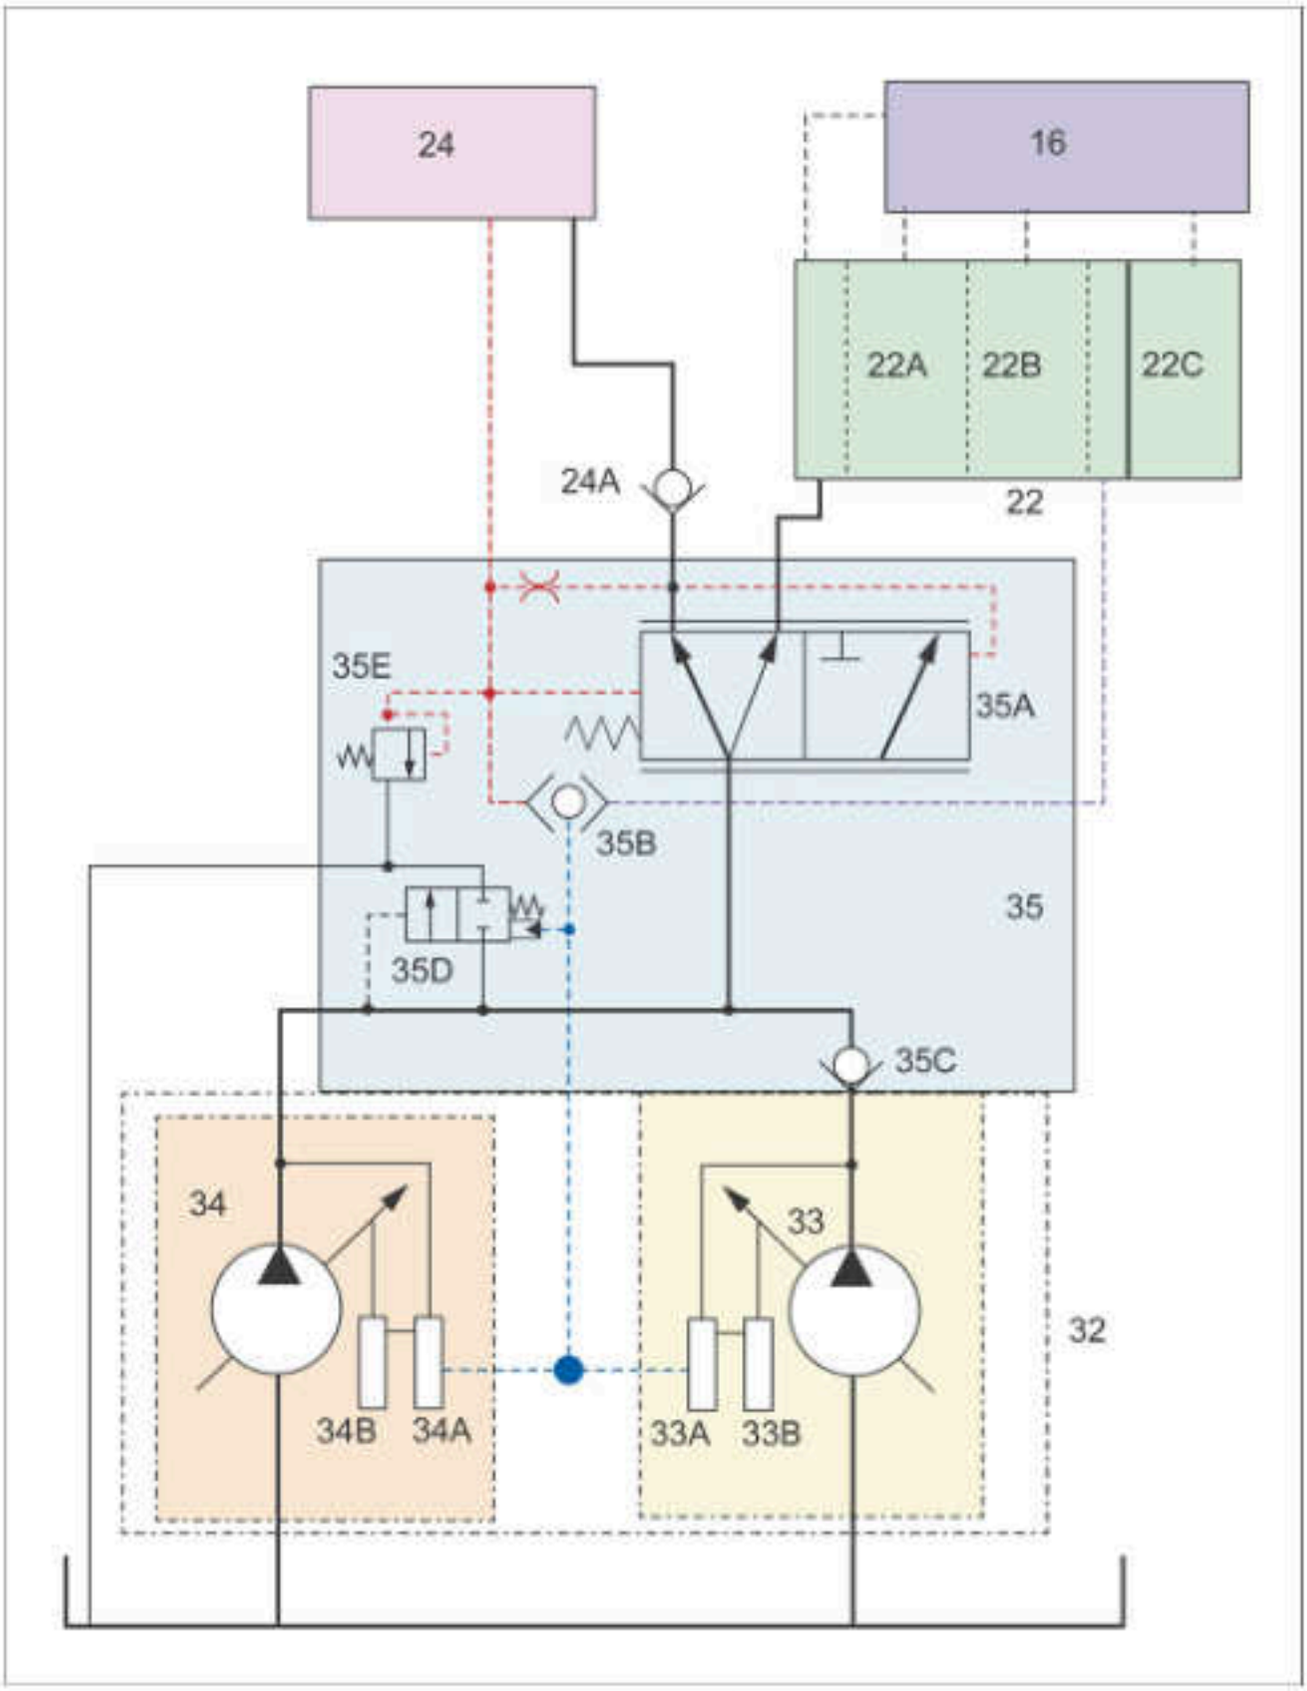

RDPNYWHL03GHAN 1

Component Flow Chart

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publicat... Order the manual at mid-west-tech.com >

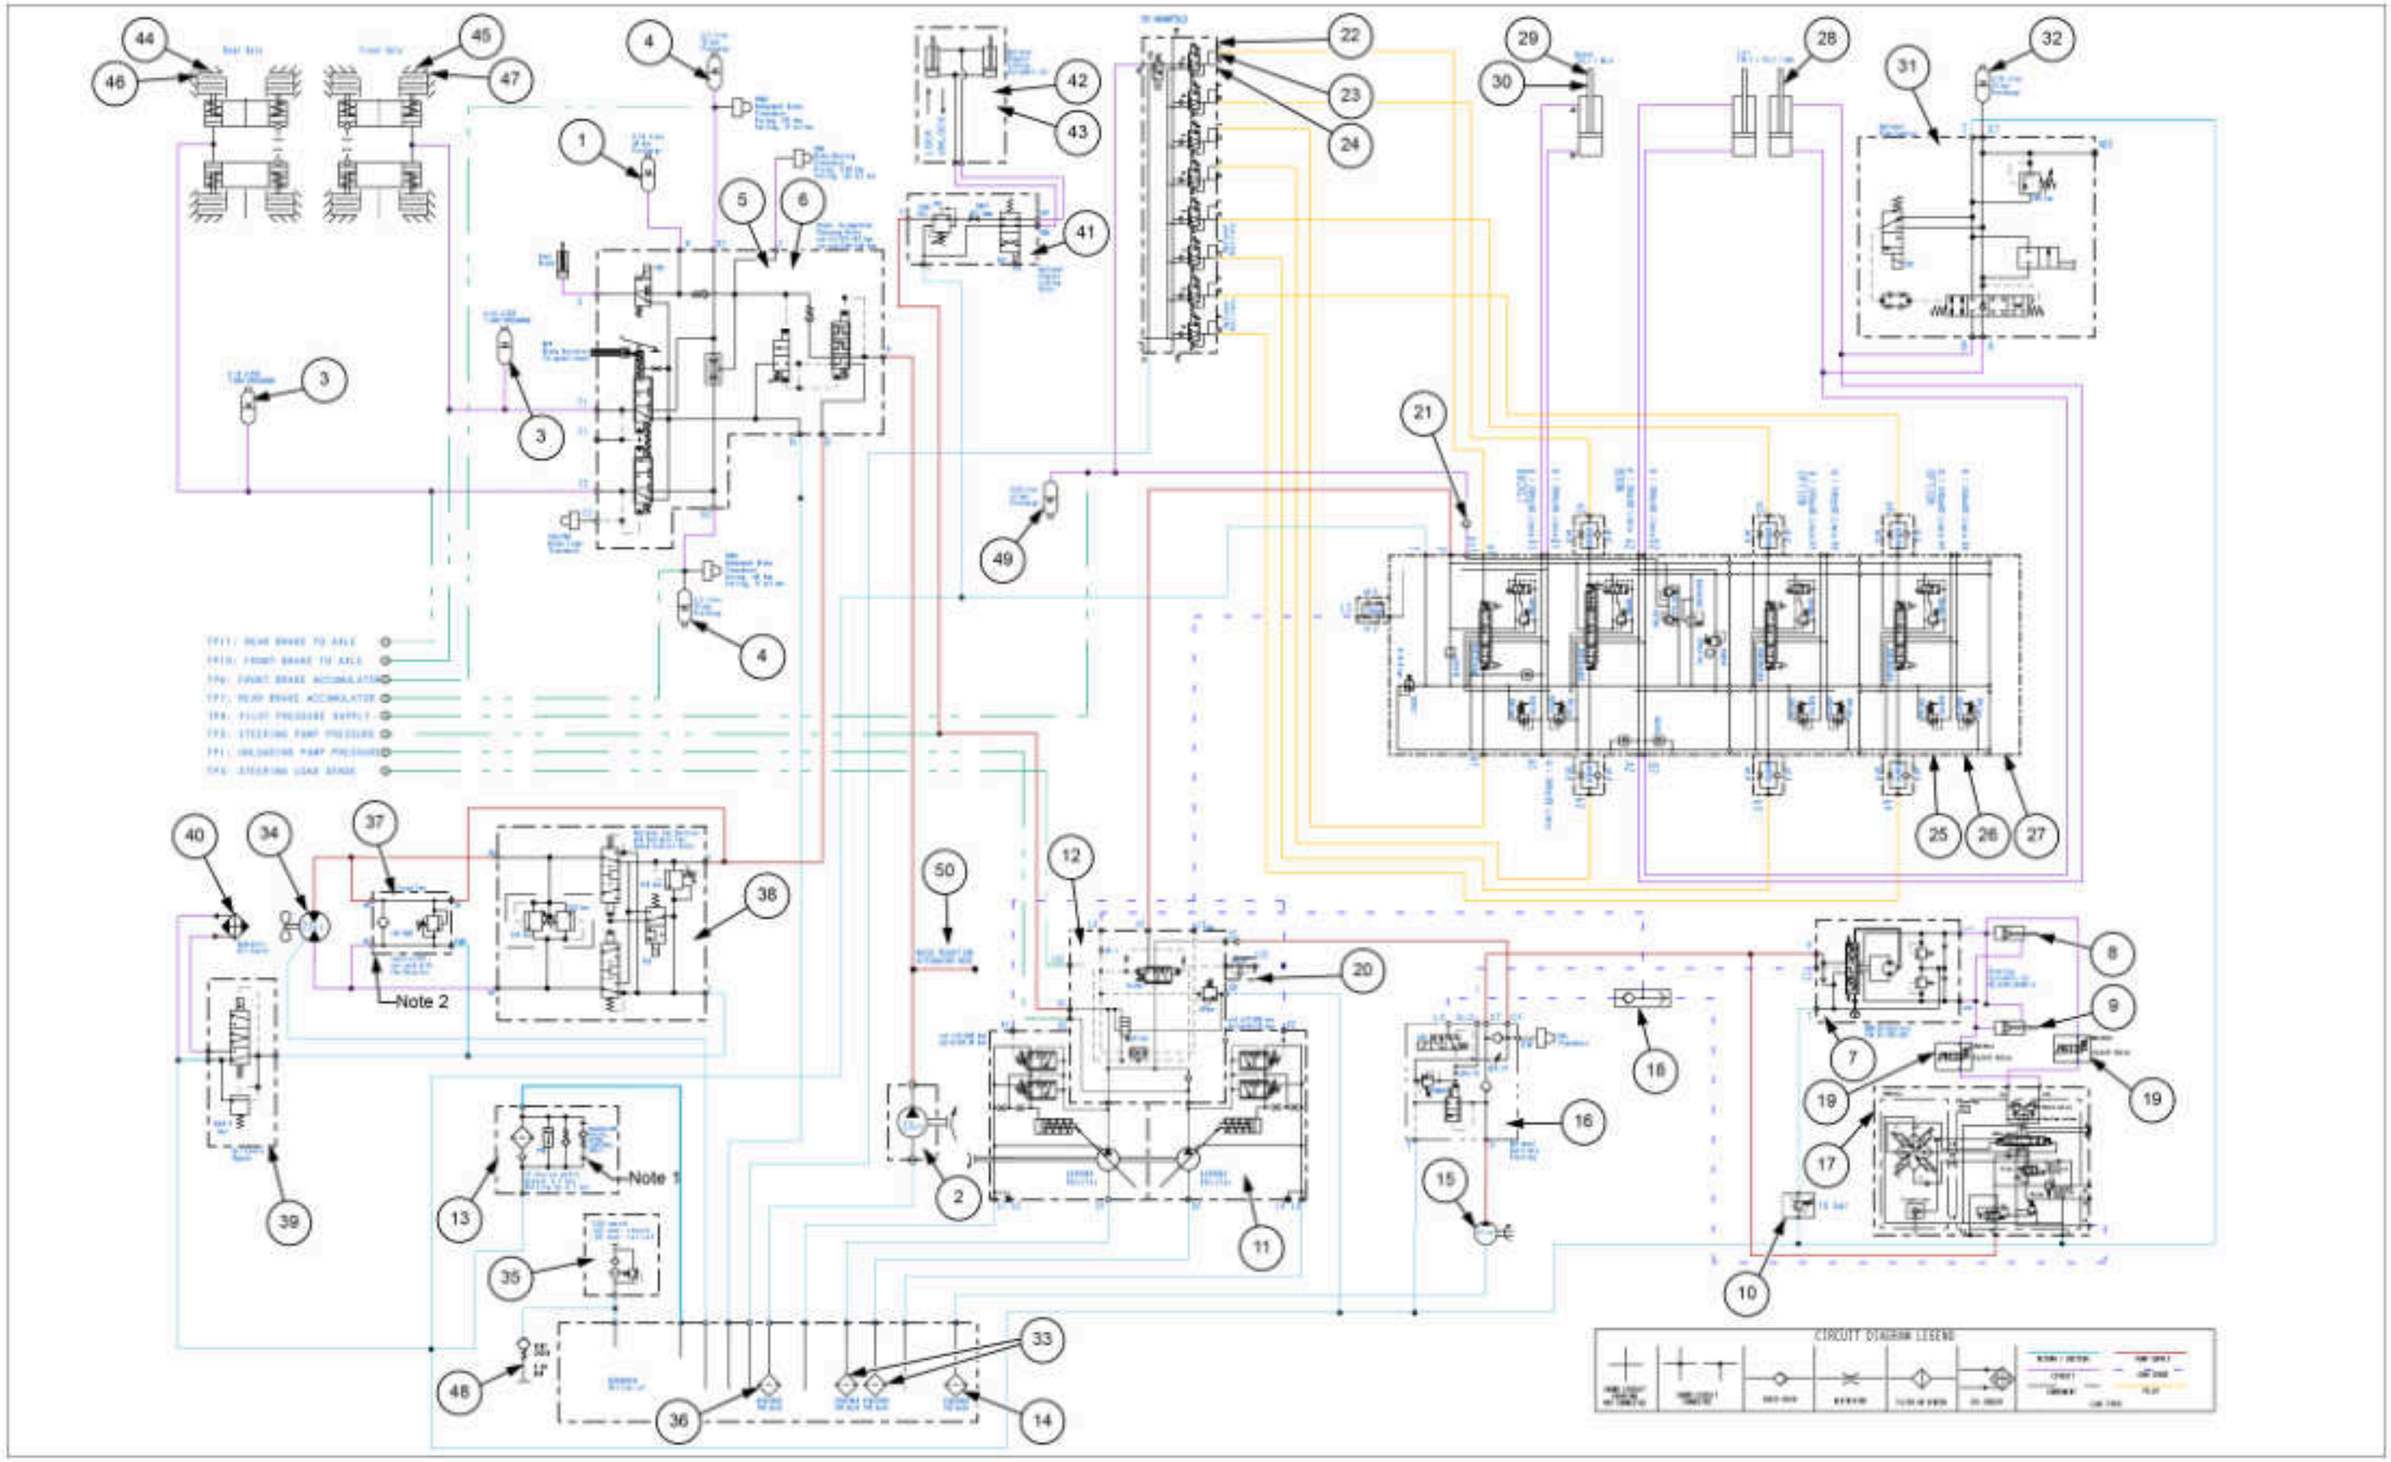

MidWestTech | New Holland W190D Stage IV Wheel Loader Service Manual | Publication 48144035
Order the manual at mid-west-tech.com >