SERVICE MANUAL

CornMaster™ 9208-22
CornMaster™ 9212-20
CornMaster™ 9212-22
CornMaster™ 9216-20
CornMaster™ 9216-22
CornMaster™ 9218-20
CornMaster™ 9218-22

Corn Header

Part number 51510606
1st edition English
July 2018

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22, 9218-20, 9218-22 Corn Header Service Manual | Publication 51510606

Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Hydraulic systems 35

[35.000] Hydraulic systems 35.1

[35.603] Deck plate hydraulic system 35.2

[35.910] Head and header hydraulic drive 35.3

Electrical systems 55

[55.000] Electrical system 55.1

[55.100] Harnesses and connectors 55.2

[55.404] External lighting 55.3

[55.421] Feeding control system 55.4

[55.662] Header height control 55.5

[55.785] Precision farming system 55.6

[55.995] Chopper slip clutch monitoring system 55.7

Attachments/Headers 58

[58.100] Attachment/Header support and drives 58.1

[58.120] Attachment/Header feed auger 58.2

[58.130] Attachment/Header frame 58.3

[58.208] Corn header shields and guards 58.4

[58.210] Corn header feed chain and rollers 58.5

[58.218] Corn header feeder structure 58.6

[58.220] Corn header structure 58.7

[58.224] Header drive 58.8

[58.228] Rotating dividers 58.9

[58.230] Stalk choppers 58.10

[58.414] Row-independent header gearboxes 58.11

Lubrication system 71

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Foreword - Important notice regarding equipment servicing 3
Personal safety 4
Safety rules 7
Safety rules - Ecology and the environment 8
Safety signs 9
Basic instructions - Shop and assembly 24
Torque - Minimum tightening torques for normal assembly 26
Torque - Standard torque data for hydraulics 31
Hydraulic contamination 33
Basic instructions - Chain Wear Tables - Roller Chains 34
Attachments/Headers - Basic instructions 36
General specification 38
Capacities 39
Product identification 44
Product overview - Machine orientation 45

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

Contents

Hydraulic systems - 35

Hydraulic systems - 000

TECHNICAL DATA

Hydraulic systems

General specification - Deck plate cylinder 3

Hydraulic motors

General specification - Auger divider motor 4

FUNCTIONAL DATA

Hydraulic systems

Hydraulic schematic frame 01 5

Hydraulic schematic frame 02 - Auger divider Motors 6


Hydraulic schematic frame 03 - Deck plate - open 7

Hydraulic schematic frame 04 - Deck plate - close 8

Component localization - Rigid hydraulic systems 9

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

Hydraulic systems - General specification - Deck plate cylinder

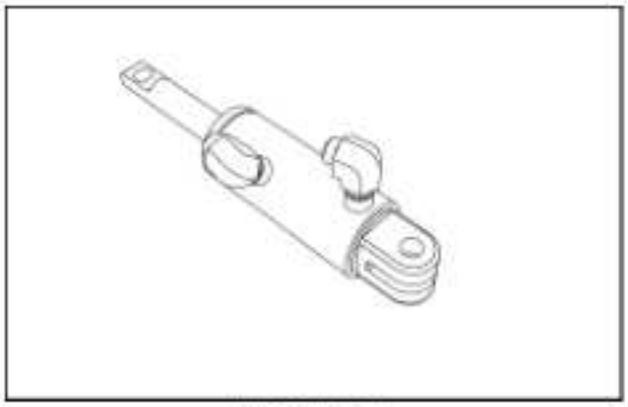


NHLT7N8-00106AA 1

Deck plate cylinder

Cylinder data	Specifications
Type	For combine header deck plate adjustment.
Maximum working pressure	**103 bar (1500 psi)**


MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

X-983HHL-A - TO SENSOR DIVIDER HARNESS (84146319) (Receptacle)

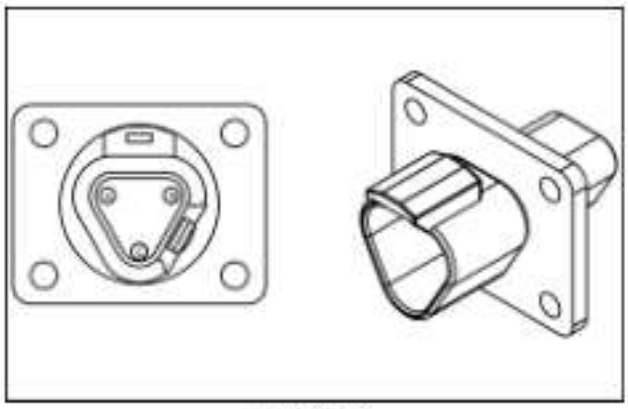


84146319 37

84146319

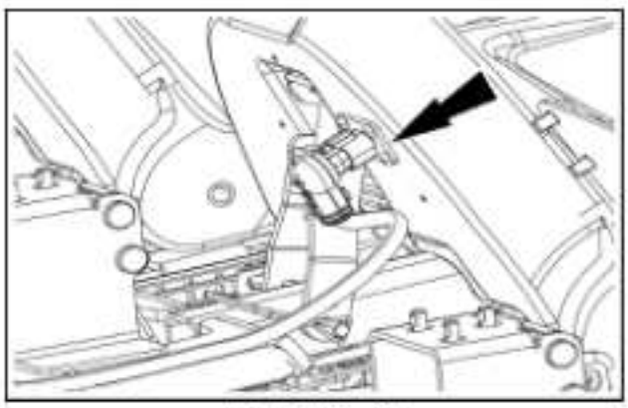

NHL16GHE009AA 38

Connector X-983HHL-A is located at the hood of the header.

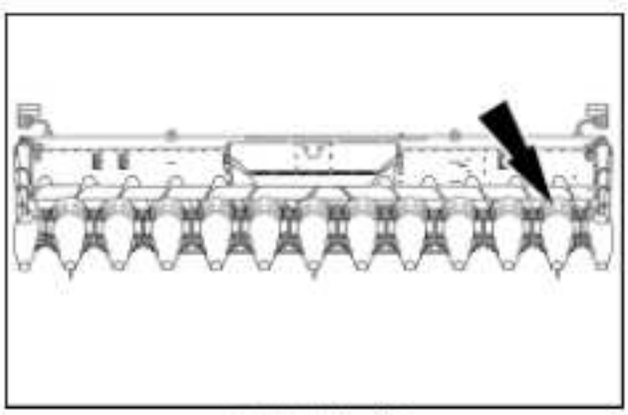

NHL16GHE010AA 39

Connector X-983HHL-A is located at the left side of the header.

Pin	From	Wire	Description	Color-Size	Frame
A	**X-981L-B (Plug) pin A** - TO TOP BEAM OR CENTER HARNESS (47416266)	SHE-003L	SIGNAL GND	BL - 1.0	**SHEET 03 - CORN HEAD ELECTRICAL**
B	**X-981L-B (Plug) pin B** - TO TOP BEAM OR CENTER HARNESS (47416266)	SHE-002L	SENSOR SUPPLY	PK - 1.0	**SHEET 03 - CORN HEAD ELECTRICAL**
C	**X-981L-B (Plug) pin C** - TO TOP BEAM OR CENTER HARNESS (47416266)	SHE-001L	POT SIGNAL	YE - 1.0	**SHEET 03 - CORN HEAD ELECTRICAL**

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

Install chopper lineshaft gearbox - sixteen row and eighteen row headers 60

DIAGNOSTIC

Gathering chain

Troubleshooting 63

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >


WARNING
Shield is open.
Stand clear.
Replace or close shield before operating machine.
Failure to comply could result in death or serious injury.

Quantity: 1 or 2
84011345




84011345_A 36

(10) LH backsheet above the auger drive shield.

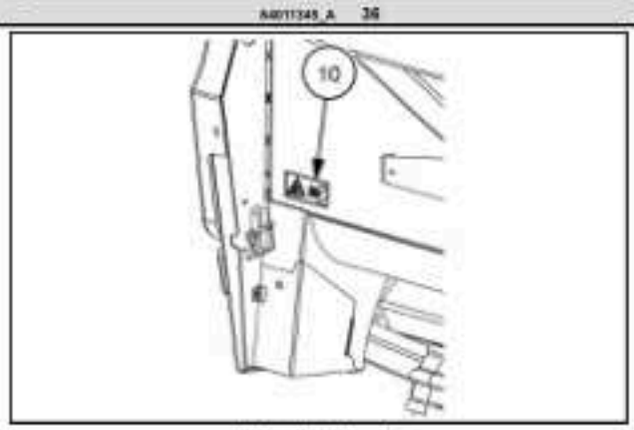


NHL*80GH80074AA 37

(10) RH backsheet above the auger drive shield (Headers with split auger drive only).

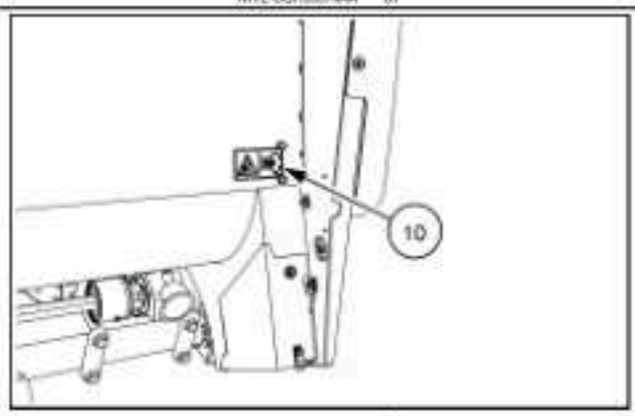


NHL*TMH80082AA 38

WARNING
Knife tip path
Keep hands and feet away.
Failure to comply could result in death or serious injury.
Quantity: 1
84593097

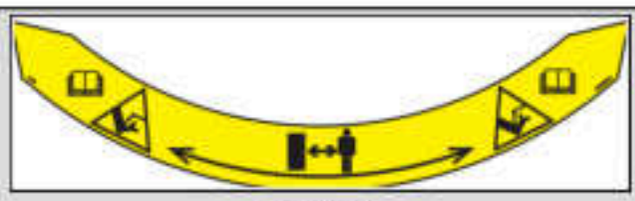

84593097 39


(11) On the outer LH side chopper guard

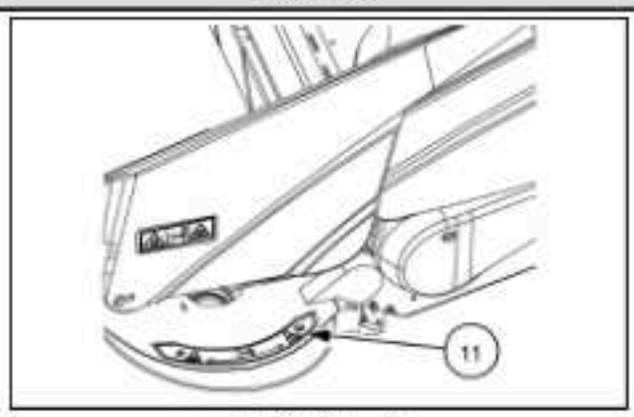

NHL*80GH80078AA 40


MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

Auger drive power flow

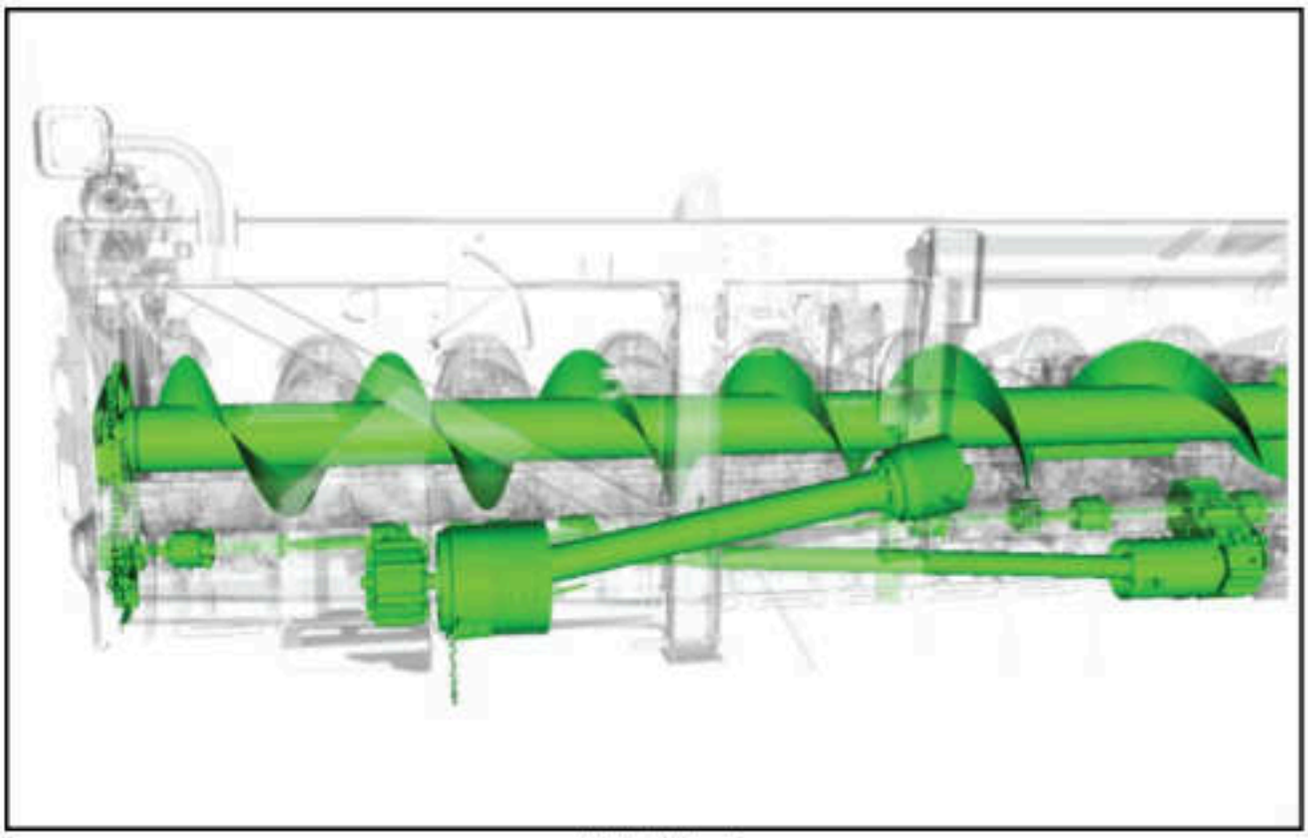

NHL18MH002MNA 2

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22... Order the manual at mid-west-tech.com >

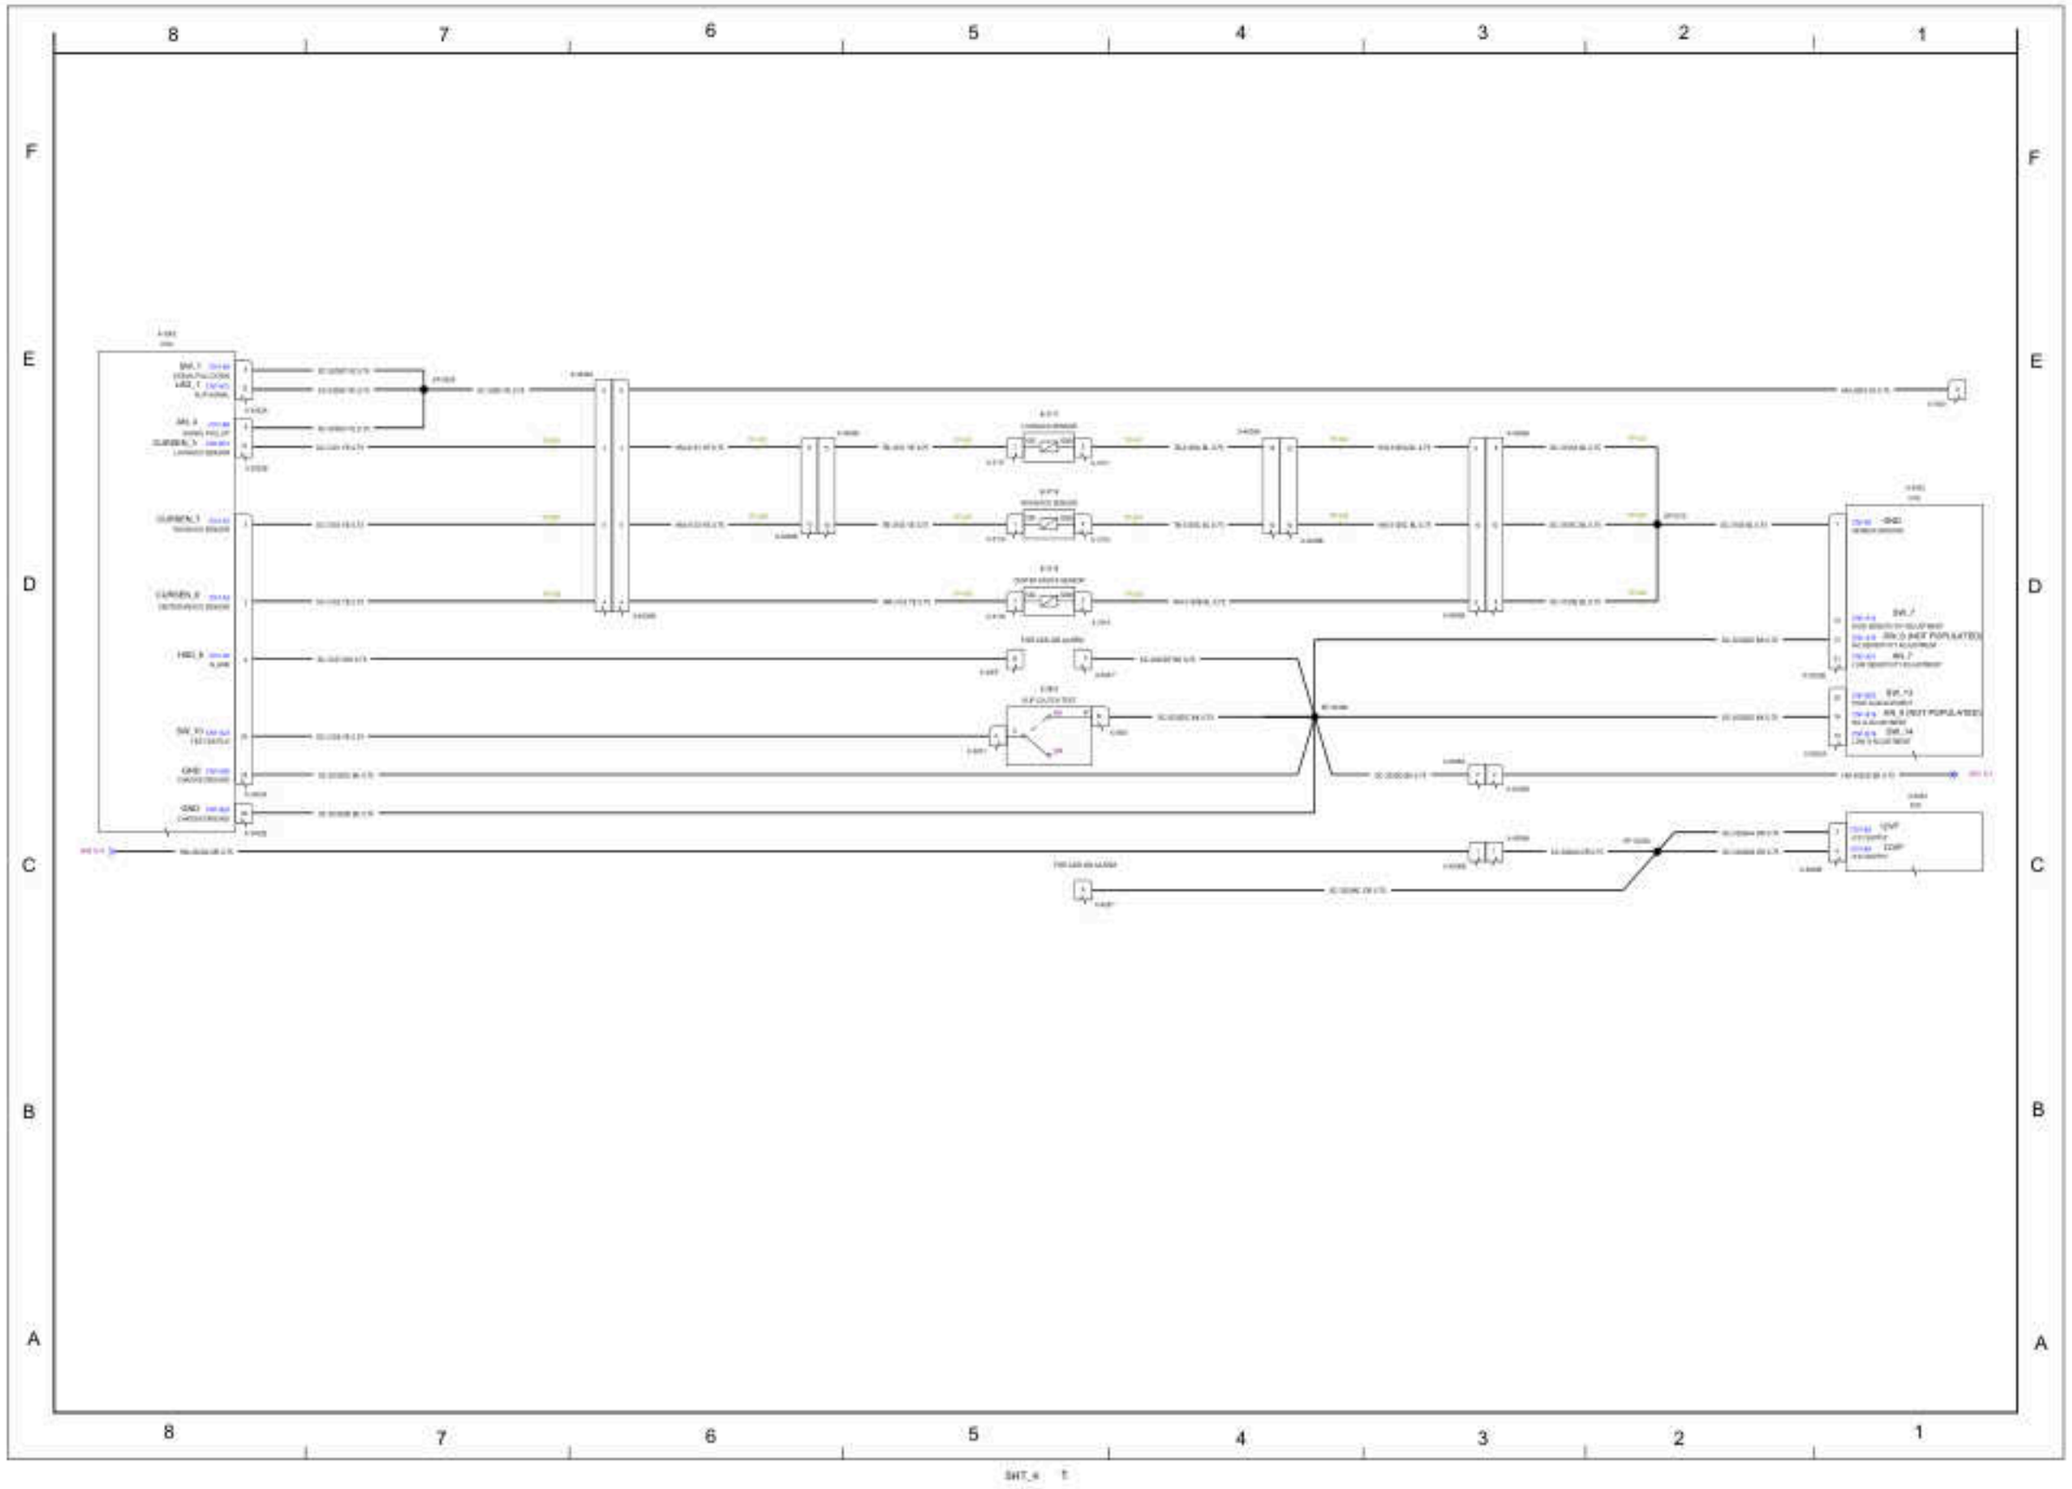

MidWestTech | New Holland CornMaster 9208-22, 9212-20, 9212-22, 9216-20, 9216-22, 9218-20, 9218-22 Corn Header Service Manual | Publication 51510606
Order the manual at mid-west-tech.com >