FARMALL 60B

Operator's Manual

52112706

CASE IH AGRICULTURE

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706

Order the manual at mid-west-tech.com >

Contents

1. General Notices for Safety

1-1. Before using the tractor 1-1

1-2. Safety Precautions (Read this for safety before using)

(1) Notices before using the tractor 1-4
(2) Notices when starting Engine 1-7
(3) Notices while operating/using the tractor 1-8
(4) Notices when connecting Implement 1-10
(5) Notices when towing the tractor 1-11
(6) Notices when transporting the tractor 1-11
(7) Notices when servicing the tractor after work 1-12
(8) Notices when handling Diesel Fuel 1-13
(9) Notices when leaving the tractor 1-14
(10) Notices relating to Toxic substances 1-14

1-3. Long-term storage

(1) Preparation for storage 1-15
(2) Check & Maintenance during storage 1-16
(3) Preparation for Reuse 1-16

1-4. Notices for "Use & Disposal" related to the environment 1-17

1-5. Symbols 1-18

1-6. Safety Decals

(1) Handling and Maintenance of Safety Decals 1-19
(2) Safety Decals and attaching position 1-19

2. Instruction for safe operation

(1) The name of each part 2-1

2-1. Boarding and Exiting the tractor

(1) Boarding the tractor 2-3
(2) Seat adjustment 2-4
(3) Tilting steering wheel 2-4
(4) Seat belt 2-5
(5) Ventilation 2-5
(6) Exiting the tractor 2-6

2-2. Safety device

(1) Hood (Bonnet) 2-7
(2) Fender 2-7
(3) PTO Safety cover and protection cap 2-7
(4) Roll-Bar (Safety frame) 2-8
(5) Cabin 2-8

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >

CONTENTS

3. Instruments and Controls

3-1. Instrument Panel and Front controls

(1) Instrument panel 3-2
(2) Key switch 3-5
(3) Turn signal light switch 3-5
(4) Light switch 3-5
(5) Horn switch 3-6
(6) Hazard warning light switch 3-6
(7) Grille work light switch (optional) 3-6
(8) PTO switch 3-7
(9) Shuttle lever 3-8
(10) Throttle lever 3-8
(11) Throttle pedal 3-8
(12) Clutch pedal 3-9
(13) Brake pedals 3-9

3-2. Right-hand controls and Cabin pillar

(1) Main gear shift lever 3-10
(2) Creeper gear lever (if fitted) 3-11
(3) Differential lock pedal 3-11
(4) Work light switch 3-12
(5) Window wiper switch (front, rear) 3-12
(6) Electrical power outlet socket (Cabin only) 3-13
(7) Indoor light (Cabin only) 3-13
(8) Audio player (cabin only) 3-13

3-3. Left-hand controls

(1) Range gear shift lever 3-14
(2) PTO gear lever (if fitted) 3-15
(3) Four wheel drive lever (4WD) 3-15
(4) GSP lever (if fitted) 3-15
(5) Parking brake lever 3-16
(6) Middle PTO lever (if fitted) 3-16

3-4. Hydraulic system

(1) Safety precautions 3-17
(2) Steering system 3-18
(3) Hydraulic lift Control (MHL) 3-18
(4) Remote control lever and Quick coupler (optional) 3-20
(5) Joystick lever (optional) 3-21
(6) Auto lift control (MHL) 3-22
(7) Hydraulic System Diagram 3-23

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >

CONTENTS

4. Operation and Work

4-1. Engine start and stop

(1) Engine start 4-1
(2) Start in cold weather 4-2
(3) Engine stop 4-2

4-2. How to Drive and how to Stop

(1) How to drive 4-3
(2) Changing speed 4-4
(3) Emergency Stop 4-4
(4) Stopping tractor 4-4
(5) Driving tractor on the road 4-5
(6) Parking 4-6
(7) Handling the Turbocharger 4-6

4-3. How to handle new tractor

(1) Check points 4-7
(2) Notices in handling new Tractor 4-7

4-4. Attaching Implement

(1) 3-point linkage 4-8
(2) Power take-off (PTO) shaft 4-11
(3) Hitch and Drawbar (optional) 4-13
(4) 7-Pole connector (optional) 4-14
(5) Technically maximum permissible mass 4-15
(6) Tires and Load capacity 4-16
(7) Adjusting Wheel tracks and tire replacement 4-17
(8) Using Front-end loader (optional) 4-20
(9) Adjusting Steering angle 4-22
(10) Recommended maximum specification of implements 4-23

4-5. Working in hazardous area 4-24

4-6. Driving Speed 4-25

5. Lubrication and Maintenance

5-1. Access for maintenance 5-1

5-2. Maintenance chart 5-2

5-3. Lubricants and Capacity 5-4

5-4. First 50 hour check 5-5

5-5. When the warning indicator lights

(1) Drain water from Fuel filter 5-6
(2) PTO Pressure Indicator 5-6


5-6. Check before starting (Daily check)

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >

3. Instruments and Controls

3-1. Instrument panel and Front controls

Important to owner, read carefully

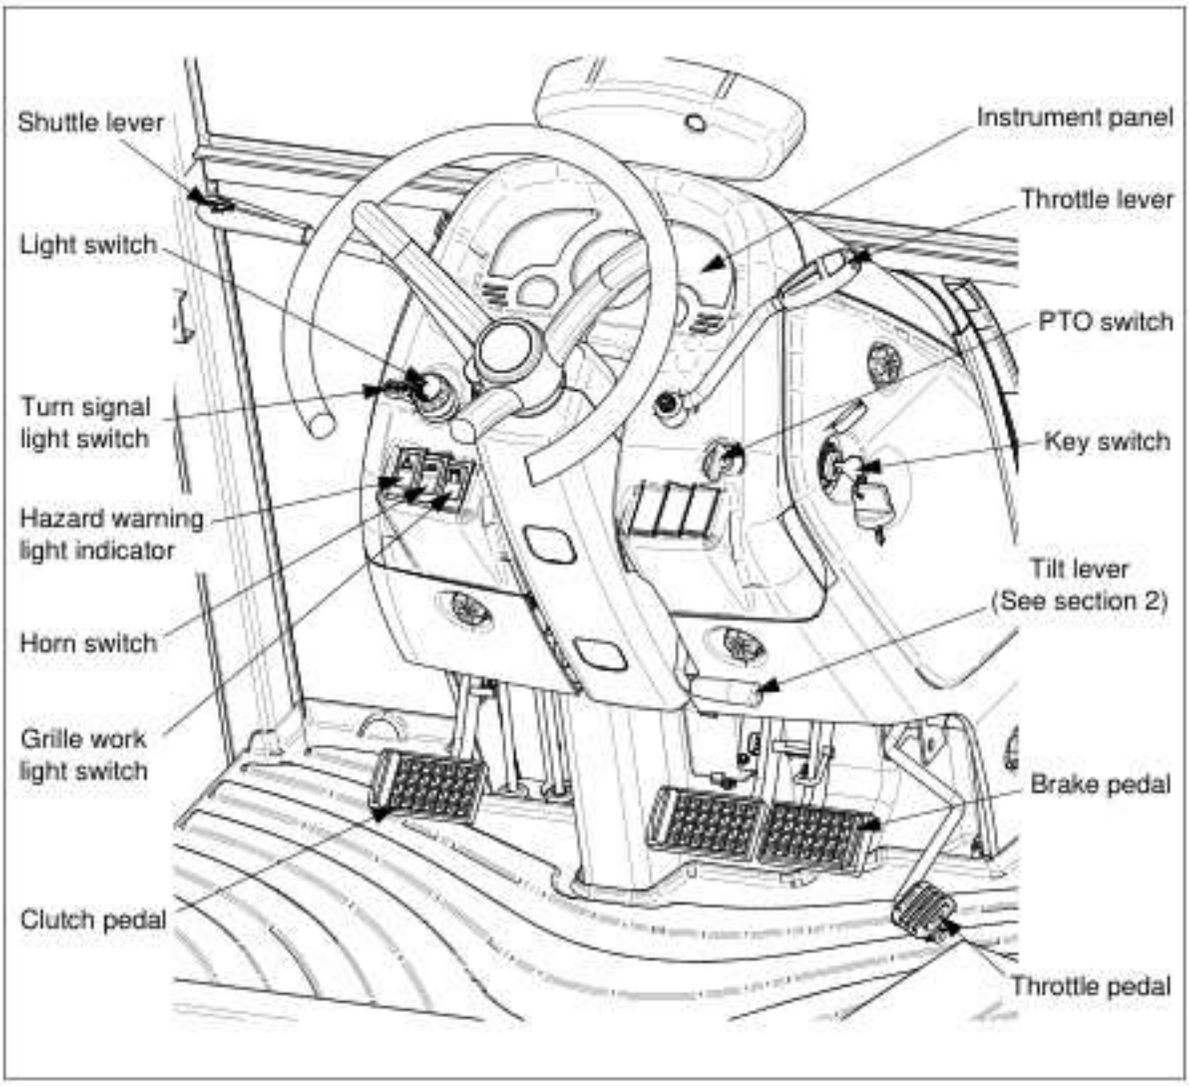

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >

(6) Tires and Load capacity

Axle No. (*)	Tires	Standard tire air pressure (kg/cm2)	Load capacity (x2) (kg)	Maximum mass(es) (kg)
1	9.5-20 6PR	2.2 (216 KPa, 31.3 psi)	1680 (3704 lb)	4500kg (9921 lb)
2	13.6-28 6PR	1.6 (157 KPa, 22.8 psi)	2860 (6305 lb)	
1	11.2-20 8PR	2.4 (235 KPa, 34.1 psi)	2240 (4938 lb)	4500kg (9921 lb)
2	14.9-28 8PR	1.8 (177 KPa, 25.6 psi)	3760 (8289 lb)	
Optional Tire				
1	280/85R20	1.6 (157 KPa, 22.8 psi)	2240 (4938 lb)	4500kg (9921 lb)
2	380/85R28	1.6 (157 KPa, 22.8 psi)	4120 (9083 lb)	
1	300/70R20	1.6 (157 KPa, 22.8 psi)	2120 (4674 lb)	4500kg (9921 lb)
2	380/70R28	1.6 (157 KPa, 22.8 psi)	3500 (7716 lb)	
1	280/70R-16	2.5 (245 KPa, 35.6 psi)	2240 (4938 lb)	4500kg (9921 lb)
2	380/70R-24	1.6 (157 KPa, 22.8 psi)	3300 (7275 lb)	
1	29x12.50-15	2.1 (206 KPa, 29.9 psi)	1552 (3422 lb)	4500kg (9921 lb)
2	44x18x20	2.1 (206 KPa, 29.9 psi)	3900 (8598 lb)	

(*) 1 : Front axle, 2 : Rear axle

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >

5-4. First 50 hour check

- After using first 50 hours, contact your authorized dealer for maintenance if possible.
  - Replace engine oil filter. (⇒ Refer to Every 300 hour check. *See page 5-16*)
  - Replace hydraulic oil filter. (⇒ Refer to Every 300 hour check. *See page 5-17*)
  - Check transmission / rear axle / hydraulics oil level
  - Check front axle oil level
  - Check and adjust parking brake
  - Check torque of exhaust manifold bolts
  - Check and adjust V-belts and tension
  - Tighten all cooling system hose connections
  - Check torque of safety cab or frame mounting bolts
  - Check torque of front end weight clamp bolts (Where fitted)
  - Check torque of wheel bolts and nuts
  - Check tire pressures and condition
  - Clean radiator, oil cooler and A/C condenser cores (Where fitted)
  - Check radiator coolant level and specific gravity
  - Check clutch pedal free play
  - Check brake adjustment and pedal equalization
  - Lubricate all grease fittings
  - Neutral start switches operative

MidWestTech | Case Farmall 60B Tractor Operator's Manual | Publication 52112706 Order the manual at mid-west-tech.com >