
OPERATOR'S MANUAL

Boomer 30
Boomer 35
Compact Tractor

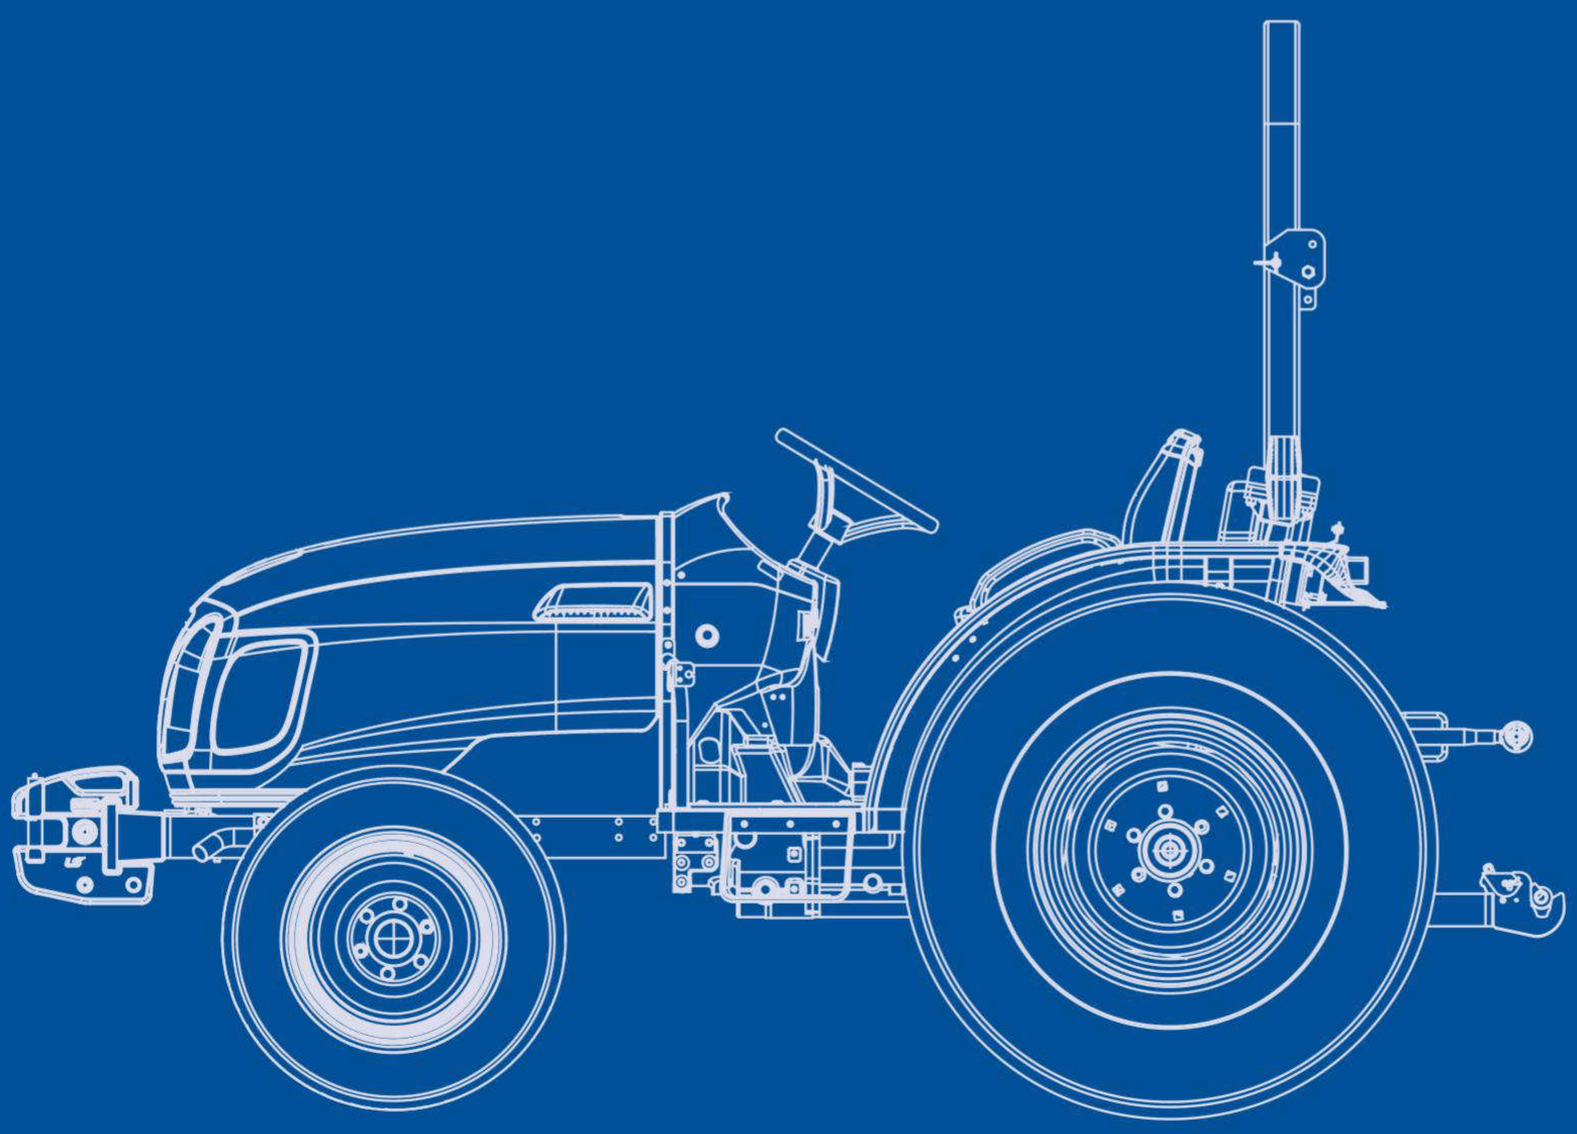

Part number 52112803
1st edition English
January 2013

NEW HOLLAND AGRICULTURE

Order the manual at mid-west-tech.com >

Contents

1. General Notices for Safety

1-1. Before using the tractor 1-1

1-2. Safety Precautions (Read this for safety before using)

(1) Notices before using the tractor 1-4
(2) Notices when starting Engine 1-7
(3) Notices while operating/using the tractor 1-8
(4) Notices when connecting Implement 1-10
(5) Notices when towing the tractor 1-11
(6) Notices when transporting the tractor 1-11
(7) Notices when servicing the tractor after work 1-12
(8) Notices when handling Diesel Fuel 1-13
(9) Notices when leaving the tractor 1-14
(10) Notices relating to Toxic substances 1-14

1-3. Long-term storage

(1) Preparation for storage 1-15
(2) Check & Maintenance during storage 1-16
(3) Preparation for Reuse 1-16

1-4. Notices for "Use & Disposal" related to the environment 1-17

1-5. Symbols 1-18

1-6. Safety Decals

(1) Handling and Maintenance of Safety Decals 1-19
(2) Safety Decals and attaching position 1-19

2. Instruction for Safe operation

(1) The name of each part 2-1

2-1. Boarding and Exiting the tractor

(1) Boarding the tractor 2-2
(2) Driver's seat (HST type) 2-2
(3) Seat adjustment 2-3
(4) Tilt steering wheel 2-3
(5) Seat belt 2-4
(6) Exiting the tractor 2-4

2-2. Safety device

(1) Hood (Bonnet) 2-5
(2) Fender 2-5
(3) PTO safety cover and protection cap 2-5
(4) Foldable Safety frame (ROPS) (Optional) 2-6

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

Contents

3. Instruments and Controls

3-1. Instrument panel and Front controls

(1) Instrument panel 3-2
(2) Key switch 3-5
(3) Turn signal light switch 3-5
(4) Light switch 3-5
(5) Horn switch 3-6
(6) Hazard warning light switch 3-6
(7) Cruise control switch (HST type) 3-6
(8) PTO switch 3-7
(9) Grille work light switch (if fitted) 3-7
(10) Clutch pedal (Mechanical) 3-8
(11) Shuttle lever (Mechanical) 3-8
(12) Throttle lever 3-8
(13) Throttle pedal (mechanical) 3-9
(14) Brake pedals 3-9
(15) HST forward/reverse pedal (HST type) 3-10

3-2. Left / Right-hand Controls

(1) Main gear shift lever (Mechanical) 3-12
(2) Differential lock pedal 3-12
(3) Rear work light switch 3-13
(4) Range gear shift lever 3-13
(5) PTO gear lever (if fitted) 3-13
(6) Middle PTO lever (if fitted) 3-14
(7) 4WD lever 3-14
(8) Parking brake lever 3-15

3-3. Hydraulic System

(1) Safety precautions 3-16
(2) Steering system 3-17
(3) Hydraulic lift Control 3-17
(4) Down speed control knob 3-18
(5) Remote control lever and Quick coupler (optional) 3-18
(6) Joystick lever (optional) 3-20
(7) Hydraulic System Diagram 3-21

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

Contents

4. Operation and Work

4-1. Engine start and stop

(1) Engine start 4-1
(2) Start in cold weather 4-3
(3) Engine stop 4-3

4-2. How to Drive and how to Stop

(1) How to drive 4-4
(2) Changing speed 4-6
(3) Emergency Stop 4-7
(4) Stopping tractor 4-8
(5) Driving tractor on the road 4-9
(6) Parking 4-10

4-3. How to handle new tractor

(1) Check points 4-11
(2) Notices in handling new Tractor 4-11

4-4. Attaching Implement

(1) 3-point linkage 4-12
(2) Power take-off (PTO) shaft 4-16
(3) Hitch and Drawbar (optional) 4-18
(4) 7-Pole connector (optional) 4-19
(5) Technically maximum permissible mass 4-20
(6) Tires and Load capacity 4-21
(7) Adjusting wheel tracks and tire replacement 4-22
(8) Using Front-end loader (optional) 4-24
(9) Adjusting steering angle 4-26
(10) Recommended maximum specification of implements 4-27

4-5. Driving Speed 4-28

5. Lubrication and Maintenance

5-1. Access for Maintenance 5-1
5-2. Maintenance chart 5-2
5-3. Lubricants and Capacity 5-6
5-4. First 50 hour check 5-7

5-5. Check before Starting (Daily check)


(1) Engine oil 5-8
(2) Fuel tank 5-9
(3) Instrument panel & Indicators 5-9
(4) Turn signal lights, Lights and Horn 5-10
(5) Engine coolant 5-11
(6) Air cleaner (Dry type) 5-11

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

3. Instruments and Controls

3-1. Instrument panel and Front controls

Important to owner, read carefully

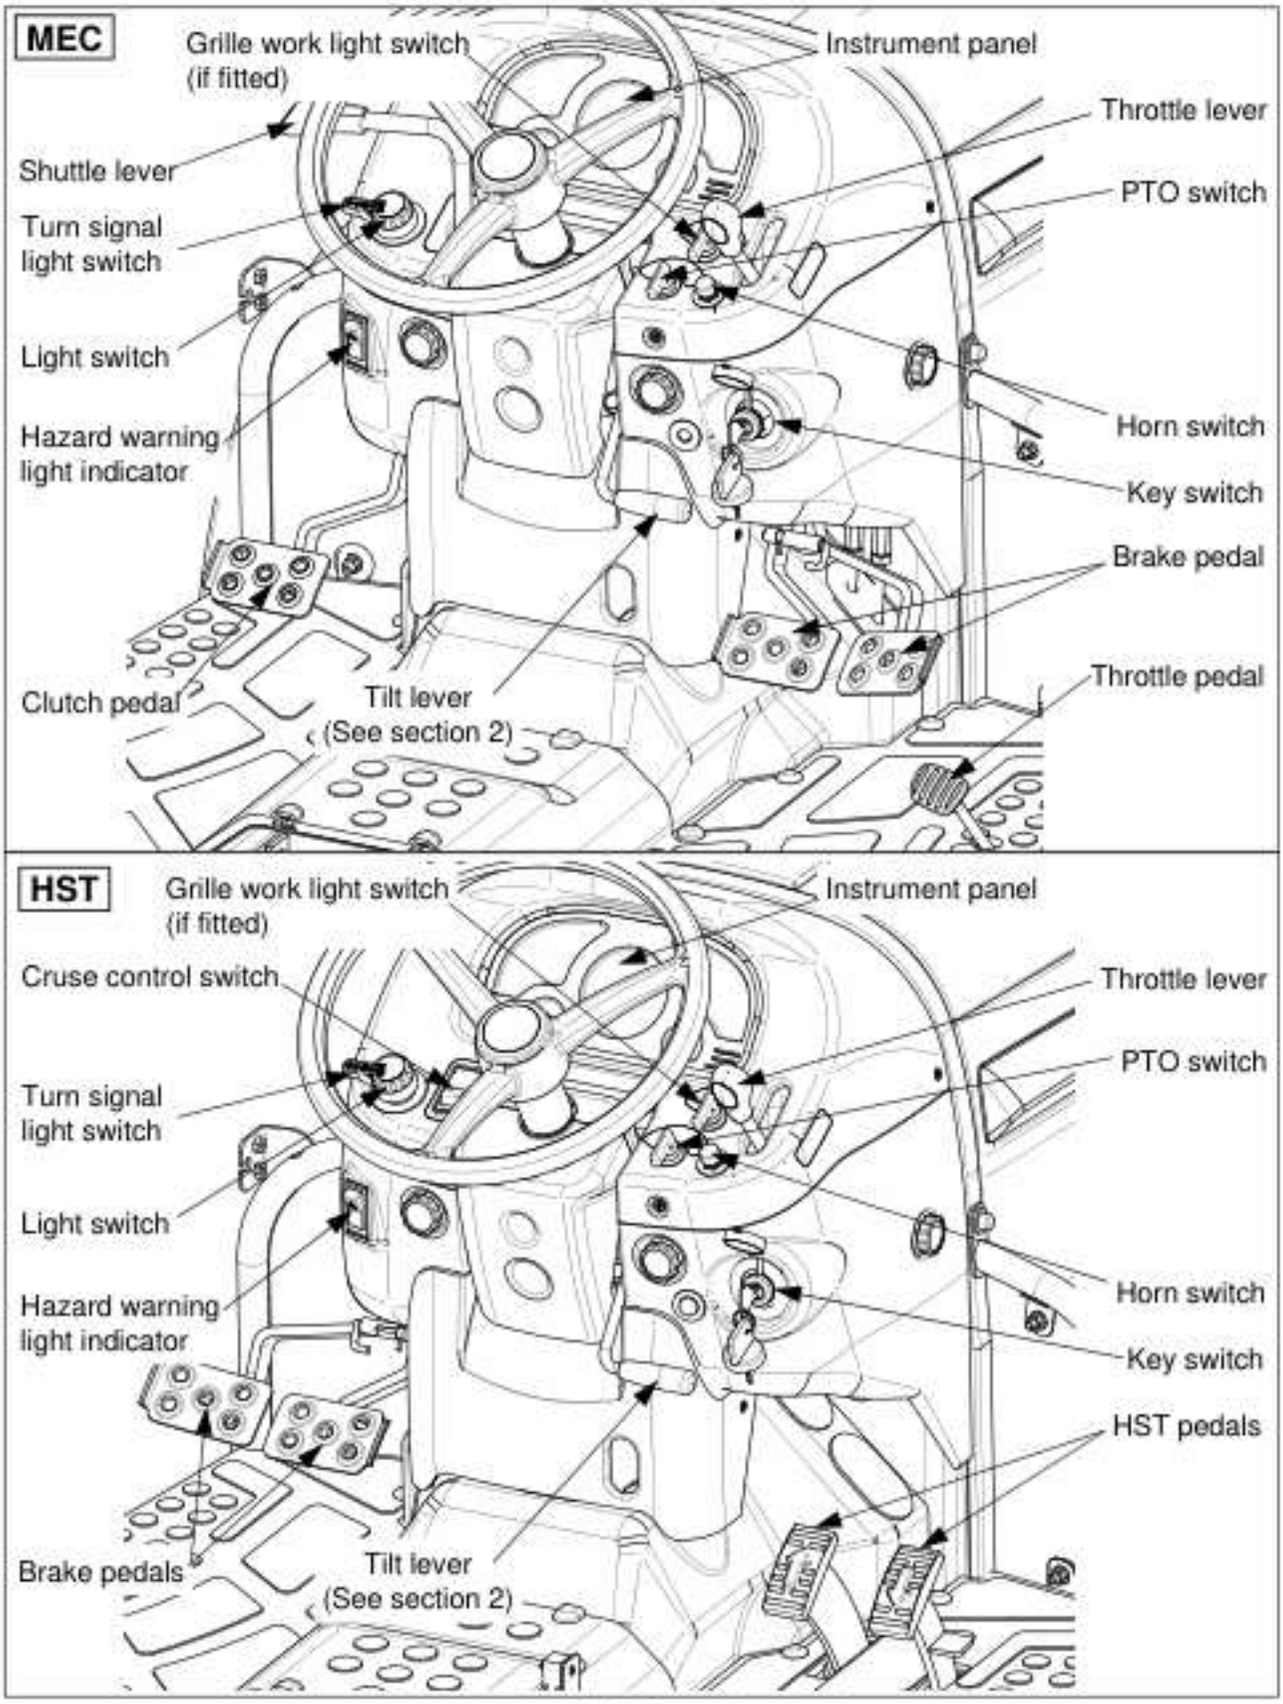

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

(10) Recommended maximum specification of implements

- When attaching implements to the tractor, refer to the followings recommended as maximum specification of each implement. DO NOT attach bigger implements then this specification. For other implements, contact your authorized dealer.

No.	Implements	Specification	Boomer 30	Boomer 35
1	Front loader	Max lift capacity (Bucket pivot point)	810 kg (1786 lb)	1021 kg (2251 lb)
2	Rotavator	Max tilling width	1380 mm (54.3 in)	1580 mm (62.2 in)
3	Backhoe	Max digging depth	2280 mm (89.8 in)	2280 mm (89.8 in)
4	Rotary cutter	Max working width	1524 mm (60 in)	1524 mm (60 in)
5	Mid mower	Max working width	1829 mm (70 in)	1829 mm (70 in)
6	Landscape lake	Max working width	1372 mm (54 in)	1372 mm (54 in)
7	Box blade	Max working width	1372 mm (54 in)	1372 mm (54 in)
8	Rear blade	Max working width	1524 mm (60 in)	1524 mm (60 in)

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >

5-4. First 50 hour check

- After using first 50 hours, contact your authorized dealer for maintenance if possible.
  - Replace engine oil filter. (⇒ Refer to Every 300 hour check. *See page 5-18*)
  - Replace hydraulic oil filter. (⇒ Refer to Every 300 hour check. *See page 5-19*)
  - Check transmission / rear axle / hydraulics oil level
  - Check front axle oil level
  - Check and adjust parking brake
  - Check torque of exhaust manifold bolts
  - Check and adjust V-belts and tension
  - Tighten all cooling system hose connections
  - Check torque of safety cab or frame mounting bolts
  - Check torque of front end weight clamp bolts (if fitted)
  - Check torque of wheel bolts and nuts
  - Check tire pressures and condition
  - Clean radiator, oil cooler and A/C condenser cores (if fitted)
  - Check radiator coolant level and specific gravity
  - Check clutch pedal free play
  - Check brake adjustment and pedal equalization
  - Lubricate all grease fittings
  - Neutral start switches operative

MidWestTech | New Holland Boomer 30, 35 Compact Tractor Operator's Manual | Pub... Order the manual at mid-west-tech.com >