Snorkelift.

Scissorlift

MODEL SL
27 - 35

Snorkel A FIGGIE INTERNATIONAL CO.

publication no. STJ-001-27/35
April 1982

MidWestTech | Snorkel SL27, SL35 Scissor Lift Operation, Maintenance and Repair Parts M... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

INTRODUCTION I
MANUFACTURER'S WARRANTY III
GENERAL DESCRIPTION V

SECTION I - OPERATOR'S SECTION ..... 1 - 1
Operating Characteristics & Limintations ..... 1 - 2
Platform Capacity ..... 1 - 2
Drive & Steer ..... 1 - 2
Operating Speeds ..... 1 - 2

Controls & Functions ..... 1 - 3
Ground Control Station ..... 1 - 3
Platform Control Station ..... 1 - 4
Outrigger/Lift/Drive Interlock ..... 1 - 6

Operating Procedures ..... 1 - 7
Operation ..... 1 - 7
Stowing & Securing Work Platform ..... 1 - 9
Emergency Operation ..... 1 - 10

General Safety Warnings & Cautions ..... 1 - 11
Driving Vehicle ..... 1 - 11
General Operating Precautions ..... 1 - 11
General Engine Operating Safety Precautions ..... 1 - 12
General Operator Safety Precautions ..... 1 - 13
Electrical Hazard ..... 1 - 14

Operator's Maintenance ..... 1 - 16

SECTION II - MAINTENANCE ..... 2 - 1
Preventive Inspection Maintenance ..... 2 - 2
Field Inspection Check List ..... 2 - 2
Chassis ..... 2 - 2
Scissors Arms ..... 2 - 2
Operator's Platform ..... 2 - 3
Engine ..... 2 - 3
Hydraulic Oil Reservoir ..... 2 - 3

Preventive Mechanical Maintenance ..... 2 - 4
General Lubrication Instructions ..... 2 - 4
Pressure Gun Application ..... 2 - 4
Drive Hub (Power Wheels) ..... 2 - 5
Minor Hinge or Bearing Points ..... 2 - 6
Lubrication Chart ..... 2 - 6
Engine ..... 2 - 7
Battery ..... 2 - 7

MidWestTech | Snorkel SL27, SL35 Scissor Lift Operation, Maintenance and Repair... Order the manual at mid-west-tech.com >

SECTION II (Continued)

Hydraulic System Components ..... 2 - 7
Hydraulic Reservoir ..... 2 - 8
Filters ..... 2 - 8
Suction ..... 2 - 8
Return ..... 2 - 9
Pump Adjustment ..... 2 - 9
Power Wheels ..... 2 - 11
Wheel Drive Motor ..... 2 - 11
Cylinders Overhaul ..... 2 - 11
Pilot Operated Holding Valve ..... 2 - 12
Hydraulic Pump - Removal & Replacement ..... 2 - 13

Platform Controller Adjustment ..... 2 - 15
Threshold Adjustment ..... 2 - 15
Drive Speed Adjustment ..... 2 - 15
Elevation Adjustment ..... 2 - 16


SECTION III - REPAIR PARTS ..... 3 - 1
Illustrations Index ..... 3 - 4

SECTION IV - OPTIONS INDEX ..... 4 - 1

APPENDIX - MANUFACTURER'S DATA
Torque Chart

Note: All communications concerning this equipment will be handled with greater efficiency and speed if the serial number - model number and date of purchase or delivery are given.

MidWestTech | Snorkel SL27, SL35 Scissor Lift Operation, Maintenance and Repair... Order the manual at mid-west-tech.com >

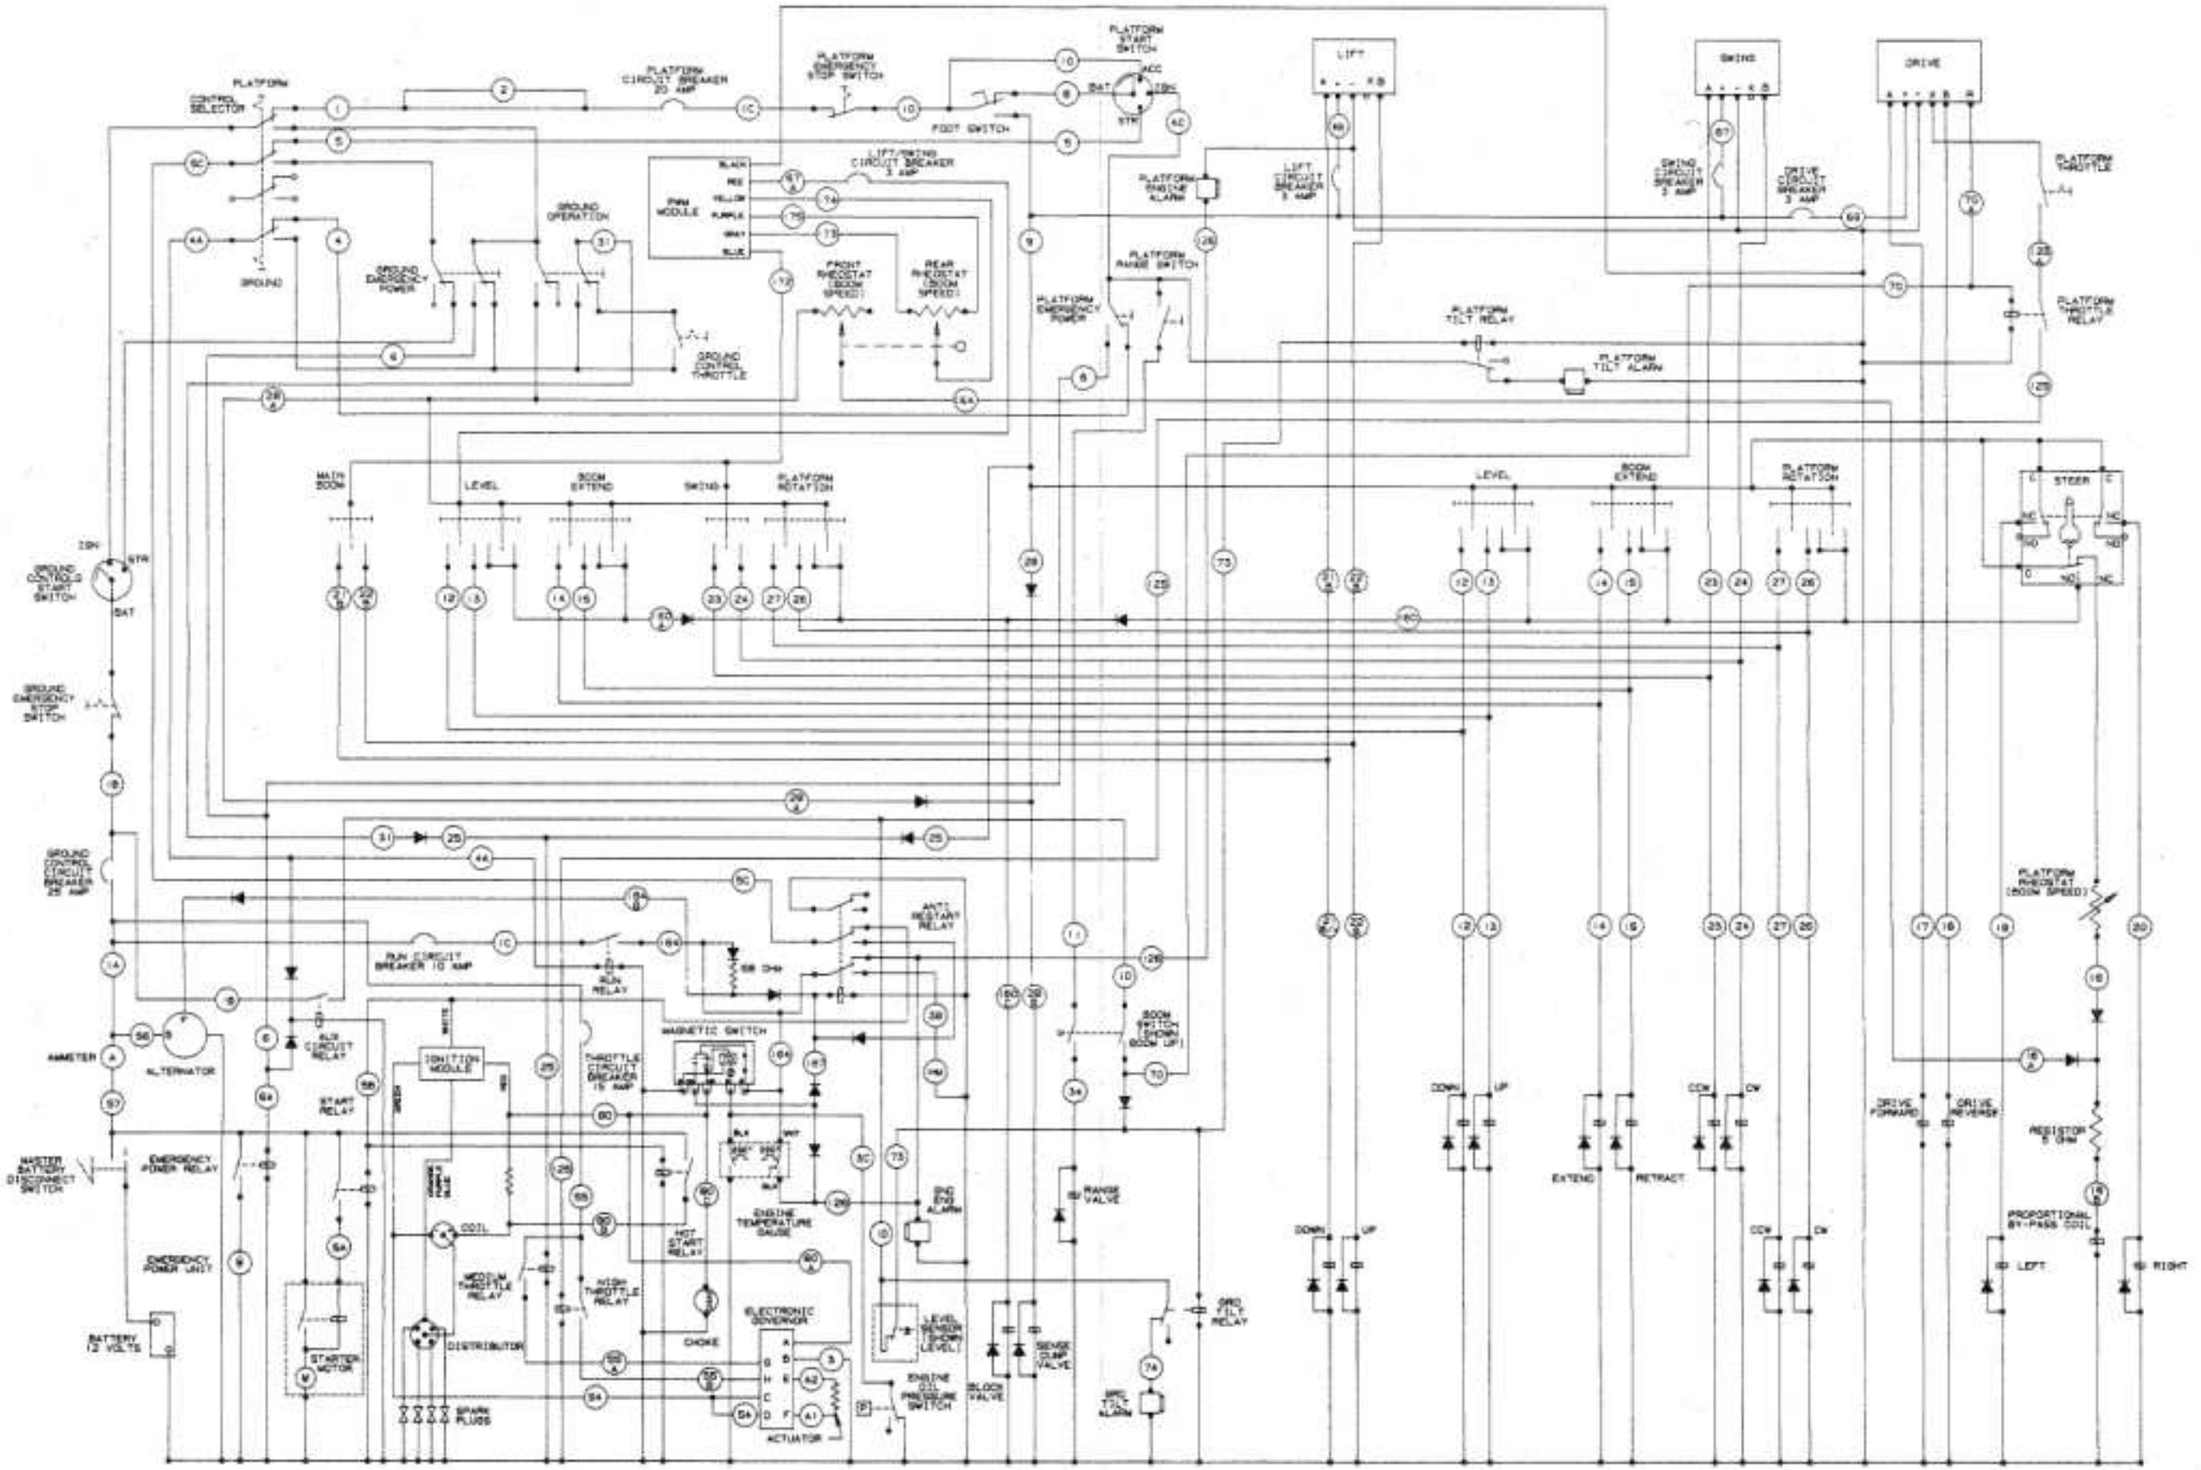

Snorkel

Page 33

TITLE
WIRING SCHEMATIC
FORD GASOLINE ENGINE
SNORKELIFT MODEL TS-A60

10821

Order the manual at mid-west-tech.com >