OPERATOR'S MANUAL

LW270.B
WHEEL LOADER

Revison Date: 06/2004

NEW HOLLAND
CONSTRUCTION

6040099301NA

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040...
Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT **PAGE**

FOREWORD ..... A-G
SAFETY RULES S1-S10
IDENTIFICATION DATA 2
TECHNICAL SPECIFICATIONS 3
SAFETY COMPONENTS 6
SAFETY PLATES AND LOCATION ON THE MACHINE 7
QUANTITATIVE SIDES OF SAFETY 11
OPERATIONAL RULES 13
CONTROLS 14
- Dashboard - Instruments and indicators 21
- Digital clock 25
- Cab right side switch board 28
- Starter switch 31
- Equipment controls 32

SAFETY CAB 34
- Door 34
- Operator's seat adjustment 36
- Safety belt 36
- Fire protection 37
- Power sources 37
- Climate control 38
- Windshield wiper 41

PRELIMINARY INSTRUCTIONS AND BREAK-IN PERIOD 42
OPERATION OF THE MACHINE 43
- Cold climate precautions 46
- Long storage of the machine 46
- Fording depth 47
- Electrical system main switch 47
- Equipment 48
- Measures to be taken in case of emergency 50
- Exausted batteries 50

MOVING THE MACHINE 53
- Towing 53
- Hauling the machine 56
- Lifting 58
- Safety bar 58
- On-road travelling 59

OPERATION OF THE MACHINE 60
- Practical operational recommendations 62

MAINTENANCE 65
- Access panels for maintenance and location of filling caps 68
- Main greasing points 70
- List of on-board tools 71
- Every 10 hours work 72
- Every 50 hours work 75
- Every 250 hours work 78
  - Tires and wheels 85
- Every 500 hours work 86
- Every 1000 hours work 90
- Every 1500 hours work 96
- Every 2000 hours work 98
- Every 6000 hours work 102
- Variable periodicity operations 103

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040... Order the manual at mid-west-tech.com >


SUBJECT	PAGE
ELECTRICAL SYSTEM	105
Fuses	105
Electrical diagram of protection tree	107
MAIN TROUBLESHOOTING	109
Engine	109
Transmission	109
Steering	110
Service brakes	110
Lts load travel stabilizer (optional)	110
Equipment hydraulics	111
Electrical system	111
MAINTENANCE AND LUBRICATION GENERAL DIAGRAM	112
TABLE OF FLUID CAPACITIES	114
DEALER PRE-DELIVERY SERVICE REPORT	115

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040... Order the manual at mid-west-tech.com >

EQUIPMENT "SINGLE LEVER" CONTROL (optional)


The lever controls the raising, lowering and tilting of the bucket.
The functions relative to the points indicated are as follows.
A = Bucket roll-back
B = Bucket dumping
C = Boom lowering
D = Boom raising

Besides positions **A** and **D**, the lever is held by the detents of the bucket positioner and boom kick-out, as described here above.

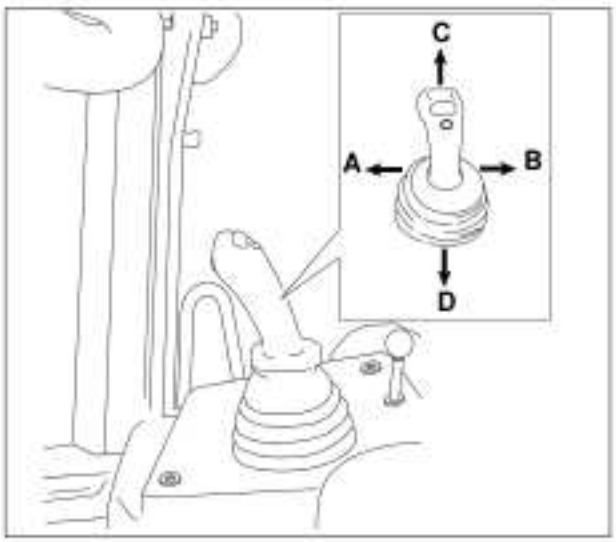

18. EQUIPMENT LEVER SAFETY LOCKING DEVICE

The device inhibits the control of the equipment by the levers.
This is to prevent unwanted movements causing dangerous manoeuvres.
To restrict the equipment control, pull the lever indicated upward, and lower the safety.


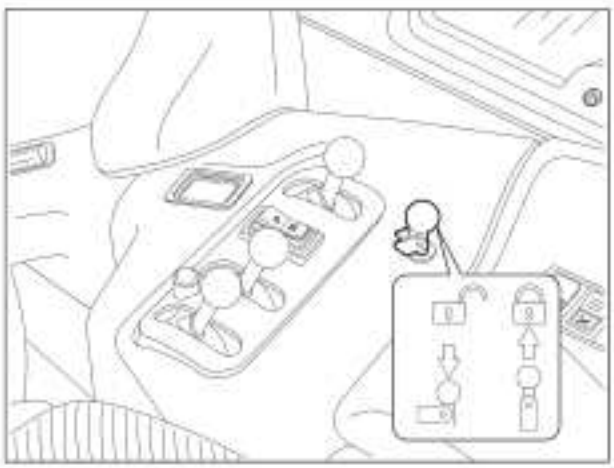


WARNING

Always move the safety lever to lock position, prior to cleaning, repairing or intervening on the machine or after parking it.

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040... Order the manual at mid-west-tech.com >

LIST OF ON-BOARD TOOLS

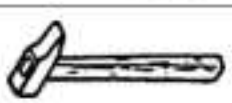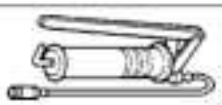– Double head wrench	24 mm + 27 mm (0.945 + 1.063 in)	
– Double head wrench	19 mm + 22 mm (0.748 + 0.866 in)	
– Double head wrench	13 mm + 17 mm (0.511 + 0.669 in)	
– Double head wrench	12 mm + 14 mm (0.472 + 0.551 in)	
– Double head wrench	8 mm + 10 mm (0.315 + 0.394 in)	
– Allen wrench	12 mm (0.472 in)	
– Allen wrench	10 mm (0.394 in)	
– Allen wrench	8 mm (0.315 in)	
– Universal pliers		
– Hammer	0,5 kg (1.102 lb)	
– Flat screwdriver		
– Phillips screwdriver		
– Grease gun with hose extension		
– Chain type filter wrench		

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040... Order the manual at mid-west-tech.com >

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040...

Order the manual at mid-west-tech.com >

	EVERY 10 HOURS WORK	PAGE
1	Checking the cab ventilation air filters	72
2	Drainingn the fuel filter condensation	72
3	Checking the engine oil level	73
4	Checking the engine coolant level	73
5	Checking the transmission torque converter oil level	74

	EVERY 50 HOURS WORK	PAGE
6	Greasing the equipment cylinder pivots greasing (6 points) armsand bucket (7 points) steering cylinders (4 points) rear axle (2 points)	75
7	Checking the hydraulic system oil level	77
8	Cleaning the cab air filters	77

	EVERY 250 HOURS WORK	PAGE
9-10	Changing the engine oil and filter	78
11	Replacing the fuel filters	80
12	Changing the coolant filter	80
13	Checking the axle oil level	82
14	Checking the tension of belts	83
15	Greasing the propeller shafts	84
16	Checking the tyre pressure	85

	EVERY 500 HOURS WORK	PAGE
17	Replacing the transmission oil delivery filter	86
18	Replacing the pilot system/brakes oil filter	88
19	Replacing the cab air filters	89

	EVERY 1000 HOURS WORK	PAGE
20-21	Change of transmission torque converter oil and cleaning of suction filter	90
22	Cleaning the torque converter housing breather	92
23	Replacing the hydraulic oil return filter	92
24	Checking the battery electrolyte level	94
25	Greasing of frame central pivoting pins	95


	EVERY 1500 HOURS WORK	PAGE
26	Checking screws for engine-cylinder-head-manifolds-turbocharger	96
27	Calibration of injectors/check of the valve clearance setting	96
28	Changing the front/rear axle oil	97

	EVERY 2000 HOURS WORK	PAGE
29	Replacing the engine air cleaner	98
30	Changing the coolant	98
31	Changing the hydraulic oil	99
32	Checking the wear of brakes-parking brake	101
33	Checking pre-charge of service brake/parking brake accum. and L.T.S. accumulator	101
34	Changing the gas of the system	101

	EVERY 6000 HOURS WORK	PAGE
35	Cleaning and calibration of injectors	102
36	Checking damper wheel	102

	OPERATION AT VARIABLE INTERVALS	PAGE
37	Cleaning/replacing engine air cleaner cartridges	103
38	Setting the injectors	104
39	Checking the tires pressure	104
40	Cleaning the air conditioner condenser	104

ELECTRICAL DIAGRAM OF PROTECTION TREE

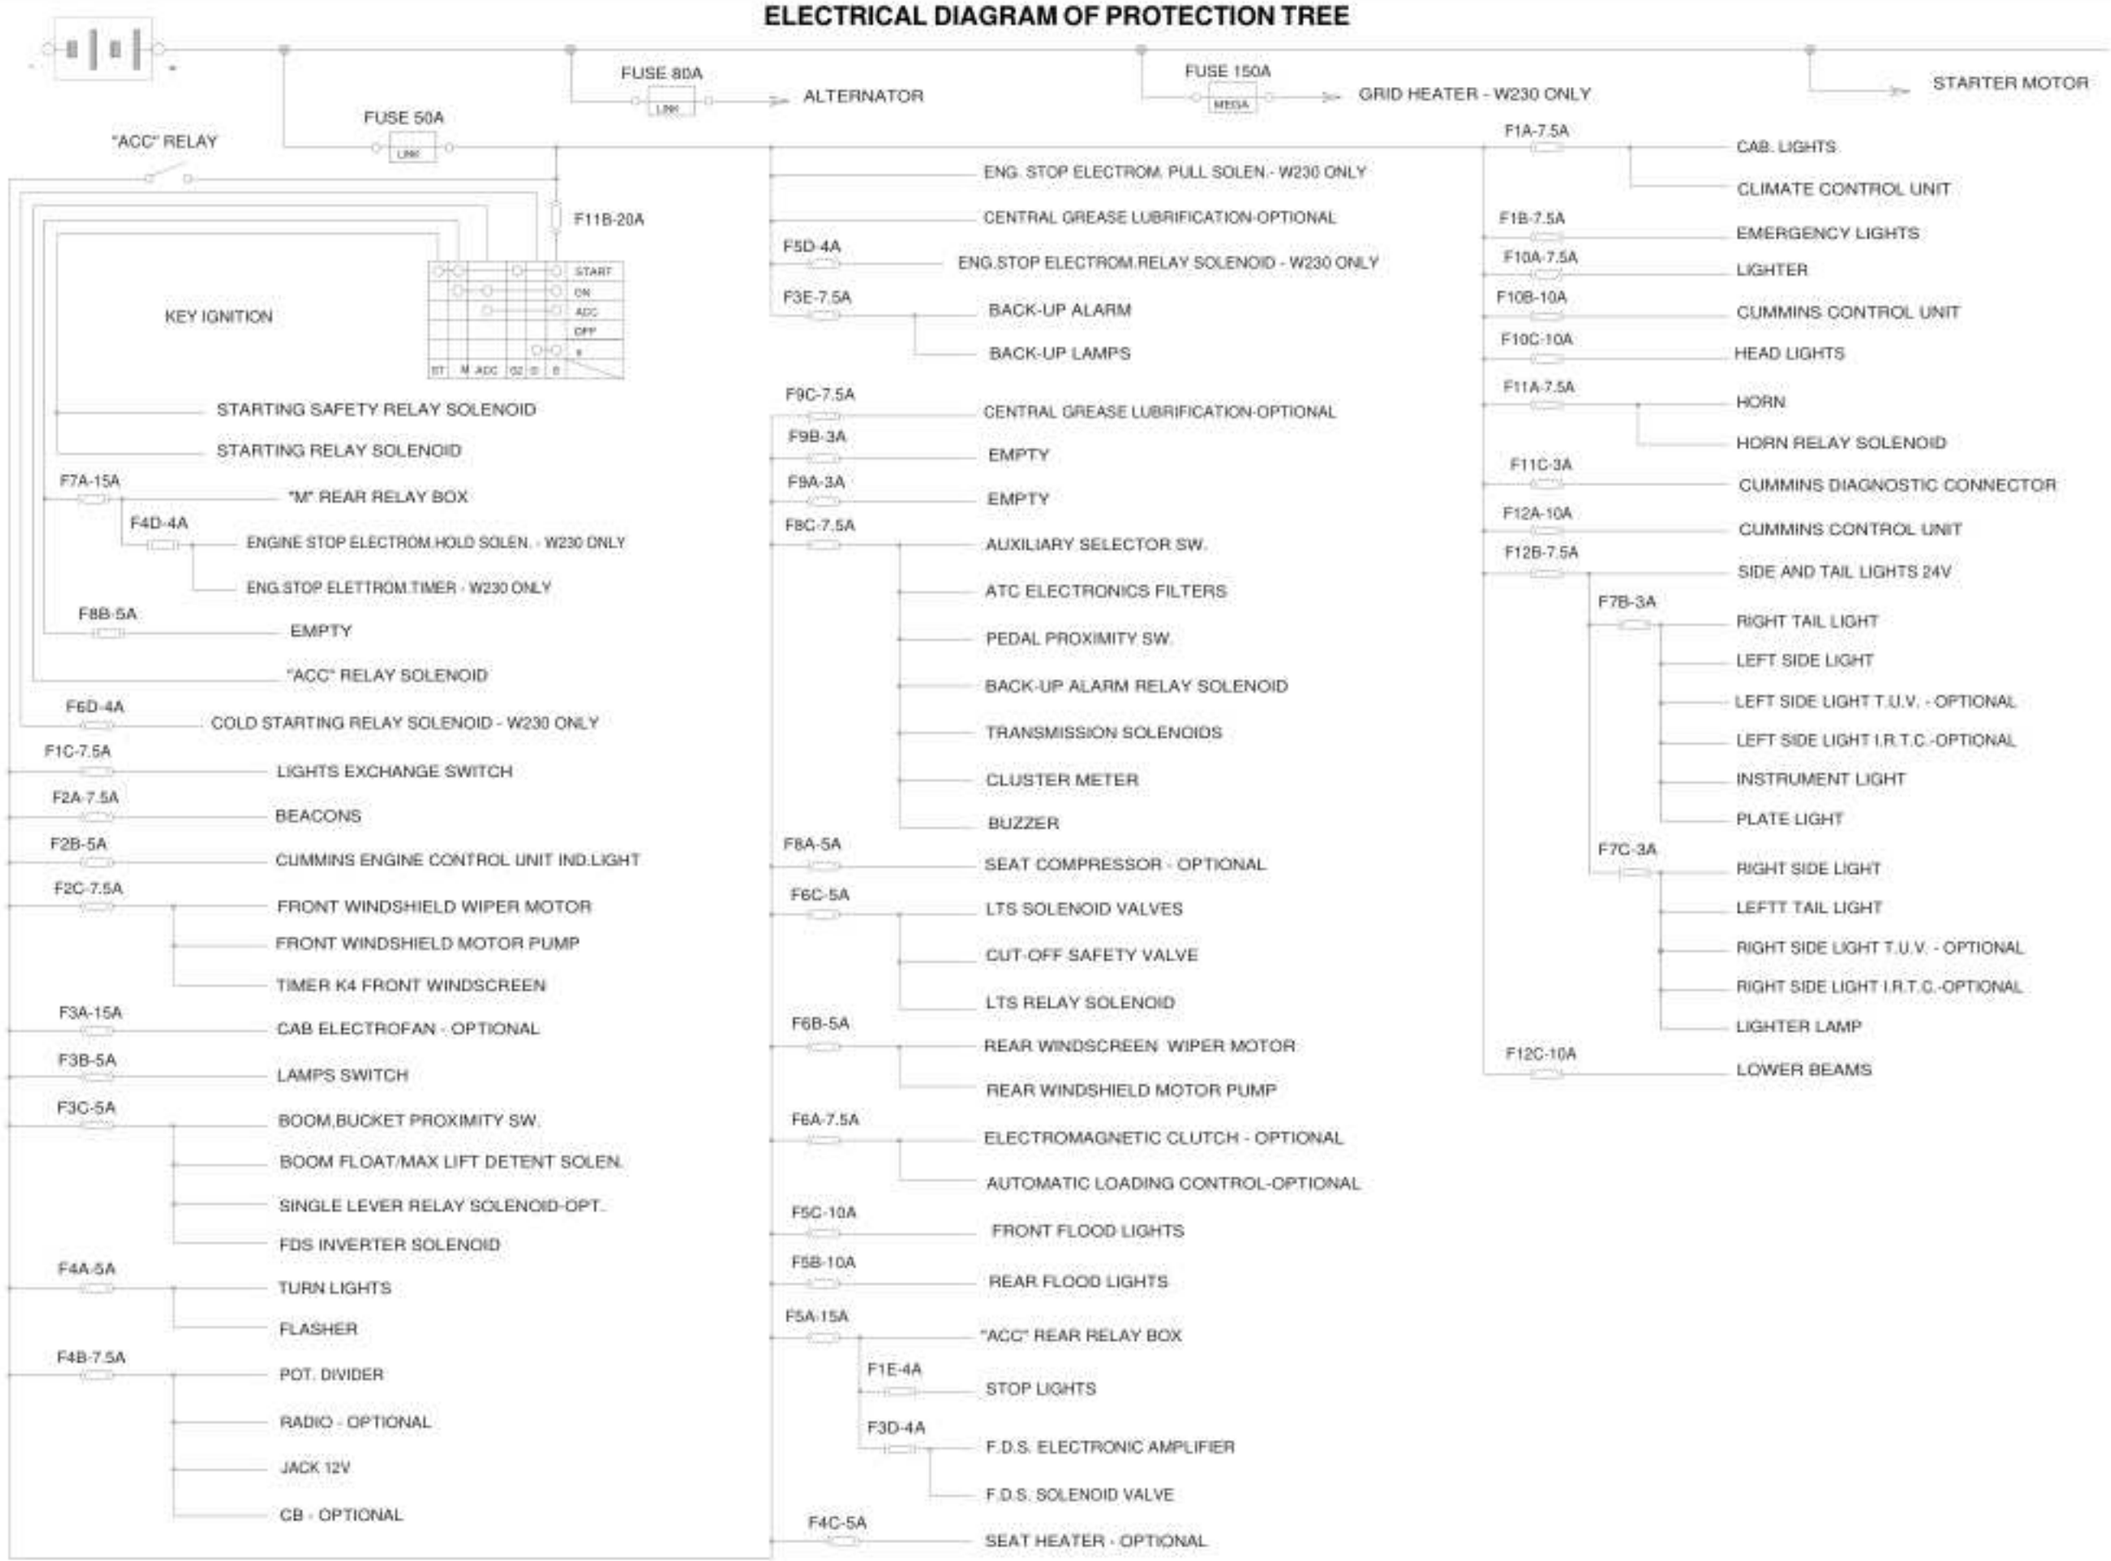

MidWestTech | New Holland LW270.B Wheel Loader Operator's Manual | Publication 6040099301
Order the manual at mid-west-tech.com >