
OPERATOR'S MANUAL

TS100A
TS110A
TS115A
TS125A
TS135A

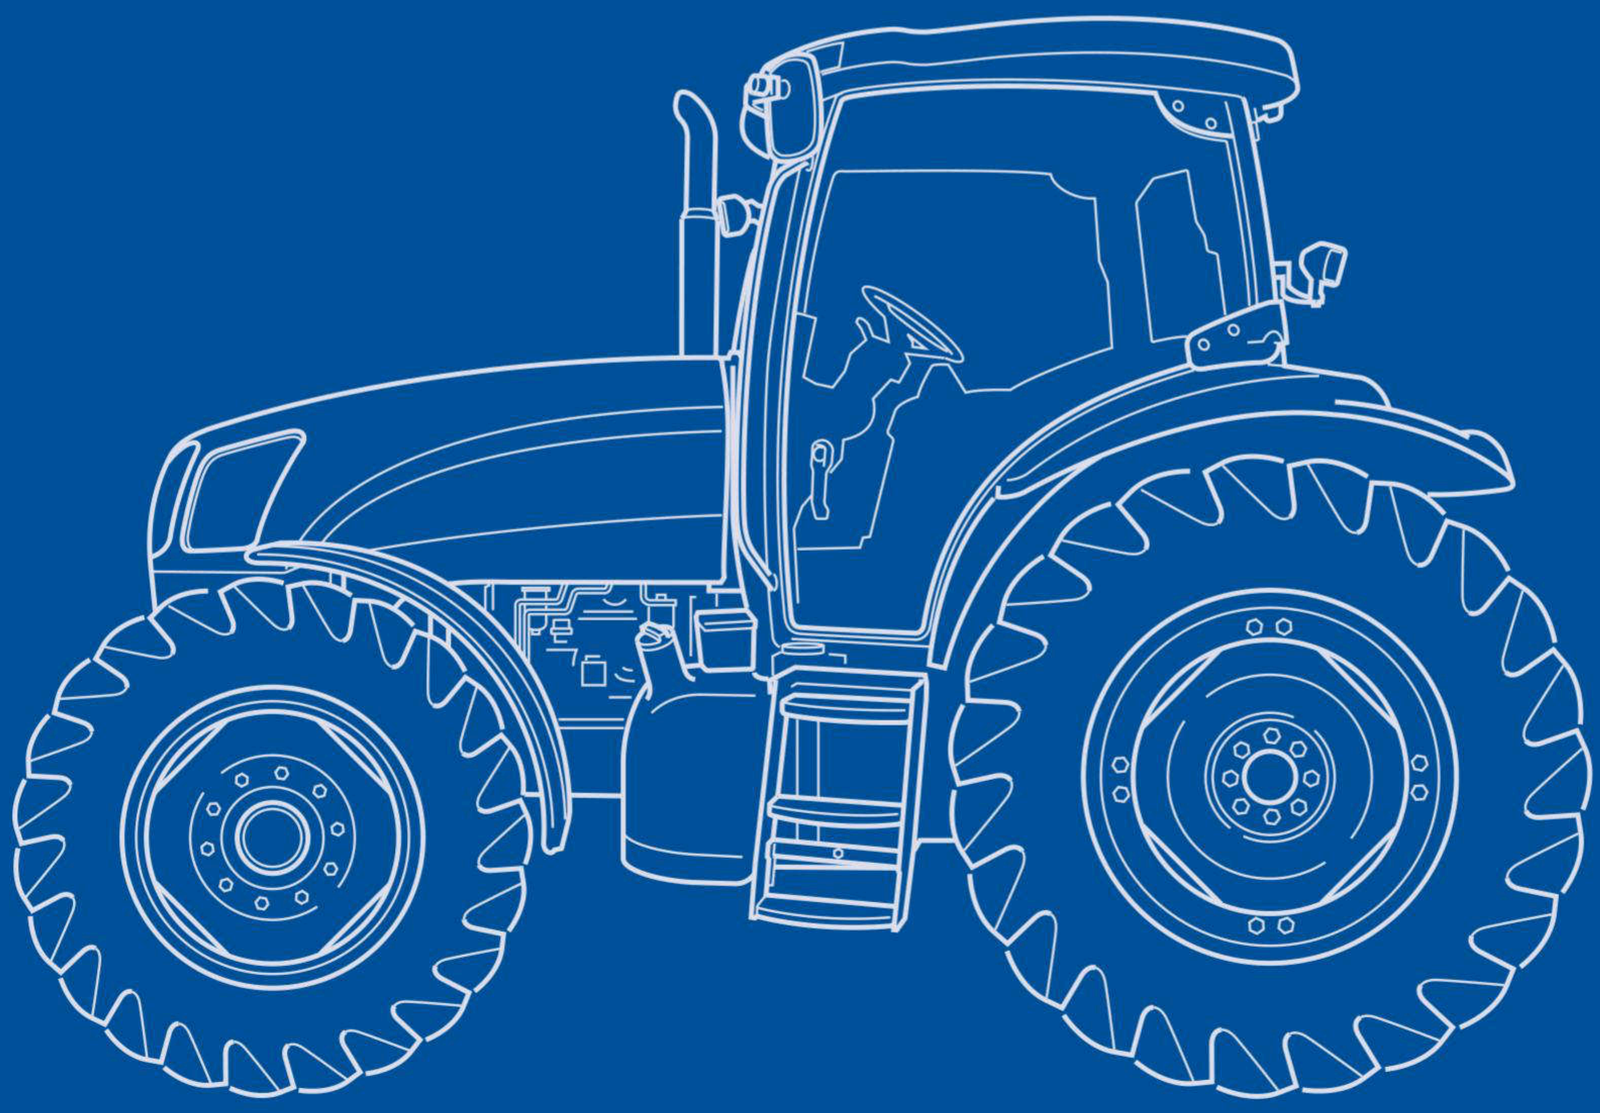

Print No. 604.53.511.00
1st edition
English 09/03

NEW HOLLAND
AGRICULTURE

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Operator's Manual | Publication 6045351100

Order the manual at mid-west-tech.com >

CONTENTS

Title **Page**

Section 1 – General Information and Safety

To the owner 1-1
Product identification 1-2
Ecology and the environment 1-5
Safety precautions 1-6
Safety decals 1-12
International symbols 1-16
Airborne noise emission 1-17

Section 2 – Controls, Instruments and Operation

Cab 2-7
Seats 2-24
Handbrake, Throttle and Foot Controls 2-28
Instrument Console 2-30
Analogue/Digital Instruments 2-35
Shuttle Command Transmission (12 x 12) 2-61
Dual Command Transmission (24 x 24) 2-67
Electroshift Transmission (16 x 16) 2-78
Differential Lock and Four Wheel Drive 2-94

Section 3 – Field Operation

Important Information 3-2
Using Jump Leads (Booster Cables) 3-4
Starting and Stopping the Engine 3-6
Engine Power Management 3-9
Fast Steer 3-12
Rear Power Take-Off 3-13
Front Power Take-Off and Hydraulic Lift 3-31
Mechanical Lower Link Sensing Hydraulics 3-39
Electronic Draft Control 3-45
Headland Turn Sequence 3-57
Remote Control Valves 3-63
Electro-Hydraulic Remote Control Valves 3-71
Three-point Linkage 3-83
Quick Hitch 3-89
Linkage Stabilisers 3-91
Drawbars and Towing Attachments 3-96
Hydraulic Trailer Brakes 3-108
Air-Operated Trailer Brakes 3-110
Front Wheel Track Adjustment 3-116
Rear Wheel Track Adjustment 3-123
Ballasting and Tyres 3-130

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >

Section 4 – Lubrication and Maintenance

General information 4-1
Guard Removal 4-4
Lubrication and maintenance chart 4-7
Servicing: When warning lights illuminate 4-9
10-hour/daily service 4-13
50-hour service 4-15
100-hour service 4-27
300-hour service 4-28
600-hour service 4-33
1200-hour/12 month service 4-39
1200-hour/24 month service 4-44
General Maintenance – as required 4-50

Section 5 – Fault Finding

Introduction 5-1
Engine 5-2
Transmission – 12 x 12 Synchro Command 5-5
Transmission – 24 x 24 Dual Command 5-6
Transmission – 16 x 16 (17 x 16) Electroshift 5-7
Hydraulics 5-8
Three-point lift 5-9
Brakes 5-10
Cab 5-10
Electrical 5-11

Section 6 – Vehicle Storage 6-1

Section 7 – Accessories

Rotating Beacon 7-2
Engine Coolant Immersion Heater 7-2
Transmission Oil Heater 7-3
40 Amp Socket and Cable 7-3
Auxiliary Headlights 7-4
Battery Isolator Switch 7-4
Loader Subframe and Control Valve (Joystick) 7-5

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >

Section 8 - Specification

General Dimensions 8-2
Vehicle Weights 8-6
Lubricant and Fluid Capacities 8-8
Engine 8-9
Fuel System 8-9
Cooling System 8-10
Transmission Options 8-10
Maximum Operating Angle 8-11
Rear Power Take-Off 8-11
Front Power Take-Off 8-11
Hydraulic System 8-12
Three-Point Lift 8-13
Remote control valves 8-17
Front Power Lift 8-17
Front Remote Valves 8-18
Brakes 8-18
Steering 8-18
Electrical Equipment 8-19
Hardware Torque Tables 8-20

Section 9 - First 50-hour Service Forms 9-1


Section 10 - Index 10-1

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >

Combined Position and Draft Control Operation

When starting work, lower the implement to the required depth by means of the Draft Control lever (3), as previously described. Observe the implement as it pulls through the soil.

When the implement stabilises at the required depth, ease the Position Control lever (2) back until the lift arms tend to rise. The lift linkage is now operating in Draft Control but the implement is prevented, by the Position Control function, from sinking too far when the draft load reduces.

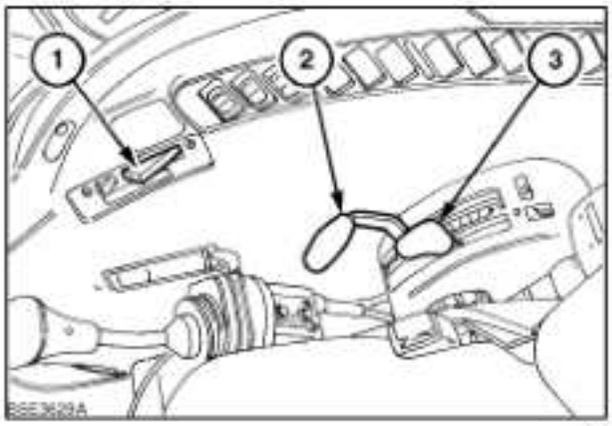

73


Float Operation

To operate with the lift in float mode move the Draft and Position Control levers fully forward. This will enable the lift arms to move up and down freely allowing the implement to follow the ground contours.

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >

INTERNAL FILTER

To remove an internal filter, loosen the retaining screws (1) anti clockwise and remove the filter cover.

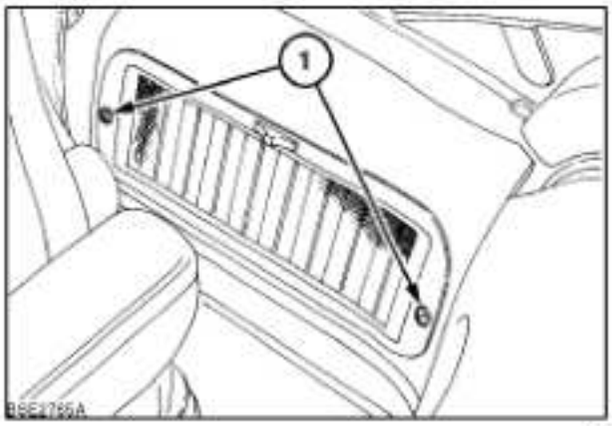


25

Remove the cover (1) and extract the filter from the housing.

NOTE: *The filter (2) is made of specially treated media with a rubber sealing strip bonded to the upper surface. Take care not to damage the element during removal.*

Clean the elements by blowing with compressed air not exceeding 30 lbf. in^2 (2 bar). Blow the dust from the **clean** surface through the element to the dirty side. Hold the nozzle at least 12 in. (300 mm) from the element to prevent damage to the filter media.

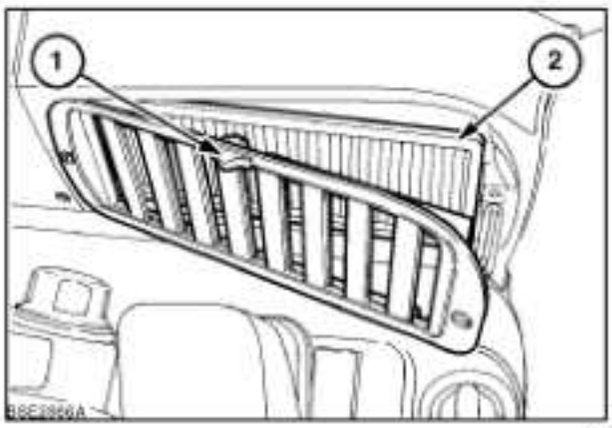

26

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >

GENERAL DIMENSIONS		TS115A, TS125A and TS135A		
		2WD	4WD	4WD SuperSteer™
B. Ground clearance below front axle	mm	507 Std / 557 HD	478	458
	in	19.9 Std / 21.9 HD	18.8	18.0
C. Front track setting	mm	1422 - 2134	1407 - 2108	1407 - 2108
	in	56.0 - 84.0	55.4 - 83.0	55.4 - 83.0
D. Rear track setting	mm	1426 - 2026	1426 - 2026	1426 - 2026
	in	56.1 - 79.8	56.1 - 79.8	56.1 - 79.8
E. Height to top of exhaust	mm	———	2920	———
	in	———	114.9	———
F. Height to:				
- Top of standard cab	mm	———	2900	———
	in	———	114.1	———
- Top of suspended cab	mm	———	2965	———
	in	———	116.7	———
- Top of ROPS (n/a TS135A)	mm	———	2900	———
	in	———	114.1	———
G. Ground clearance below drawbar	mm	———	470	———
	in	———	18.5	———
H. Front hitch projection	mm	-	675	545
	in	-	26.5	21.4
J. Wheelbase	mm	2652	2661	2760
	in	104.4	104.7	108.6
K. Overall length to end of lower links	mm	4385	4481	4580
	in	172.6	176.4	180.3
Minimum turn radius (with brakes)	mm	3277	3720	3610
	in	129.0	146.4	142.1
(without brakes)	mm	3660	5360	4560
	in	144.0	211.0	179.5

NOTE: *If your tractor has tyres of a different size then the above dimensions will vary due to the difference in the rolling radius and section width of the tyres fitted.*

MidWestTech | New Holland TS100A, TS110A, TS115A, TS125A, TS135A Tractor Ope... Order the manual at mid-west-tech.com >