SERVICE MANUAL

Articulated Dump Trucks AD250



NEW HOLLAND
CONSTRUCTION

MidWestTech | New Holland AD250 Articulated Dump Truck Service Manual | Publication 6...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 00 - MAINTENANCE

Chapter 1 - General Instructions

Introduction 1
General instructions 2
Type, serial number and year of manufacture 12
Position of identification data on main component groups 13
Identification of the main components of the machine 16
Safety rules 17
Prevention of fires 18
Instructions for use 19
Maintenance instructions 22

SECTION 00 - MAINTENANCE

Chapter 2 - Specifications

Main groups 2
Dimensions 2
Weights 3
Horizontal center of gravity (during transport with unladen vehicle) (mm/ft) 3
Performance 4
Performance alignment chart 5
Main group characteristics 6
Capacities 9
Units of measure (international system) 10
Standard tightening torques 11

SECTION 00 - GENERAL INSTRUCTION

Chapter 3 - Tooling

Tooling and equipment 1

MidWestTech | New Holland AD250 Articulated Dump Truck Service Manual | Publication 6... Order the manual at mid-west-tech.com >

SECTION 00 - GENERAL INSTRUCTION

Chapter 4 - Numerical value conversion table

Numerical value conversion table 1
Unit conversion rate 1
Lenght 2
Area 4
Volume 5
Mass 7
Pressure 8
Torque 9
Temperature 11

SECTION 00 - GENERAL INSTRUCTION

Chapter 5 - Safety instructions

Introduction 3
Safety information and symbols 3
General instructions 4
Preventing fires 5
Use 7
Cab 7
Starting and stopping 8
Driving the vehicule 9
Working the vehicle 9
Towing the vehicle 11
Replacing a wheel 11
Maintenance instructions 12
Introduction 12
Preventing injuries 13
Preventing intoxication and contamination 15
Preventing burns and electrocution 16

MidWestTech | New Holland AD250 Articulated Dump Truck Service Manual | Publication 6... Order the manual at mid-west-tech.com >


SECTION 10 - ENGINE

Chapter 1 - Engine overhaul

External view of engine 3
Engine air intake system 6
Engine fuel supply system 7
Engine cooling system 8
Thermostat operation and system layouts 8
Coolant circulation inside the engine 9
Specifications and data 10
Diagnostic 11
Tichtening torques 20
Special tools 20
Engine removal - refit 21
Removal 21
Refit 25
Checks and inspections 25
Radiator removal - refit 26
Removal 26
Refit and circuit refill 28
Anti-freeze percentage check 28
Water - Lubricant exchanger removal - refit on automatic transmission 29
Removal 29
Refit 29
Engine - Periodical replacement 30
Engine oil replacement 30
Engine oil filter replacement 31
Engine - Adjustments and checks 32
Peliminary operations 32
Valves clerance 32
Belts 35
Climate control compressor drive belt 36
Intake manifold pressure check 37
Intake manifold temperature check 37
Engine - Partial removal - Refit 38
Preliminary operations 38
Water pump 38
Removal 37
Refit 38
Coolant thermostat 39
Tightener 40
Fuel feed pump 41
Injectors 41
Injection pump 42
Intake manifold cover and gasket 46
Aftercooler and gasket 46
Turbocharger 47

MidWestTech | New Holland AD250 Articulated Dump Truck Service Manual | Publication 6... Order the manual at mid-west-tech.com >

OIL CIRCUIT DIAGRAM

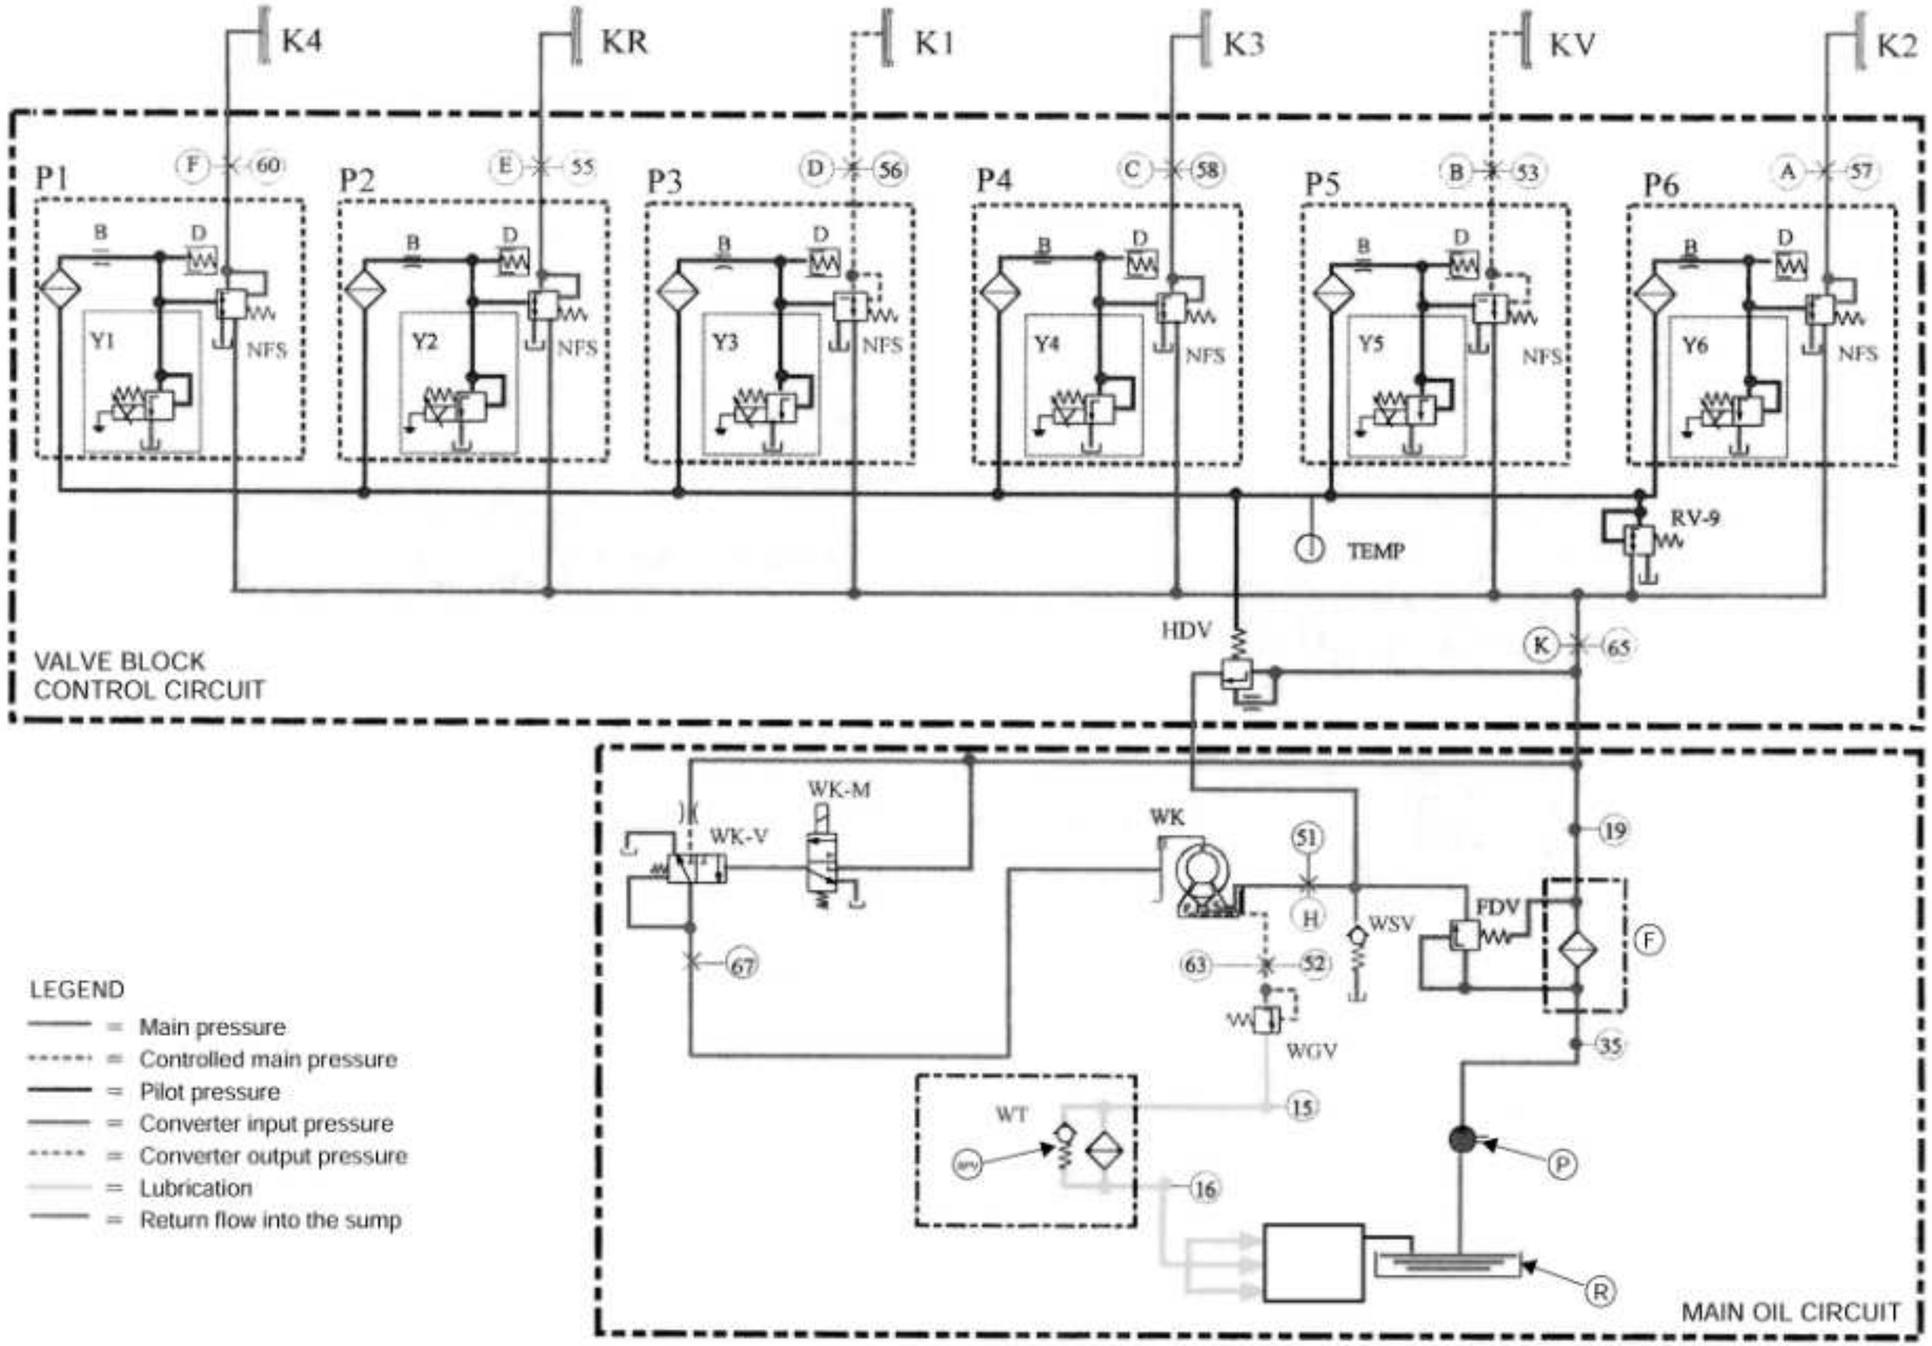

LEGEND

- Main pressure
- Controlled main pressure
- Pilot pressure
- Converter input pressure
- Converter output pressure
- Lubrication
- Return flow into the sump

C507H032

MidWestTech | New Holland AD250 Articulated Dump Truck Service Manual | Publication 6045614101 Order the manual at mid-west-tech.com >