650K, 750K, and 850K Crawlers

Service Manual

Bur 6-32870NA

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
TO THE OWNER 1-1
RIGHT, LEFT, FRONT, AND REAR OF THE MACHINE 1-2
IDENTIFICATION NUMBERS 1-3
MACHINE COMPONENTS 1-5

CHAPTER 2
SAFETY, DECALS, AND HAND SIGNALS
TABLE OF CONTENTS 2-1
SAFETY RULES 2-3
BEFORE OPERATION 2-3
PERSONAL SAFETY 2-5
UTILITY SAFETY 2-5
MACHINE OPERATION 2-6
PARKING THE MACHINE 2-6
FIRE EXTINGUISHER 2-7
BURN PREVENTION 2-7
HAZARDOUS CHEMICALS 2-7
FIRE OR EXPLOSION PREVENTION 2-7
MAINTENANCE 2-8
DUCTILE IRON 2-8
SAFETY DECALS 2-9

CHAPTER 3
INSTRUMENTS AND CONTROLS
TABLE OF CONTENTS 3-1
INSTRUMENT PANEL 3-3
BRAKE, DECELERATOR AND FOOTREST 3-9
PARKING BRAKES 3-9
DIRECTION CONTROL LEVER,TRANSMISSION CONTROL, HAND THROTTLE 3-10
DOZER BLADE CONTROL LEVER 3-12
CONTROL HANDLE POSITIONS 3-14
RIPPER CONTROL LEVER 3-14
OPERATORS SEAT 3-15
CAB 3-16
OPERATORS SEAT BELT 3-21

CHAPTER 4
OPERATING INSTRUCTIONS
TABLE OF CONTENTS 4-1
RUN-IN PERIOD OF A NEW MACHINE 4-3
ENGINE OPERATION 4-4
CRAWLER OPERATION 4-6
MOVING A DISABLED CRAWLER 4-17
TRANSPORTING THE MACHINE 4-20
OPERATING IN HOT WEATHER 4-22
OPERATING IN COLD WEATHER 4-22
BOOSTER BATTERY CONNECTION TO MACHINE BATTERY 4-24
TILTING THE CAB 4-25
DOZER OPERATION 4-28
TRACK SYSTEMS 4-29
FACTORS CONTROLLING UNDERCARRIAGE WEAR 4-31

MidWestTech | Case 650K, 750K, 850K Crawler Service Manual | Publication 6-32870 Order the manual at mid-west-tech.com >

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
TABLE OF CONTENTS 5-1
GENERAL SAFETY BEFORE YOU SERVICE 5-3
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM 5-4
PLASTIC AND RESIN PARTS 5-4
ENGINE HOURMETER 5-4
FLUIDS AND LUBRICANTS 5-5
LUBRICATION AND MAINTENANCE CHART 5-6
GREASE FITTINGS 5-7
ACCESS DOORS 5-9
ENGINE LUBRICATION 5-10
ENGINE SERVICE 5-11
AIR FILTER SYSTEM 5-13
ENGINE COOLING SYSTEM 5-17
DIESEL FUEL SYSTEM 5-19
HYDRAULIC SYSTEM 5-23
TRANSMISSION 5-25
FINAL DRIVES 5-27

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
TABLE OF CONTENTS 6-1
TRACKS 6-3
REVERSIBLE FAN POSITIONS (IF EQUIPPED) 6-6
ROLL-OVER PROTECTIVE STRUCTURE 6-7
MACHINE CLEANING 6-8
ADJUSTING THE RIPPER SHANKS 6-8
DOZER BLADE PITCH ADJUSTMENT 6-9
FIRE EXTINGUISHER MOUNTING (IF EQUIPPED) 6-10
FAN AND AIR CONDITIONING DRIVE BELT 6-10
MACHINE STORAGE 6-11

CHAPTER 7
ELECTRICAL
TABLE OF CONTENTS 7-1
ELECTRICAL SYSTEM 7-3
FUSES AND RELAYS 7-5
INSTRUMENT CLUSTER 7-7
ACCESSORY OUTLETS 7-8

CHAPTER 8
SPECIFICATIONS
TABLE OF CONTENTS 8-1
ENGINE SPECIFICATIONS 8-3
HYDRAULIC SYSTEM 8-3
TRAVEL SPEEDS 8-3
TRACK SYSTEM 8-4
TRANSPORT LENGTH AND WIDTH WITH BLADE FULLY ANGLED 25 DEGREES 8-5
OPERATING DATA AND DIMENSIONS 8-6
OPERATING DATA AND DIMENSIONS - RIPPER 8-8
WEIGHTS 8-8

MidWestTech | Case 650K, 750K, 850K Crawler Service Manual | Publication 6-32870 Order the manual at mid-west-tech.com >

INSTRUMENT CLUSTER

REMOVAL OF THE INSTRUMENT CLUSTER

1. Turn the master disconnect off.
2. Loosen and remove the 2 screws that fasten the instrument cluster in the console.
3. Pull the instrument cluster out of the console far enough to disconnect the electrical connector from the rear of the instrument cluster.
4. Disconnect the electrical connector from the socket on the rear of the instrument cluster and remove the instrument cluster from the console.

INSTALLATION OF THE INSTRUMENT CLUSTER

1. Reverse the removal instructions to re-install the cluster.


REPLACING A BULB

1. Remove the instrument cluster from the console.



BD00H152 Figure 6

2. Remove the 2 screws that fasten the rear cover to the frame.

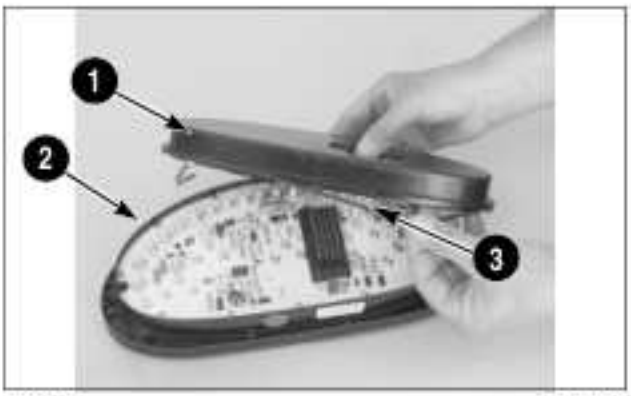

BD00H151 Figure 7

3. Remove the rear cover (1) from the frame (2).

NOTE: *Make sure the O-ring (3) is in the correct position on the rear cover (1) before the rear cover (1) is installed onto the frame (2).*




BD00H150 Figure 8

4. Turn the socket assembly (4) counter clockwise to remove. The bulb and the socket assembly (4) are serviced together. Replace the socket assembly (4) as required.

MidWestTech | Case 650K, 750K, 850K Crawler Service Manual | Publication 6-32870 Order the manual at mid-west-tech.com >

TRANSPORT LENGTH AND WIDTH WITH BLADE FULLY ANGLED 25 DEGREES

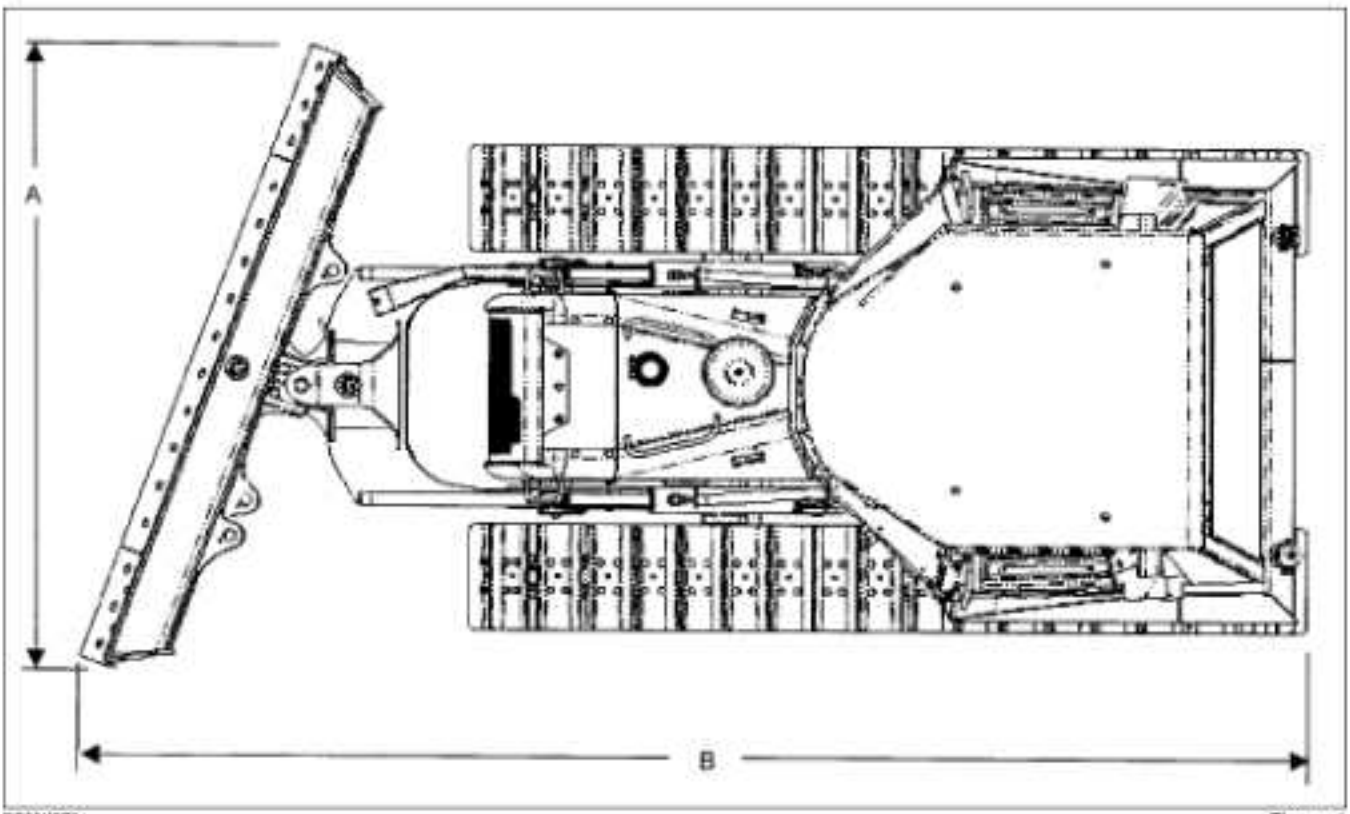

BS02K072

Figure 1

Blade width	A Transport width		B 650K w/o Drawbar		B 750K w/o Drawbar		B 850K w/o Drawbar	
98 in (2489 mm)	2308 mm	90.9 in	4618 mm	181.8 in				
104 in (2642 mm)	2446 mm	96.3 in	4649 mm	183.0 in	4696 mm	184.9 in	4782 mm	188.3 in
110 in (2794 mm)	2585 mm	101.8 in	4682 mm	184.3 in	4728 mm	186.1 in	4814 mm	189.5 in
120 in (3048 mm)	2815 mm	110.8 in	4736 mm	186.5 in	4782 mm	188.3 in	4868 mm	191.7 in
124 in (3150 mm)	2907 mm	114.4 in	4757 mm	187.3 in	4803 mm	189.1 in	4889 mm	192.5 in
130 in (3302 mm)	3043 mm	119.8 in			4835 mm	190.4 in	4921 mm	193.7 in

NOTE: *Add 150 mm (5.9 in) for drawbar.*

MidWestTech | Case 650K, 750K, 850K Crawler Service Manual | Publication 6-32870 Order the manual at mid-west-tech.com >