CX31-CX36
Hydraulic Excavator

Service Manual

Part No. 6-49210

CASE CONSTRUCTION

MidWestTech | Case CX31, CX36 Hydraulic Excavator Service Manual | Publication 6-49210

Order the manual at mid-west-tech.com >

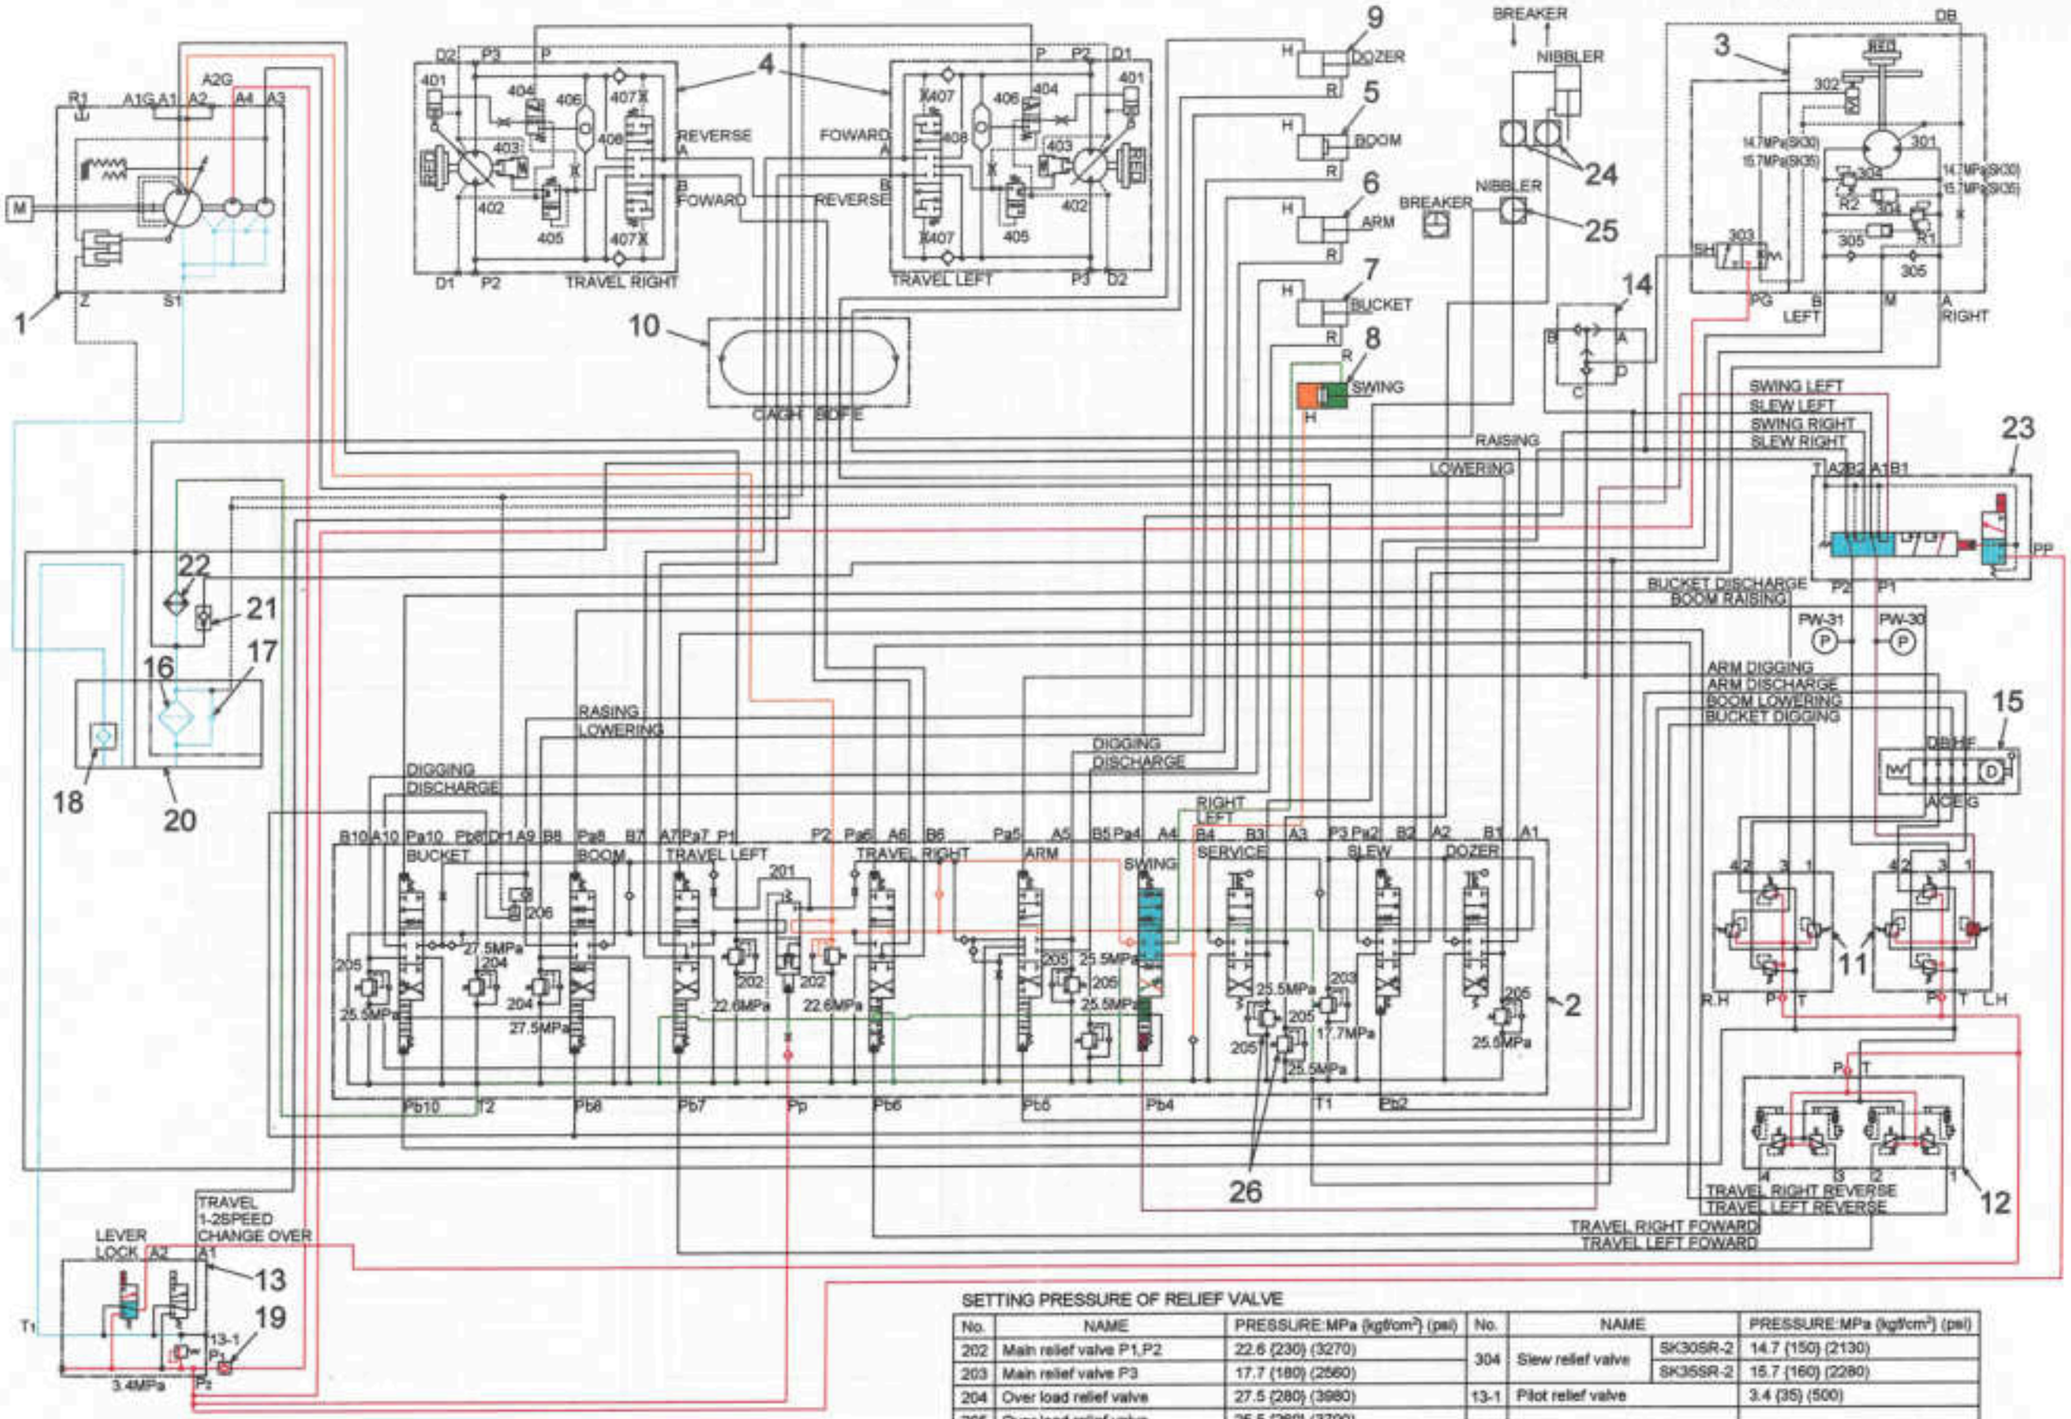


Fig.14 Swing circuit : Swing (left) operation [USA]

SETTING PRESSURE OF RELIEF VALVE

No.	NAME	PRESSURE:MPa (kgf/cm²) (psi)	No.	NAME		PRESSURE:MPa (kgf/cm²) (psi)
202	Main relief valve P1,P2	22.6 {230} (3270)	304	Slew relief valve	SK30SR-2	14.7 {150} (2130)
203	Main relief valve P3	17.7 {180} (2560)			SK35SR-2	15.7 {160} (2280)
204	Over load relief valve	27.5 {280} (3980)	13-1	Pilot relief valve		3.4 {35} (500)
205	Over load relief valve	25.5 {260} (3700)				

MidWestTech | Case CX31, CX36 Hydraulic Excavator Service Manual | Publication 6-49210

Order the manual at mid-west-tech.com >