
5
4
3

Operation & Maintenance Manual

(S/N 502412001 & Above)

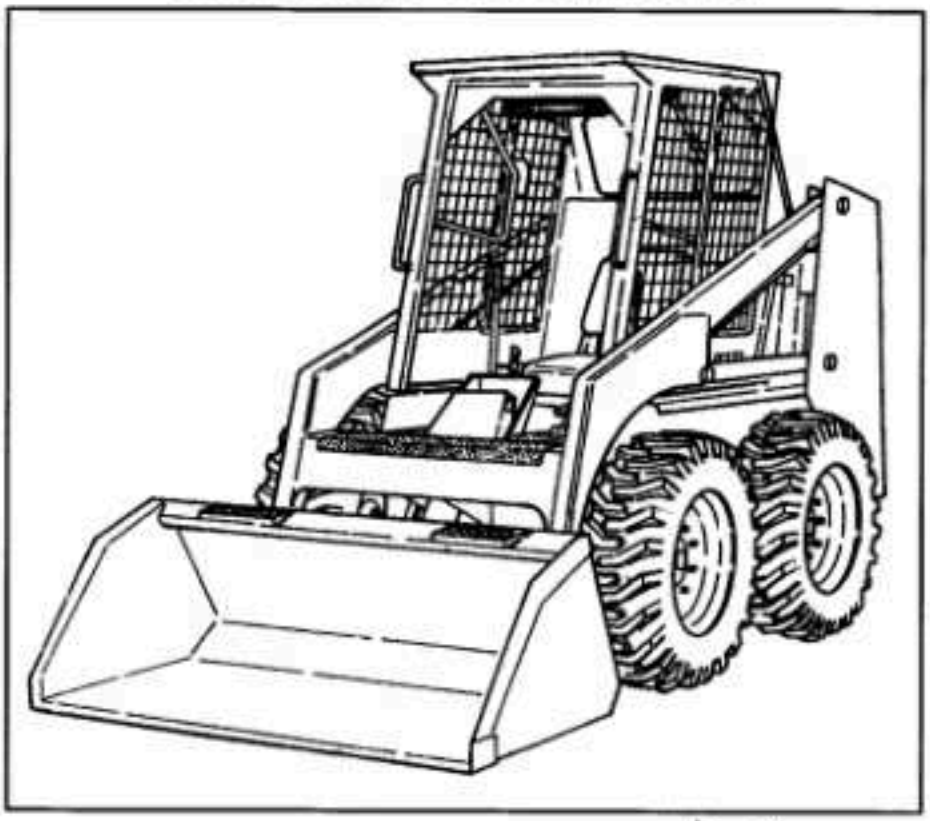

MELROE
INGERSOLL-RAND
6566276 (11-82) Revised (9-96) Printed in U.S.A.

bobcat

© Melroe Company 1996

MidWestTech | Bobcat 543 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

SAFETY IS THE OPERATOR'S RESPONSIBILITY

The Skid Steer Loader is a highly maneuverable and compact machine. In operation, it is rugged and useful under a wide variety of conditions. This presents an operator with hazards which are common for off highway, rough terrain applications but are not unique for use of Bobcat loaders. The loader has an internal combustion engine with resultant heat and exhaust. All exhaust gases can kill so the loader must be used with adequate ventilation. The loader must not be used in an area with explosive dusts or gases or so that the engine exhaust can contact flammable material. The loader has a spark arrestor muffler which is required for operation in certain areas.

The dealer recommends the capabilities and restrictions of the loader and attachments for each application. The dealer demonstrates the safe operation of the loader according to the manufacturer's instructional materials; which are also available to all operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for rated capacity and secure fastening to the loader. For each model loader, the user must check with the dealer or manufacturer's literature to identify each bucket or attachment for safe loads of materials of specified densities.

The following publications provide information on the safe use of the loader and attachments:

1. The Delivery Report is used to check whether complete instructions have been given to the new owner.
2. The Operator's Manual delivered with every loader gives operating information as well as routine maintenance and service procedures.
3. Every loader has machine signs (or decals) which instruct on the safe care operation of the loader. The complete signs and their locations are shown in the Operator's Manual. All signs are available from your Bobcat dealer.
4. The loader has a plastic Operator's Handbook fastened to the operator cab. It has brief instructions always available to the operator. The handbook is available from your dealer in an English edition or a combination English, French, German, Spanish edition.
5. The Service Manual and Parts Manual are optional manuals from your Bobcat dealer for use by mechanics to do shop–type service and repair work.

The dealer and owner/operator review the recommended uses of the loader and attachments at the time of delivery of the loader. If change of the use of the loader occurs, the owner/operator must remember to ask the dealer for recommendations on the new use of the loader.

BEFORE YOU OPERATE THE BOBCAT LOADER

⚠ WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W–2001–1285



B–3926

This Operator's Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat loader. READ AND UNDERSTAND THIS OPERATOR'S MANUAL BEFORE OPERATING YOUR BOBCAT. If you have any questions, see your local Bobcat dealer.

The Bobcat loader must be in good operating condition.

Check all of the items on the Service Schedule under the 8 – 10 hour column.

⚠ WARNING

Warnings on the machine in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W–2044–1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I–2019–0284

MidWestTech | Bobcat 543 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >



Read the Operator's Manual.



Check oil daily. Use recommended fluids.



Use lift arm stops before working under raised lift arms.



Cleaning and maintenance are required daily.

⚠ WARNING

DO NOT service the Bobcat loader without instructions or taking the necessary safety precautions.

Stop and cool the engine before adding fuel. NO SMOKING.

Do not service loader without using a lift arm stop when lift arms are raised.

Do not lift or lower operator guard without instructions from Operator's Manual or Service Manual.

Do not lift or lower operator guard without jackstands or blocks under rear corners of loader.

Do not stand on loader when lifting or lowering operator cab (ROPS).

Keep rear door closed except for service.

Stop, cool, and clean engine of flammable material.

Keep body, loose objects and clothing away from electrical contacts, moving parts, hot parts, and exhaust.

Avoid contact with leaking hydraulic fluid which is under pressure and can be forced through the skin.

Lead acid batteries produce flammable and explosive gases. Keep arcs, sparks, flames, and lighted tobacco away from the battery.

Battery acid causes severe burns. If acid contacts eyes, skin or clothing flush well with water. For contact with eyes get immediate medical attention.

Do not modify equipment or add attachments not approved by manufacturer.

WARNING: Failure to obey warnings may cause injury or death.

Safety Alert Symbol



Two people standing on the ground are needed to raise the operator guard.

WRONG



Do not wear loose clothing around the loader.

WRONG



Machine must be stopped and cool before checking fluids.

WRONG



Do not arc battery.

MidWestTech | Bobcat 543 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >