
bobcat

2000 RTF

OPERATOR'S MANUAL

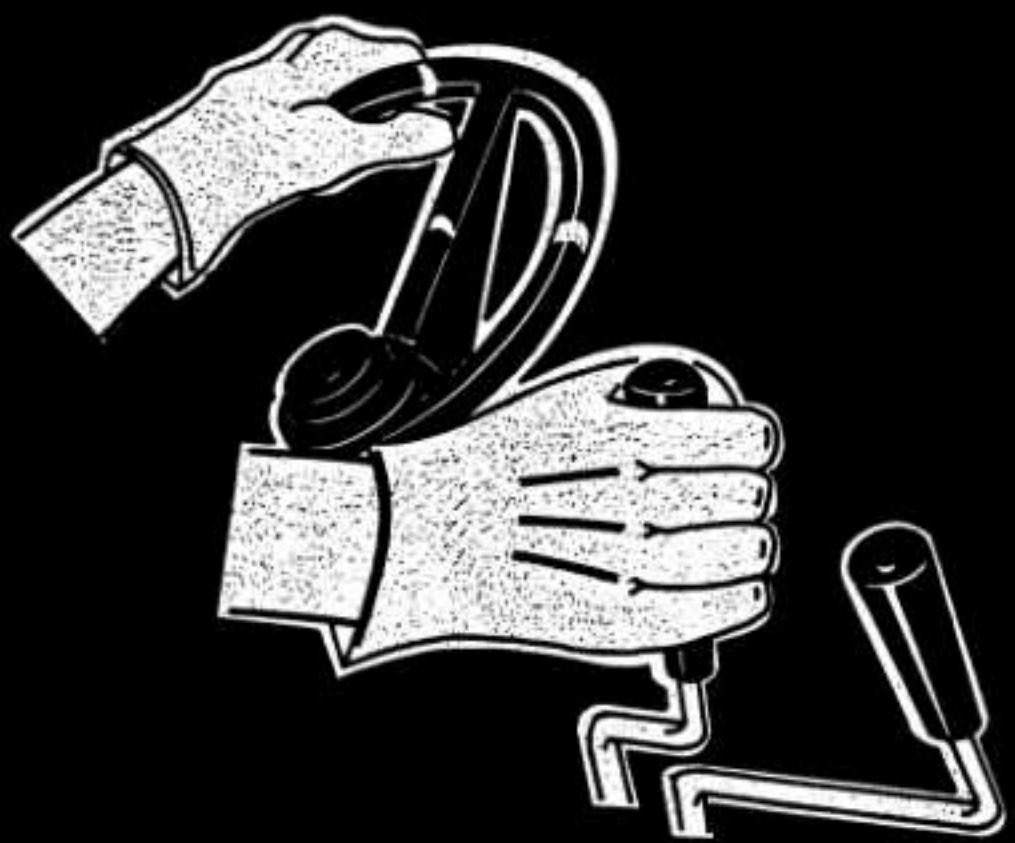

MELROE COMPANY

6566396 (7-82)-2C

Printed in U.S.A.

MidWestTech | Bobcat 2000 RTF Rough Terrain Forklift Operator's Manual | Publication 65... Order the manual at mid-west-tech.com >



Read the Operator's Manual.



Check oil daily. Use recommended fluids.



Use lift arm stops before working under raised lift arms.



Cleaning and maintenance are required daily.

WARNING

DO NOT service the Bobcat loader without instructions or taking the necessary safety precautions.

Stop and cool the engine before adding fuel. NO SMOKING.

Do not service loader without using a lift arm stop when lift arms are raised.

Do not lift or lower operator guard without instructions from Operator's Manual or Service Manual.

Do not lift or lower operator guard without jackstands or blocks under rear corners of loader.

Do not stand on loader when lifting or lowering operator cab (ROPS).

Keep rear door closed except for service.

Stop, cool, and clean engine of flammable material.

Keep body, loose objects and clothing away from electrical contacts, moving parts, hot parts, and exhaust.

Avoid contact with leaking hydrualic fluid which is under pressure and can be forced through the skin.

Lead acid batteries produce flammable and explosive gases. Keep arcs, sparks, flames, and lighted tobacco away from the battery.

Battery acid causes severe burns. If acid contacts eyes, skin or clothing flush well with water. For contact with eyes get immediate medical attention.

Do not modify equipment or add attachments not approved by manufacturer.

WARNING: Failure to obey warnings may cause injury or death.

Safety Alert Symbol



Two people standing on the ground are needed to raise the operator guard.

WRONG



Do not wear loose clothing around the loader.

WRONG



Machine must be stopped and cool before checking fluids.

WRONG



Do not arc battery.

Order the manual at mid-west-tech.com >