
843

Operation & Maintenance Manual

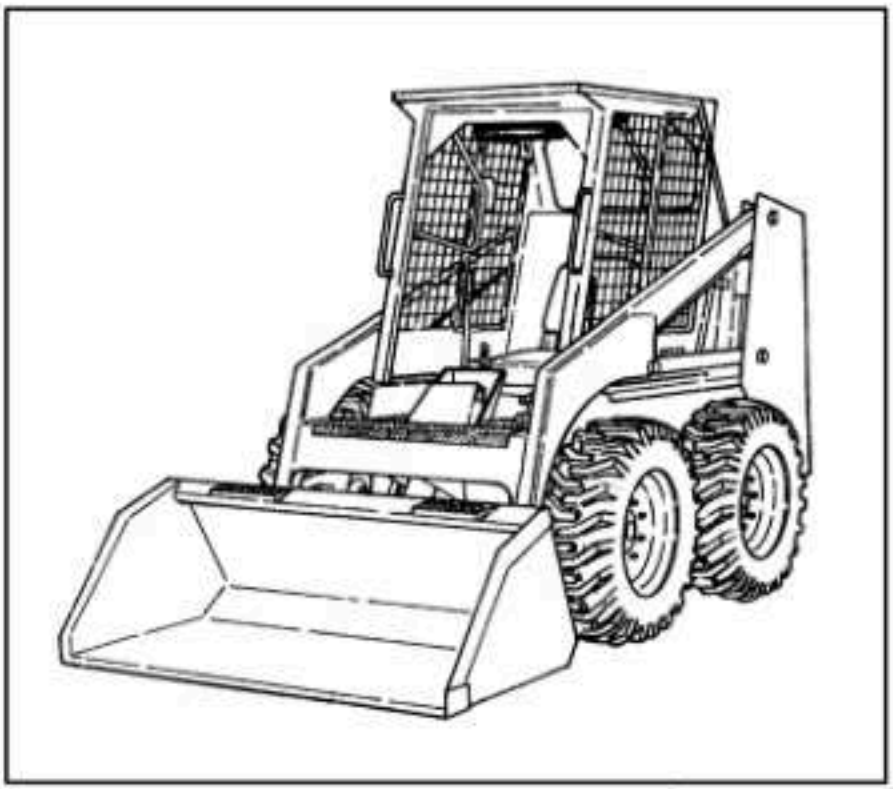

MELROE
INGERSOLL-RAND

bobcat

6566406 (11–82) Printed in U.S.A.

© Melroe Company 1983

MidWestTech | Bobcat 843 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

SAFETY IS YOUR RESPONSIBILITY

We care about your safety.

The Bobcat loader is designed to give maximum operator safety; but no machine design can prevent operator error or carelessness.

BEFORE YOU OPERATE THE BOBCAT LOADER

⚠ WARNING

All operators must have instruction before operating this loader.



8-3928

This Operator's Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat loader. READ AND UNDERSTAND THIS OPERATOR'S MANUAL BEFORE YOU OPERATE YOUR BOBCAT. If you have any questions, see your local Bobcat dealer.

Make sure your Bobcat loader is in good operating condition.

Check all of the items on the Service Schedule under the 8 - 10 hour column.

⚠ WARNING

For your safety, warnings are on the loader and in the manual. Failure to follow these warnings can cause injury or death.

IMPORTANT

This notice shows important procedures which must be followed to prevent damage to the loader.

MidWestTech | Bobcat 843 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >