bobcat

641

S/N 13001 -

Operation & Maintenance Manual




MELROE COMPANY

6566561 12-83I-2C

Printed in U.S.A.

MidWestTech | Bobcat 641 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

CORRECT

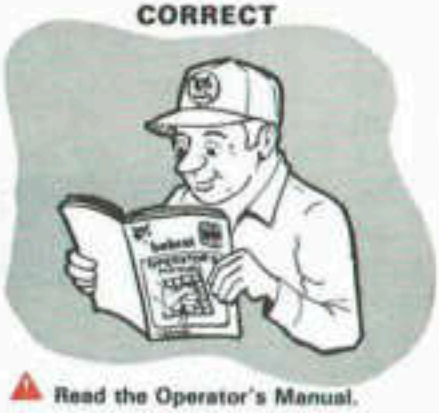

Read the Operator's Manual.

CORRECT



Check oil daily. Use recommended fluids.

CORRECT



Use lift arm stops before working under raised lift arms.

CORRECT



Cleaning and maintenance are required daily.

⚠ WARNING

DO NOT service the Bobcat loader without instructions or taking the necessary safety precautions.

Stop and cool the engine before adding fuel. NO SMOKING.

Do not service loader without using a lift arm stop when lift arms are raised.

Do not lift or lower operator cab without instructions from Operator's Manual or Service Manual.

Do not lift or lower operator cab without jackstands or blocks under rear corners of loader.

Do not stand on loader when lifting or lowering operator cab (ROPS).

Keep rear door closed except for service.

Stop, cool, and clean engine of flammable material.

Keep body, loose objects and clothing away from electrical contacts, moving parts, hot parts, and exhaust.

Avoid contact with leaking hydraulic fluid which is under pressure and can be forced through the skin.

Lead acid batteries produce flammable and explosive gases. Keep arcs, sparks, flames, and lighted tobacco away from the battery.

Battery acid causes severe burns. If acid contacts eyes, skin or clothing flush well with water. For contact with eyes get immediate medical attention.

Do not modify equipment or add attachments not approved by manufacturer.

WARNING: Failure to obey warnings may cause injury or death.

Safety Alert Symbol

CORRECT



Two people standing on the ground are needed to raise the operator cab.

WRONG



Do not wear loose clothing around the loader.

WRONG



Engine must be stopped and cool before checking or adding fluids.

WRONG



Do not arc battery.

Order the manual at mid-west-tech.com >