JX55, JX65, JX75, JX85, JX95 Tractors

After PIN Number HFJ013287

Operator's Manual

6-62660

MidWestTech | Case JX55, JX65, JX75, JX85, JX95 Tractor Operator's Manual | Publication 6-62660

Order the manual at mid-west-tech.com >

CONTENTS

Page

Section 1 - General Information and Safety 1-1
To the owner 1-1
Introduction 1-2
Using this manual 1-3
Communication for the user 1-4
Important ecological considerations 1-5
Tractor identification data 1-6
Working safely 1-9
Safety covers and guards 1-16
Safety decals 1-18
Standardized symbols 1-22


Section 2 - Controls, Instruments and Operation 2-1
Driver's seat 2-2
Instrument Panel 2-6
Instrument console controls 2-11
Operating controls, right-hand side 2-13
Operating controls, left-hand side 2-14
Cab controls 2-16
Cab 2-19
Cab air conditioning system 2-27
Operation 2-31
Before using the tractor 2-31
Starting the engine 2-33
12x4 Transmission with range gear - 30 km/h (19 mph) (12F+4R - Synchro Command) 2-36
12x12 Synchronized mechanical shuttle - 30 km/h (19 mph) (12F+12R - Synchro Shuttle) 2-38
20x12 Synchronized mechanical shuttle with creeper - 30 km/h (19 mph) (20F+12R - Synchro Shuttle) 2-40
Mechanical MFD engagement 2-39
Mechanical controlled differential lock 2-40
Lim-slip front differential lock 2-40

Section 3 - Field Operation 3-1
Power take-off 3-1
Hydraulic lift 3-6
Three-point linkage 3-11
Towing equipment 3-18
Folding ROPS 3-15
Remote control valves 3-21

MidWestTech | Case JX55, JX65, JX75, JX85, JX95 Tractor Operator's Manual | Publicatio... Order the manual at mid-west-tech.com >

ROTATING BEACON - Fig. 26


1. Beacon on/off switch (less cab models)

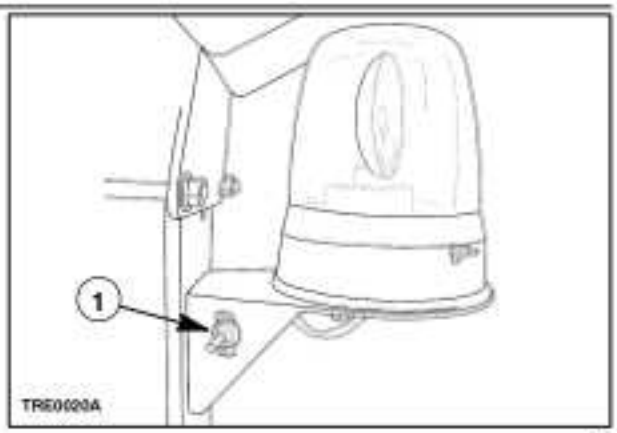

26

PEDAL CONTROLS - Fig. 27


1. Foot throttle.
2. Right brake control pedal.
3. Left brake pedal.
4. Brake pedal lock pin.
5. Transmission clutch pedal.

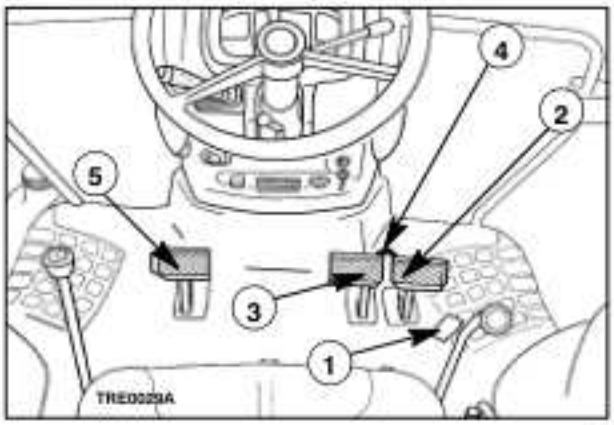

27

Fig. 28

1. Rear mechanical differential lock

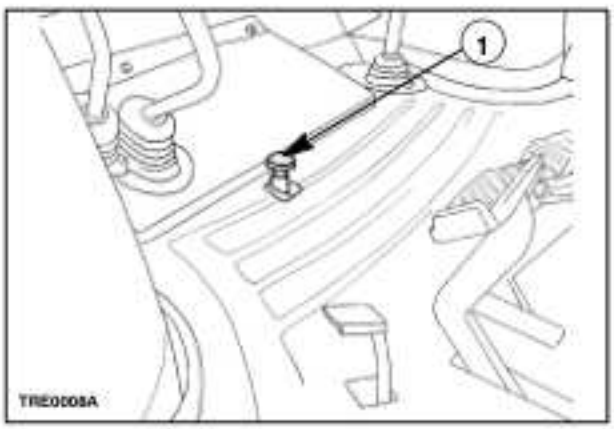


28

MidWestTech | Case JX55, JX65, JX75, JX85, JX95 Tractor Operator's Manual | Publicatio... Order the manual at mid-west-tech.com >

BALLASTING

CAST IRON BALLASTING

If your tractor requires high traction power, the drive wheels may slip due to insufficient grip on the ground, causing loss of power and speed, increased fuel consumption and premature tire wear. We therefore advise fitting cast-iron rings as ballast on the drive wheels, or ballasting wheels with cast-iron discs or water as described on page 3-30 to 3-43. When using very long and heavy implements which could affect the longitudinal stability of the tractor, ballast the front axle by fitting the appropriate cast-iron counterweights.

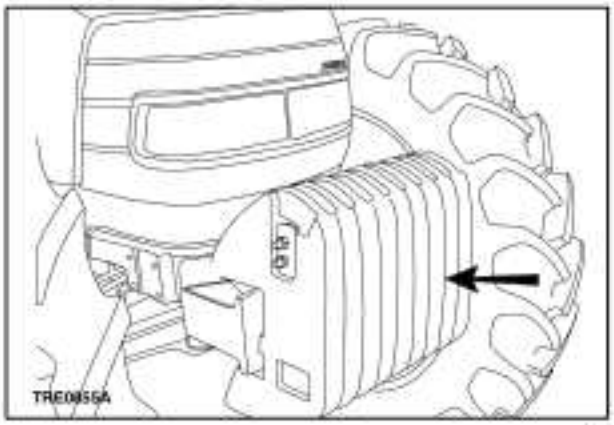


52

Front end weights - Fig. 52

6 or **10** cast-iron counterweights with handles, each weighing **40 kg** (88 lbs) and support bracket weighing **80 kg** (176 lbs), for a total of **320 kg** (705 lbs) or **480 kg** (1058 lbs).

Rear wheel weights - Fig. 53

4 or **6** cast-iron rings, each weighing **50 kg** (110 lbs), for a total of **200 kg** (440 lbs) or **300 kg** (660 lbs).

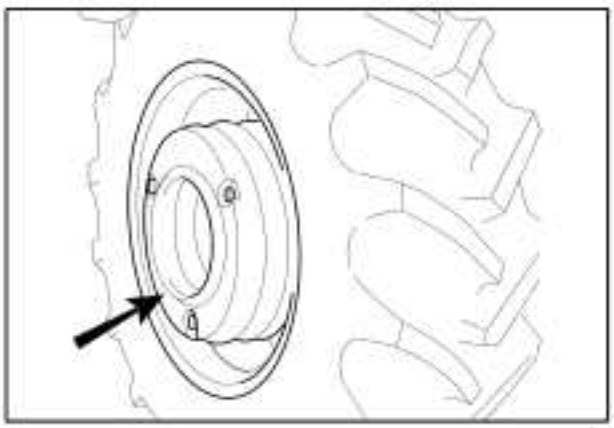

53


MidWestTech | Case JX55, JX65, JX75, JX85, JX95 Tractor Operator's Manual | Publicatio... Order the manual at mid-west-tech.com >

EVERY 50 HOURS

OPERATION 17

HYDRAULIC LIFT AND LINKAGE - Fig. 29

Using a grease gun, pump 251 HEP grease into the three grease points shown.

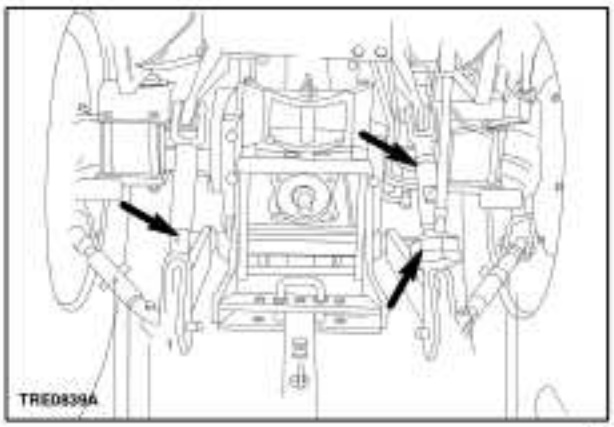


29

OPERATION 18

STEERING CYLINDERS 4WD - Fig. 30

Using a grease gun, pump 251 HEP grease into the two lubrication fittings shown.

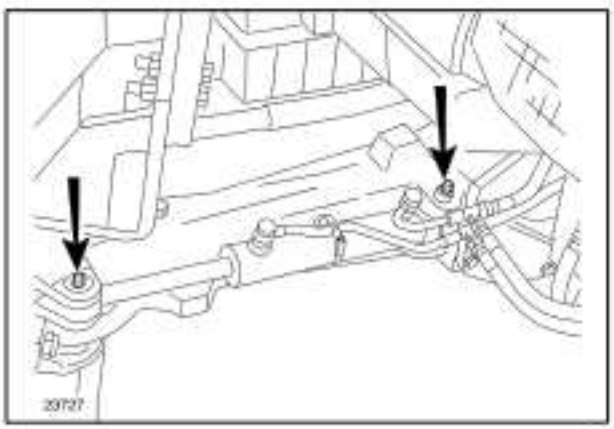

30

MidWestTech | Case JX55, JX65, JX75, JX85, JX95 Tractor Operator's Manual | Publicatio... Order the manual at mid-west-tech.com >