JX60 / JX70 / JX80
JX90 / JX95
Straddle Mount Tractors

Operator's Manual

6-63640

CASE IH AGRICULTURE

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's Manual | Publication 6-63640

Order the manual at mid-west-tech.com >

TRACTOR NOISE LEVEL INFORMATION SHEET

TRACTORS WITH ROLL BARS 2/4WD

Noise ROPS dB(A)		JX 60	JX 70	JX80	JX 90	JX95
Operator's ear	At gear corresponding to 7.25 km/h	85	85	86	85	84
Drive by noise	In Motion	81	81	81	80	82
	Stationary	82	79	79	79	81

Test results are in accordance with directive 77/311/EEC Annex II (Operator's ear noise with no load) and 74/151/EEC (drive–by noise).

WARNING – If the noise level during continuous use reaches or exceeds **85 dB (A)**, the user must take precautions.

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >

CONTENTS

Page

To the user 1
Introduction 2
Using this Manual 3
Communication for the user 4
Important ecological considerations 5

Tractor identification data 7

Safety regulations 9
Guards and safety covers 15
Safety decals 17
Symbols 21

Controls and instruments 23
Seat adjustment 24
Instrument panel 27
Instrument console controls 32
Operating controls, right–hand side 34
Operating controls, left–hand side 36
Operating instructions 41
Before using the tractor 41
Starting the engine 42
Transmission with range gear – 30 km/h (19 mph) (12F+4R – Synchromesh) 45
Transmission with range gear and shuttle – 30 km/h (19 mph) (12F+12R – Synchro Shuttle) 47
Transmission with creeper and shuttle – 30 km/h (19 mph) (20F+12R – Synchro Shuttle) 50
Four wheel drive 53
Mechanical differential lock 54

Field use 57
Power take–off 57
Hydraulic lift 70
Three–point linkage 76
Towing equipment 84
Folding roll bar 88
Remote control valves 89
Hydraulic trailer brakes (not available in all markets) 91

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >

Page

Tyres, wheels, tracks, ballast 93
Wheel track adjustment 93
Steering angle adjustment 98
Tyre maintenance 100
Tyre loading information 101
Inflation pressures 102
Tyre combinations 104
Ballasting 109
Maximum permitted weight 114

Lubrication, maintenance 117
Introduction 117
Access for inspection and maintenance 120
Products and quantities for refilling 121
Lubrication and maintenance table 123
Flexible maintenance 125
When an indicator light illuminates on the dashboard 127
Every 10 hours of work 129
Every 50 hours of work 132
Every 300 hours of work 135
Every 600 hours of work 141
Every 900 hours of work 141
Every 1200 hours or every year 142
Every 1200 hours of work or every 2 years 144
General maintenance 149
Tractor storage 150
Electrical sysyem 151
Recommendations for bodywork maintenance 157


Troubleshooting 159

Specifications and data 167

Index 179

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >

HYDRAULIC LIFT – CONDITIONS OF USE

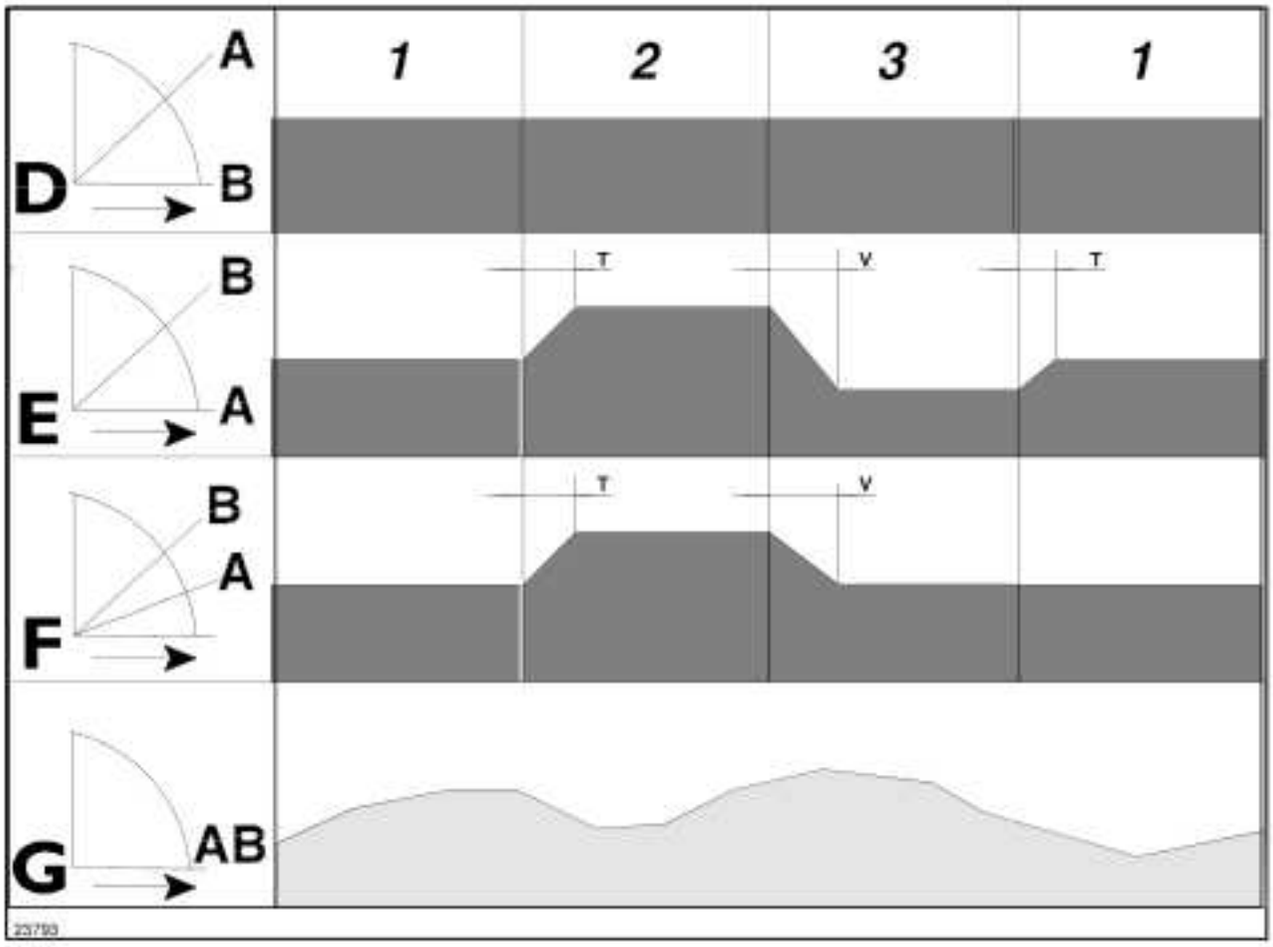

61

A Position control lever.

B Draft control lever.

D Position control operation.

E Draft control operation.

F Mixed control.

G Float function.

1 Medium consistency soil.

2 Sticky soil.

3 Loose soil.

T Constant action time.


V Constant descent speed.

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >

OPERATION 13

FRONT AXLE REAR PIVOT 4WD – Fig. 22

Using a grease gun, pump 251 HEP grease into the lubrication fitting shown.

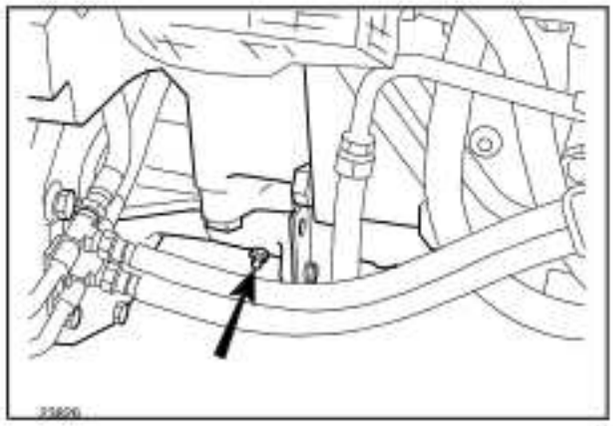


22

OPERATION 14

FRONT AXLE FRONT PIVOT 4WD – Fig. 23

Using a grease gun, pump 251 HEP grease into the lubrication fitting (arrowed) until grease escapes through outlet (**1**).

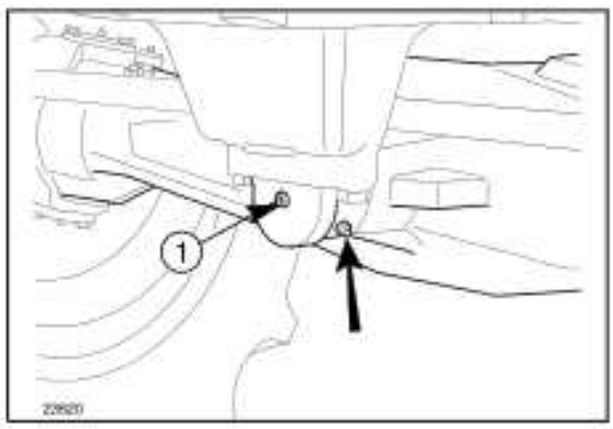


23

OPERATION 15

STEERING CYLINDER 2WD – Fig. 24 and 25


Using a grease gun, pump 251 HEP grease into the lubrication fitting shown.

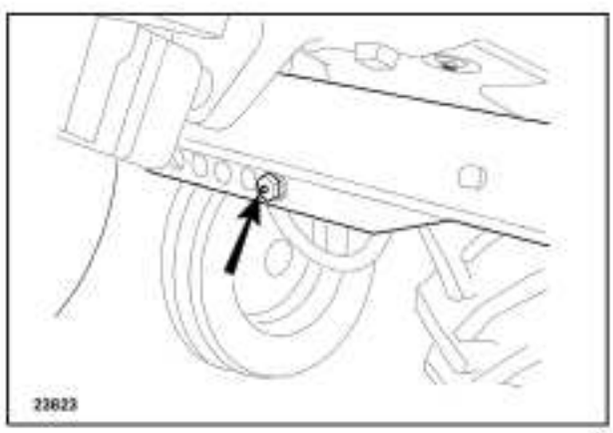

24

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >

DIMENSIONS OF 4WD MODELS WITH STANDARD TYRES

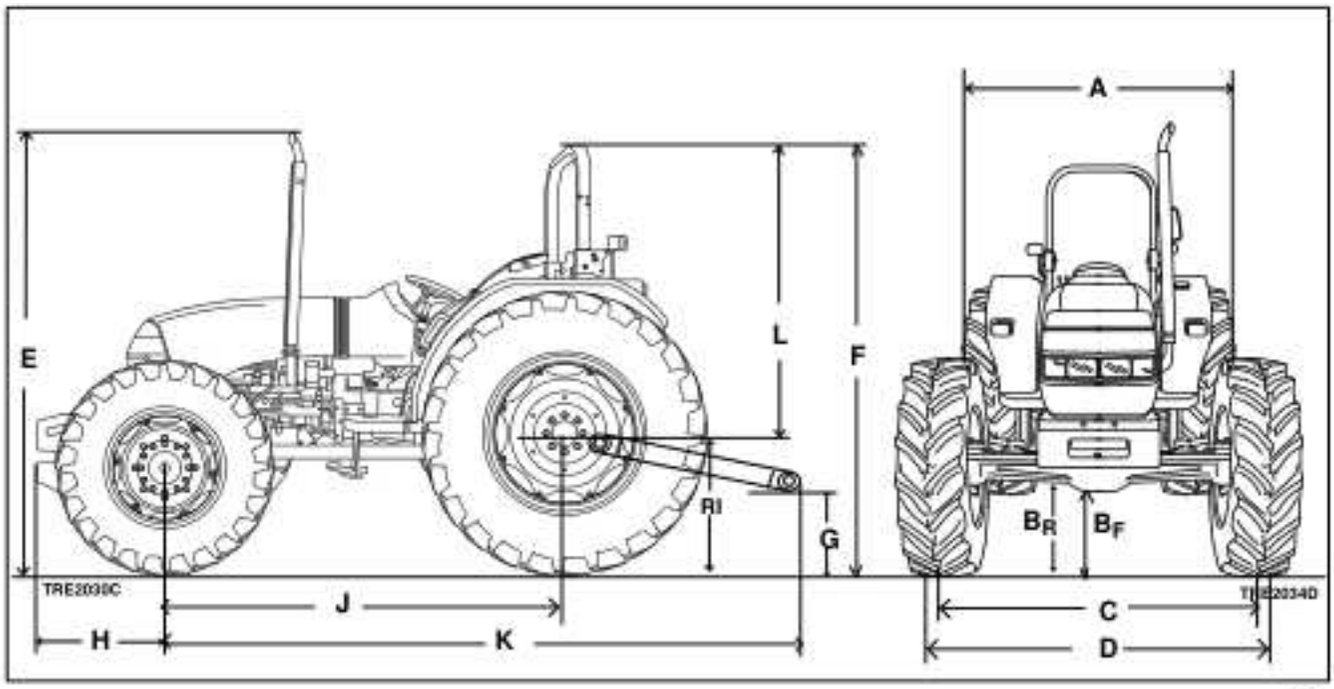

2

Dimensions mm (in)	Specifications	JX 60	JX 70	JX 80	JX 90	JX 95
	Tyres	14.9R28	14.9R30	16.9R30	18.4R30	18.4R34
	Radius Index (RI)	640 (25.2)	665 (26.8)	695 (27.4)	720 (28.4)	770 (30.3)
A	Standard Fenders	1808 (71.2)				
B_F	Under Std Axle	340 (13.4)	365 (14.4)	390 (15.4)	415 (16.3)	465 (18.3)
B_R	Ground Clearance	340 (13.4)				
C	4 Wheel Drive	1445 –1875 (56.9–73.9)		1560–2000 (61.4–78.7)		
D	Manual Adjust Wheels	1425 –1925 (56.1–75.8)		1400–2000 (55.1–78.7)		
E	To Top of Exhaust	1986 (78.2)+495 (19.5)	1986 (78.2)+495 (19.5)	1986 (78.2)+515 (20.3)	1986 (78.2)+515 (20.3)	1986 (78.2)+590 (23.2)
F	Top of ROPS	1788 (70.4)+RI	1788 (70.4)+RI	1788 (70.4)+RI	1788 (70.4)+RI	1788 (70.4)+RI
G	Under Standard Drawbar	RI–254 (10)	RI–254 (10)	RI–254 (10)	RI–254 (10)	RI–254 (10)
H	Weight Carrier+Front Weights	638 (25.1)				
J	4 Wheel Drive Axle	2062 (81.2)		2192 (86.3)		2275 (89.6)
K	4 Wheel Drive Axle	3097 (121.9)		3227 (127.1)		3310 (130.3)
L	Top of seat/ROPS	1788 (70.4)				

* Minimum value measured under front axle
** Minimum value measured under rear drawbar/hitch

NOTE: Ground clearance values have been calculated using the static laden radius of standard tyres shown at pages between 94–97.

MidWestTech | Case JX60, JX70, JX80, JX90, JX95 Straddle Mount Tractor Operator's... Order the manual at mid-west-tech.com >