
7 7
5 5
3 3
H

Operation & Maintenance Manual

753 Base S/N 511350883 & Above
753 Plus S/N 511525541 & Above
753H Plus S/N 511011007 & Above

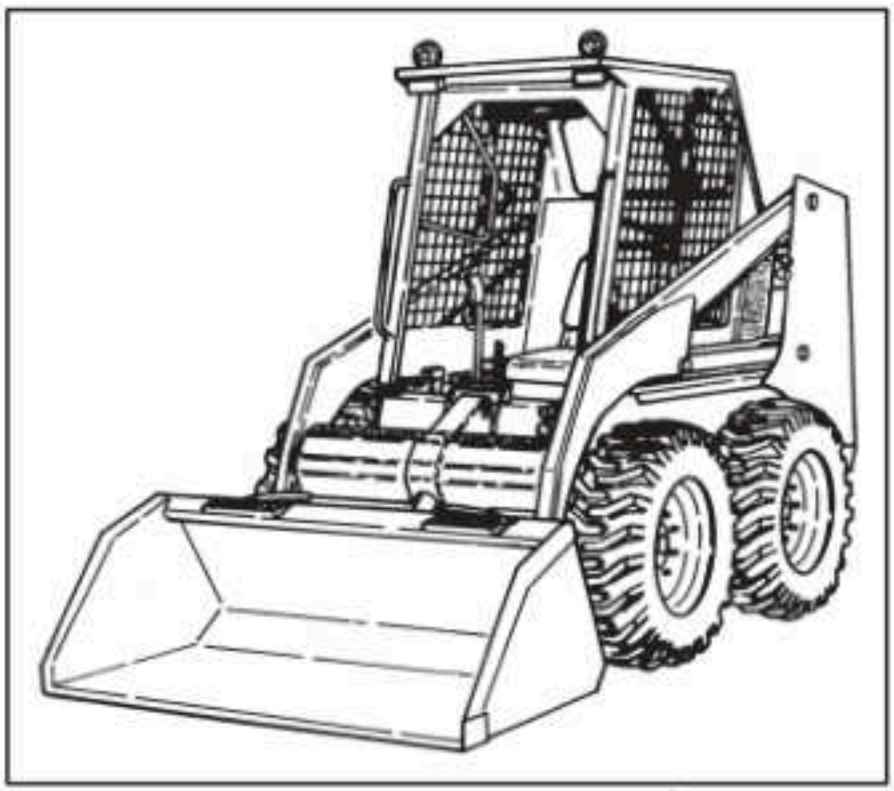

BASE
PLUS
HIGH
HORSEPOWER

MELROE
INGERSOLL-RAND

bobcat

6722761 (3-97) Revised (11-98) Printed in U.S.A.

© Melroe Company 1998

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD iii
SAFETY ix
OPERATING INSTRUCTIONS 1
PREVENTIVE MAINTENANCE 29
SYSTEMS ANALYSIS 61
MACHINE SIGN TRANSLATIONS 65
SPECIFICATIONS 73

CALIFORNIA
PROPOSITION 65 WARNING
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REFERENCE INFORMATION

Write the correct information for Your Bobcat loader in the spaces below. Always use these numbers when referring to you Bobcat loader.

Loader Serial Number ..... _____
Engine Serial Number ..... _____
_____
_____
_____

NOTES: _____
_____
_____
_____
_____
_____

YOUR LOADER DEALER: _____
ADDRESS: _____
PHONE: _____

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

HYDRAULIC CONTROLS

Foot Pedals

⚠ WARNING

Keep both feet on pedals while operating machine. Failure to do so can cause serious injury.

W-2002-1285

Put your feet on the pedals and KEEP THEM THERE any time you operate the loader.

Two foot pedals (Item 1) **[A]** control the hydraulic cylinders for the lift and tilt function.

Lift Arm Operation

The left pedal controls the lift arms. Push on the bottom (heel) (Item 2) **[A]** of the pedal to raise the lift arms.

Push on the top (toe) (Item 3) **[A]** of the pedal to lower the lift arms.

Push the top (toe) (Item 3) **[A]** of the lift pedal all the way forward until it locks into *detent* (float). Use the *float* position of the lift arms to level loose material while driving backward.

Tilt Operation (Bucket)


The right pedal controls the action of the bucket. Push the top (toe) (Item 4) **[A]** of the pedal to tilt the bucket forward.

Push the bottom of the pedal (heel) (Item 5) **[A]** to tilt the bucket backward.

Bucket Position Valve Operation (Optional)

The function of the bucket positioning valve is to keep the bucket in the same approximate position it is placed in, prior to the upward lift cycle.

Bucket positioning functions automatically during the upward lift cycle only.

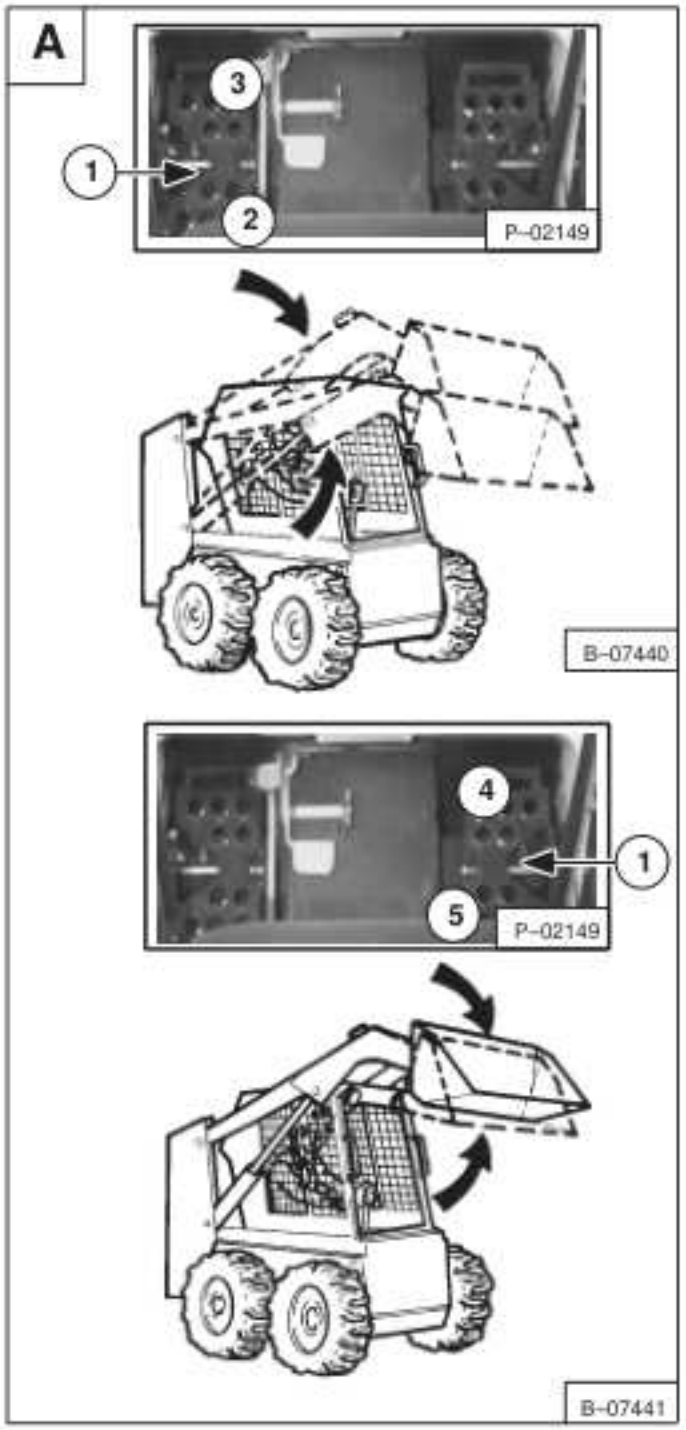

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

⚠ WARNING

Never use attachments or buckets which are not approved by Melroe Company. Buckets and attachments for safe loads of specified densities are approved for each model. Unapproved attachments can cause injury or death.

W–2052–1285

The dealer can identify, for each model loader, the attachments and buckets approved by Melroe Company. The buckets and attachments are approved for Rated Operating Capacity and for secure fastening to the Bob–Tach.

The Rated Operating Capacity for this loader is shown on a label in the operator cab. (See *SPECIFICATIONS* Pages 75 & 77.)

It is determined by using a standard dirt bucket, and material of normal density, such as dirt or dry gravel. If longer buckets are used and load center moves forward and reduces the Rated Operating Capacity. If very dense material is loaded, the volume must be reduced.

Exceeding the Rated Operating Capacity can cause the following problems:


1. Steering the loader may be difficult.
2. Tires may wear faster.
3. There will be a loss of stability.
4. The life of the Bobcat loader will be reduced.

Use the correct size bucket for the type and density of material being handled. For safe handling of materials and avoiding machine damage, the attachment (or bucket) should handle a full load without going over the Rated Operating Capacity for the loader. Partial loads make steering more difficult.

NOTE: When a pallet fork is used, different Bob–Tach levers must be installed for clearance at the pallet fork frame. See your dealer for the correct Bob–Tach levers.

Maximum loads to be carried when using a pallet fork are shown in figure **[B]**.

A

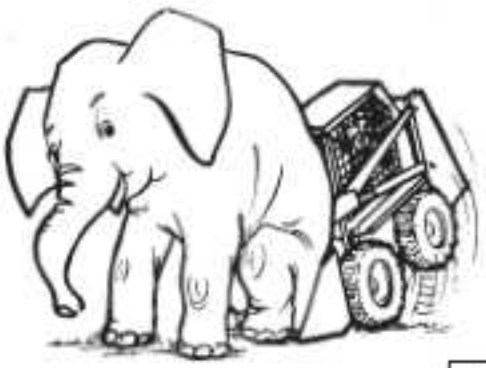

B–06587

⚠ WARNING


AVOID INJURY OR DEATH

Do not exceed rated operating capacity. Excessive load can cause tipping or loss of control.

W–2071–1285

B

WEIGHT OF LOADS LBS. (KG)
(Without counterweights)

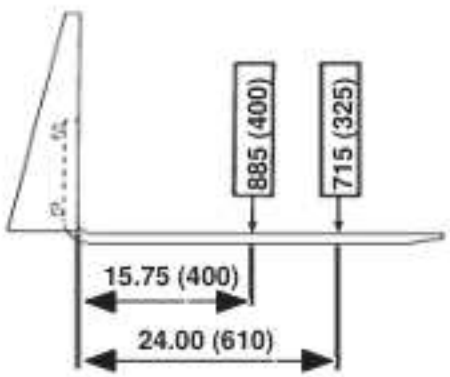

CENTER OF LOAD LOCATION
Inches (mm)

6712931
6712932

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W–2003–1289

SERVICE SCHEDULE		HOURS				
ITEM	**SERVICE REQUIRED**	8–10	50	100	250	■ 1000
Engine Oil	Check the oil level and add oil as needed.					
Air Cleaner	Check display. Service only when required.					
Engine Cooling System	Clean debris from oil cooler, radiator & grill. Check coolant level cold in recovery tank. Add 50/50 ethylene glycol & water as needed.					
Lift Arms, Cyl., Bob–Tach Pivot Pins and Wedges	Lubricate with multi–purpose lithium based grease (12 places).					
Engine Air System	Check for leaks & damaged components.					
Tires	Check for damaged tires and correct air pressure.					
Seat Belt, Seat Bar & Pedal Interlocks	Check the condition of seat belt. Check the seat bar & pedal interlocks for correct operation. Clean dirt and debris from moving parts.					
Safety Signs and Safety Tread	Check for damaged signs (decals) and safety tread. Replace any signs or safety treads that are damaged or worn.					
Operator Cab	Check the fastening bolts, washers & nuts. Check the condition of cab.					
Fuel Filter	Remove the trapped water.					
Hyd. Fluid, Hoses & Tubelines	Check fluid level & add as needed. Check for damaged & leaks Repair & replace as needed.					
Final Drive Trans. (Chaincase)	Check oil level.					
Battery	Check cables & electrolyte level.					
Control Pedals & Steering	Check for correct operation. Repair or adjust as needed.					
Wheel Nuts	† Check for loose wheel nuts & tighten to 105–115 ft.–lbs. (142–156 Nm) torque.					
Parking Brake	Check operations & adjust as needed.					
Alternator Belt	Check tension & adjust as needed.					
Engine Oil & Filter	Replace oil & filter.					
Spark Arrestor Muffler	Clean the spark chamber.					
Engine/Hydro. Drive Belt	* Check for wear or damage. Make adjustment as needed.					
Fuel Filter	Replace filter element.					
Steering Shaft	Grease two fittings.					
Hyd./Hydro. Filter	• Replace the filter element.					
Hyd. Reservoir Breather Cap	Replace the reservoir breather cap.					
Fan Drive Gearbox	Check gear lube level.					
Final Drive Trans.	Replace the oil in the chaincase.					
Hyd. Reservoir	Replace the fluid.					
Hydraulic Motors	Replace the case drain filters (2).					

† **Check wheel nut torque every 8 hours for the first 24 hours.**
• **Also replace hydraulic/hydrostatic filter element when the transmission warning light comes ON.**
■ **Or Every 12 months.**
* **Inspect the new belt after first 50 hours.**

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

BEFORE OPERATING THE BOBCAT LOADER

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

⚠ WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W–2001–1285



B–10731

The Bobcat loader must be in good operating condition before use.

Check all of the items on the Service Schedule under the 8–10 hour column or as shown in this Manual.

⚠WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W–2044–1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I–2019–0284

SAFE OPERATION NEEDS A QUALIFIED OPERATOR*

A QUALIFIED OPERATOR MUST DO THE FOLLOWING:

- UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS
  - The written instructions from Melroe Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, EMI Safety Manual and machine signs (decals).
  - Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of Slow Moving Vehicle emblem. Regulations may identify a hazard such as a utility line.
- HAVE TRAINING WITH ACTUAL OPERATION
  - Operator training must consist of a demostration and verbal instruction. This training is given by your dealer before the loader is delivered.
  - The new operator must start in an area without bystanders and use all the controls until he can operate the loader safely under all conditions of the work area. Always fasten seat belt and lower seat bar before operating.
  - The Skid Steer Loader Operator Training Course is available in English and Spanish. The course provides information for safe and efficient operation. See your dealer for availability.
- KNOW THE WORK CONDITIONS
  - For each material to be handled, the operator must know how to avoid exceeding the rated operating capacity of the loader. For example, in handling certain loose material with a given bucket, he must know whether he can safely take a full load, or only part of a bucket load.
  - The operator must know any prohibited uses or work areas, for example, he needs to know about excessive slopes.
  - Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *SAFETY INSTRUCTIONS* Section of this manual.
  - Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing loader. Safety glasses, hearing protection or loader special applications kit are required for some work. See your dealer about Melroe Safety equipment.


* For an operator be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

SI02–0598


MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >

MONITOR SERVICE CODES

One of the following Alphabetic Codes may appear on your monitor.

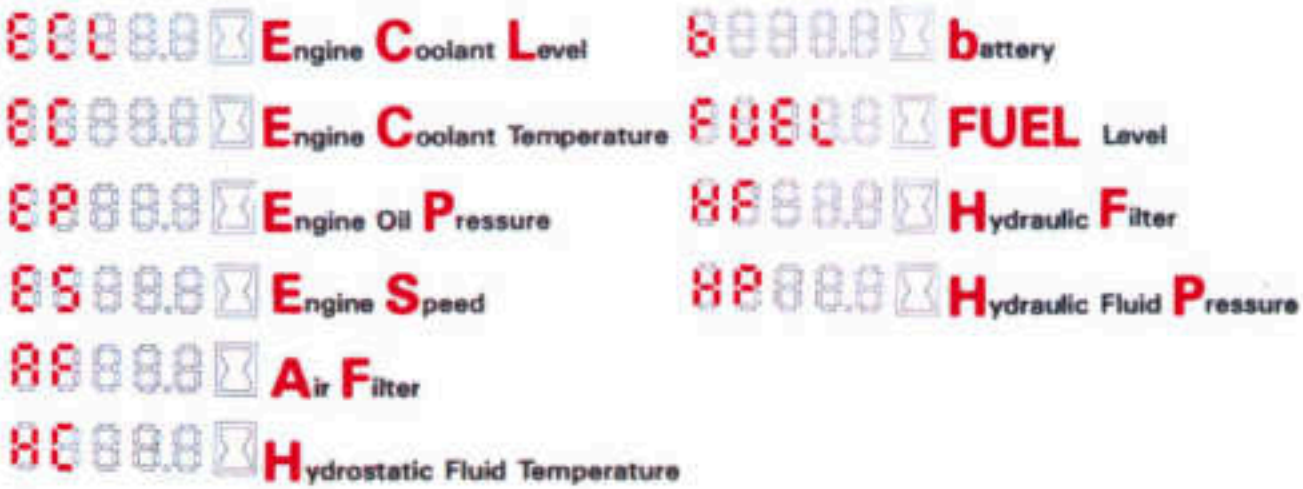

One of the following Numeric Codes will appear following one of the above Alphabetic Codes. Example: HF 1-2

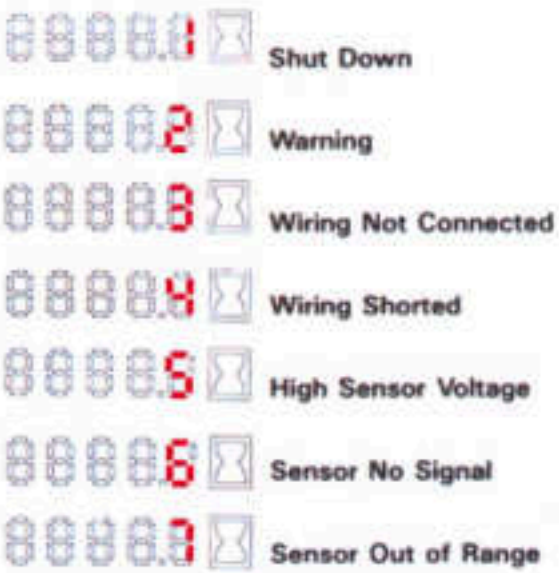

SC01-0198

MidWestTech | Bobcat 753 Base, 753 Plus, 753H Plus Skid Steer Loader Operation & Maint... Order the manual at mid-west-tech.com >