
953

Operation & Maintenance Manual

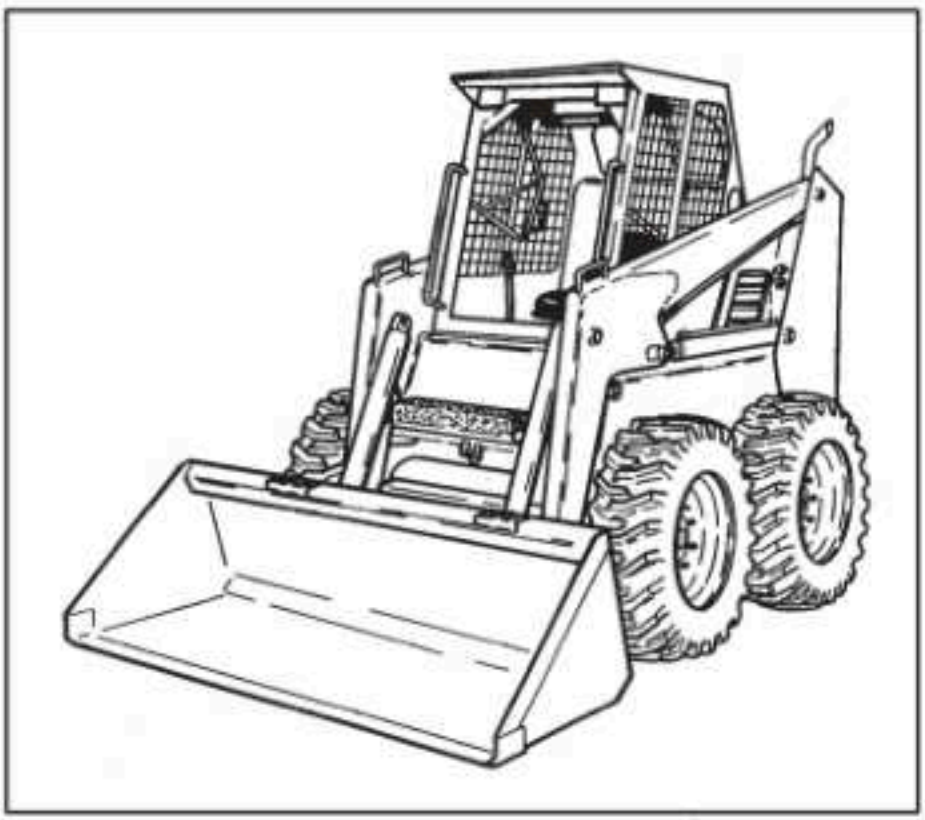

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

MELROE
INGERSOLL-RAND

6724087 (2-97) Revised (9-98)

Printed in U.S.A.

bobcat

© Melroe Company 1998

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD iii
SAFETY ix
OPERATING INSTRUCTIONS 1
PREVENTIVE MAINTENANCE 23
SYSTEMS ANALYSIS 53
MACHINE SIGN TRANSLATIONS 59
SPECIFICATIONS 69

CALIFORNIA
PROPOSITION 65 WARNING
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat loader in the spaces below. Always use these numbers when referring to your Bobcat loader.

Loader Serial Number ..... _____
Engine Serial Number ..... _____
_____
_____
_____

NOTES: _____
_____
_____
_____
_____
_____

YOUR LOADER DEALER: _____
ADDRESS: _____
PHONE: _____

Melroe Company
P.O. Box 128
Gwinner, ND 58040–0128

Melroe Europe
J. Huysmanslaan 59
B–1651 LOT
BELGIUM

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

HYDRAULIC CONTROLS

Foot Pedals

⚠ WARNING

Keep both feet on pedals while operating machine. Failure to do so can cause serious injury.

W-2002-1285

Put your feet on the pedals and KEEP THEM THERE any time you operate the loader.

Two foot pedals (Item 1) **[A]** control the hydraulic cylinders for the lift and tilt functions.

Lift Arm Operation

The left pedal controls the lift arms. Push on the bottom (heel) (Item 2) **[A]** of the pedal to raise the lift arms.

Push on the top (toe) (Item 3) **[A]** of the pedal to lower the lift arms.

Lift Arm Float Position

Push the top (toe) (Item 3) **[A]** of the pedal all the way forward until it locks into *detent* (float).


Use the *float* position of the lift arms to level loose material while driving backward.


Tilt Operation

The right pedal controls the action of the bucket. Push the top (toe) (Item 4) **[A]** of the pedal to tilt the bucket forward.

Push the bottom of the pedal (heel) (Item 5) **[A]** to tilt the bucket backward.

NOTE: Keep the foot pedal area clean of dirt and debris that could interfere with pedal operation. Remove the cover (Item 1) [B] which will permit the cleaning of the foot pedal area by pushing the dirt or debris down the chutes. Make sure the chutes are clean and check for damage to the flex hoses of the chutes. Replace the covers.

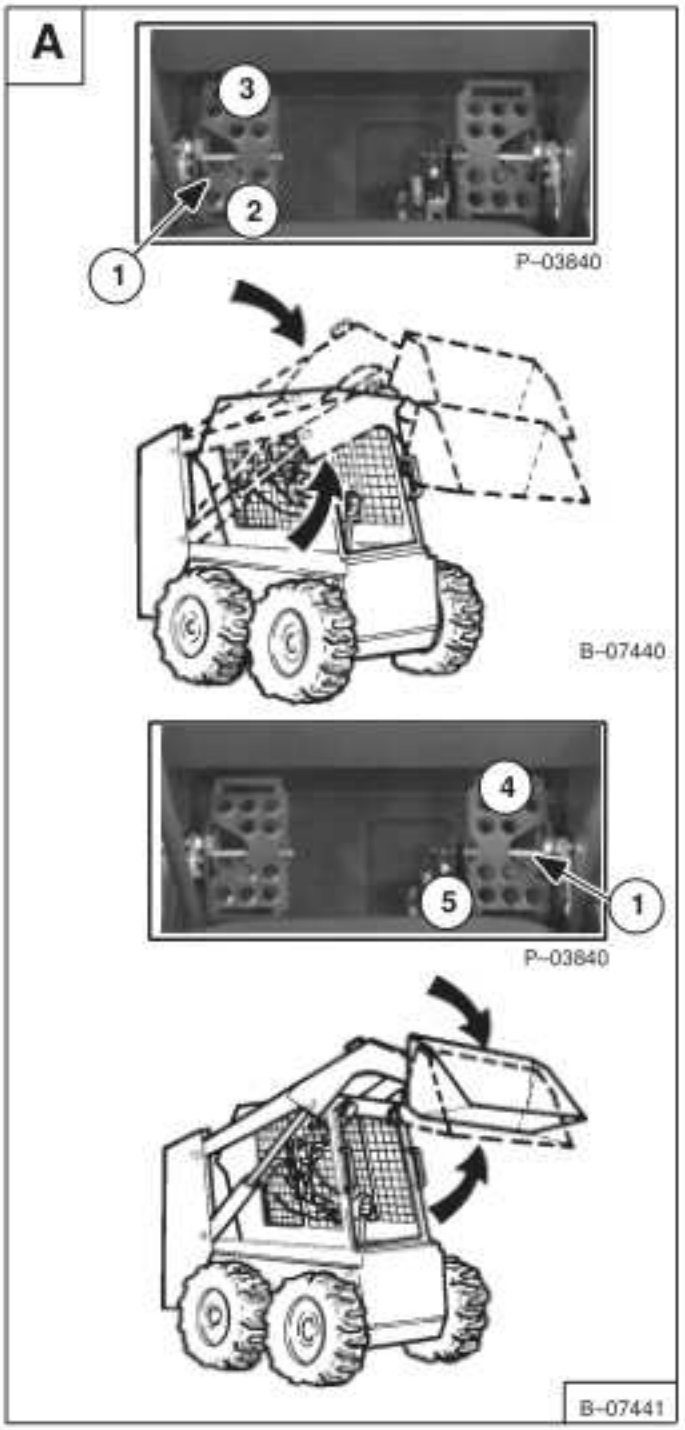

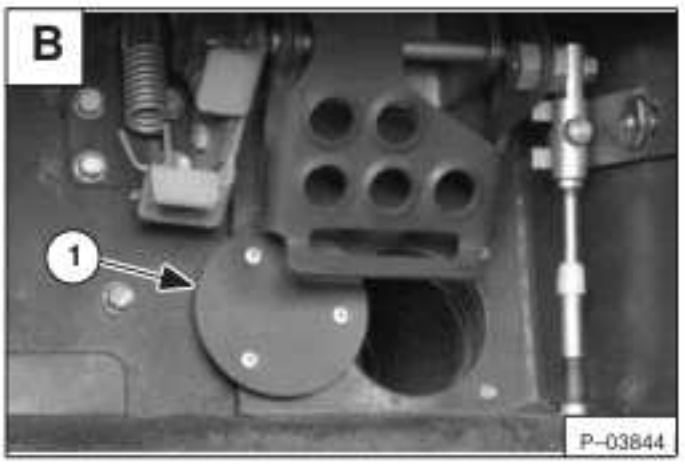

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

ATTACHMENTS AND BUCKETS

⚠ WARNING

Never use attachments or buckets which are not approved by Melroe Company. Buckets and attachments for safe loads of specified densities are approved for each model. Unapproved attachments can cause injury or death.

W–2052–1285

The dealer can identify, for each model loader, the attachments and buckets approved by Melroe Company. The buckets and attachments are approved for Rated Operating Capacity and for secure fastening to the Bob–Tach.

The rated Operating Capacity for this loader is shown on a label in the operator cab. (Also see the Specifications section, Page 73.) It is determined by using a standard dirt bucket, and material of normal density, such as dirt or dry gravel. If longer buckets are used and load center moves forward and reduces the Rated Operating Capacity. If very dense material is loaded, the volume must be reduced.


Exceeding the Rated Operating Capacity can cause the following problems:

1. Steering the loader may be difficult.
2. Tires may wear faster.
3. There will be a loss of stability.
4. The life of the Bobcat loader will be reduced.

Use the correct size bucket for the type and density of material being handled. For safe handling of materials and avoiding machine damage, the attachment (or bucket) should handle a full load without going over the Rated Operating Capacity for the loader. Partial loads make steering more difficult.

Maximum load to be carried when using a pallet fork are shown in figure **[B]**.

A

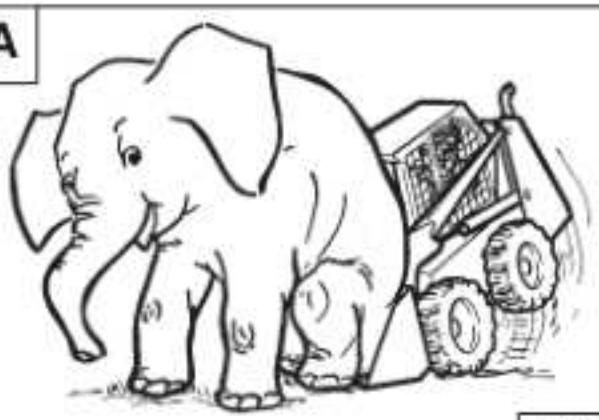

B–07495


⚠ WARNING

AVOID INJURY OR DEATH

Do not exceed rated operating capacity. Excessive load can cause tipping or loss of control.

W–2053–0887

B

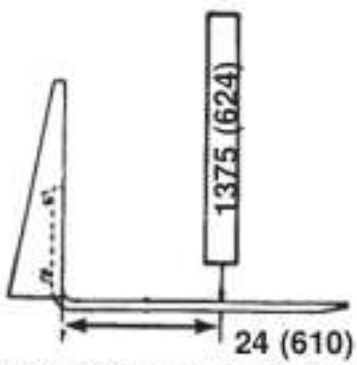

CENTER OF LOAD LOCATION Inches (mm)

953 BOBCAT LOADER

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

FUEL SYSTEM (Cont'd)

In–Line Fuel Filter

The In–Line fuel filter (Item 1) **[A]** is located at the Right Hand fuel tank.

See the *SERVICE SCHEDULE* Page 29 for the correct service interval.

To replace the In–Line fuel filter, raise the operator cab. (See Page 40.)

Remove the clamps. Remove the fuel filter and replace with a new fuel filter.

Removing Air From The Fuel System

After replacing the fuel filter element or when the fuel tank has run out of fuel, the air must be removed from the fuel system prior to starting the engine.

⚠ WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece or cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

W–2072–0496

Loosen the plug at the top (Item 1) **[B]** and at the side (Item 2) **[B]** of the injection pump housing.

Loosen the bolt (Item 1) **[C]** on the top of the final fuel filter.

Have a second person, seat bar down, seat belt fasten and parking brake engaged, crank the engine with the starter.

NOTE: Do not crank the engine more than 15 seconds.

When solid flow of fuel flows from the vent plugs (no air bubbles), tighten all the vent plugs in the following order:

Final fuel filter (Item 1) **[C]**.


Injection pump side plug (Item 2) **[B]**.


Injection pump top plug (Item 1) **[B]**.

Loosen the fittings on the high pressure lines to the fuel injectors (Item 1) **[D]**.


Move the throttle to half open position. Turn the engine, with the starter until no air bubbles show at the fittings of injectors.

Tighten all the high pressure fittings.

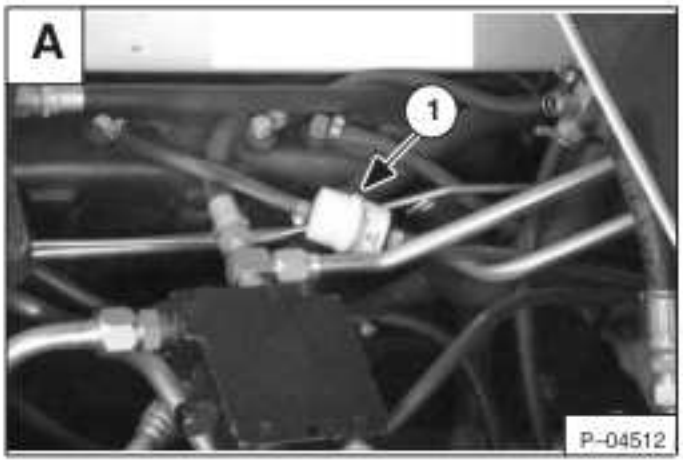

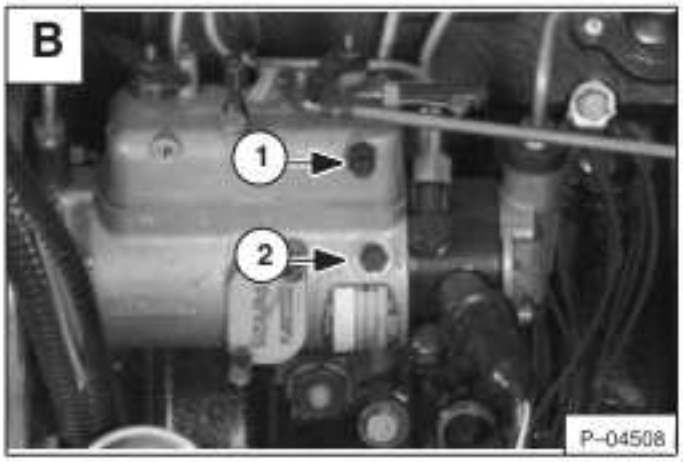



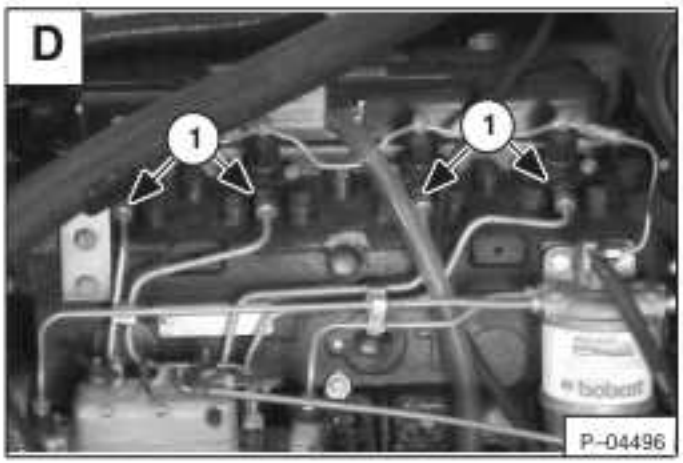

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

BEFORE OPERATING THE BOBCAT LOADER

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

⚠ WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285



B-10731

The Bobcat loader must be in good operating condition before use.

Check all of the items on the Service Schedule under the 8–10 hour column or as shown in this Manual.

⚠WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

SAFE OPERATION NEEDS A QUALIFIED OPERATOR*

A QUALIFIED OPERATOR MUST DO THE FOLLOWING:

- UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS
  - The written instructions from Melroe Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, EMI Safety Manual and machine signs (decals).
  - Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of Slow Moving Vehicle emblem. Regulations may identify a hazard such as a utility line.
- HAVE TRAINING WITH ACTUAL OPERATION
  - Operator training must consist of a demostration and verbal instruction. This training is given by your dealer before the loader is delivered.
  - The new operator must start in an area without bystanders and use all the controls until he can operate the loader safely under all conditions of the work area. Always fasten seat belt and lower seat bar before operating.
  - The Skid Steer Loader Operator Training Course is available in English and Spanish. The course provides information for safe and efficient operation. See your dealer for availability.
- KNOW THE WORK CONDITIONS
  - For each material to be handled, the operator must know how to avoid exceeding the rated operating capacity of the loader. For example, in handling certain loose material with a given bucket, he must know whether he can safely take a full load, or only part of a bucket load.
  - The operator must know any prohibited uses or work areas, for example, he needs to know about excessive slopes.
  - Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *SAFETY INSTRUCTIONS* Section of this manual.
  - Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing loader. Safety glasses, hearing protection or loader special applications kit are required for some work. See your dealer about Melroe Safety equipment.

* For an operator be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

SI02-0598

MidWestTech | Bobcat 953 Skid Steer Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >