SERVICE MANUAL

EH27.B
HYDRAULIC EXCAVATOR

NEW HOLLAND
CONSTRUCTION

6-78080

MidWestTech | New Holland EH27.B Hydraulic Excavator Service Manual | Publication 6-7...

Order the manual at mid-west-tech.com >

SHOP MANUAL
EH27.B
HYDRAULIC EXCAVATOR
TABLE OF CONTENTS

SECTION 1
STANDARD SPECIFICATIONS AND MAINTENANCE

Table of Contents I
(Book/Form Number: 6-78100 NA)

CHAPTER 1
GENERAL INFORMATION AND SAFETY
Table of Contents 1-1
(Book/Form Number: 6-78110 NA)

CHAPTER 2
SPECIFICATIONS
Table of Contents 2-1
(Book/Form Number: 6-78120 NA)

CHAPTER 3
ATTACHMENT DIMENSIONS
Table of Contents 3-1
(Book/Form Number: 6-78130 NA)

CHAPTER 11
TOOLS
Table of Contents 11-1
(Book/Form Number: 6-78140 NA)

CHAPTER 12
STANDARD MAINTENANCE TIME TABLE
Table of Contents 12-1
(Book/Form Number: 6-78150 NA)

CHAPTER 13
MAINTENANCE STANDARDS AND TEST PROCEDURES
Table of Contents 13-1
(Book/Form Number: 6-78160 NA)

SECTION 2
HYDRAULIC, ELECTRICAL, AND COMPONENT SYSTEMS

Table of Contents I
(Book/Form Number: 6-78170 NA)

CHAPTER 22
HYDRAULIC SYSTEM
Table of Contents 22-1
(Book/Form Number: 6-78180 NA)

CHAPTER 23
ELECTRICAL SYSTEM
Table of Contents 23-1
(Book/Form Number: 6-78190 NA)

CHAPTER 24
COMPONENTS SYSTEM
Table of Contents 24-1
(Book/Form Number: 6-78200 NA)

MidWestTech | New Holland EH27.B Hydraulic Excavator Service Manual | Publication 6-7... Order the manual at mid-west-tech.com >

SECTION 3
DISASSEMBLY AND ASSEMBLY
Table of Contents I
(Book/Form Number: 6-78210 NA)
CHAPTER 31
GENERAL DISASSEMBLY AND ASSEMBLY
Table of Contents 31-1
(Book/Form Number: 6-78220 NA)
CHAPTER 32
ATTACHMENTS
Table of Contents 32-1
(Book/Form Number: 6-78230 NA)
CHAPTER 33
UPPER SLEWING STRUCTURE
Table of Contents 33-1
(Book/Form Number: 6-78240 NA)
CHAPTER 34
TRAVEL SYSTEM
Table of Contents 34-1
(Book/Form Number: 6-78250 NA)
SECTION 4
TROUBLESHOOTING
Table of Contents I
(Book/Form Number: 6-78260 NA)
CHAPTER 42
TROUBLESHOOTING (HYDRAULIC SYSTEM)
Table of Contents 42-1
(Book/Form Number: 6-78270 NA)
CHAPTER 43
TROUBLESHOOTING (ELECTRICAL SYSTEM)
Table of Contents 43-1
(Book/Form Number: 6-78280 NA)
CHAPTER 44
TROUBLESHOOTING (ENGINE)
Table of Contents 44-1
(Book/Form Number: 6-78290 NA)
SECTION 5
ENGINE
Table of Contents I
(Book/Form Number: 6-78310 NA)
CHAPTER 51
THIS MANUAL EXPLAINS THE ENGINE PROPER AND IS FAITHFUL TO YANMAR DIESEL ENGINE'S SERVICE MANUALS.
..... 1
(Book/Form Number: 6-78580 NA)

MidWestTech | New Holland EH27.B Hydraulic Excavator Service Manual | Publication 6-7... Order the manual at mid-west-tech.com >

SECTION 1
STANDARD SPECIFICATIONS AND MAINTENANCE

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION AND SAFETY
TABLE OF CONTENTS 1-1
1.1 General Safety Information 1-3
1.2 Safety Precautions 1-4
1.3 General Precautions for Repairs 1-6
1.4 International Unit Conversion System 1-9

CHAPTER 2
SPECIFICATIONS
TABLE OF CONTENTS 2-1
2.1 Components Name 2-3
2.2 Machine Dimensions 2-4
2.3 Specifications and Performance 2-6
2.4 Machine and Components Weights (Dry) 2-7
2.5 Transportation 2-8
2.6 Type of Track Shoes 2-10
2.7 Type of Bucket 2-10
2.8 Engine Specifications 2-11


CHAPTER 3
ATTACHMENT DIMENSIONS
TABLE OF CONTENTS 3-1
3.1 Boom 3-3
3.2 Arm 3-7
3.3 Bucket 3-12
3.4 Dozer 3-14
3.5 Swing 3-17

CHAPTER 11
TOOLS
TABLE OF CONTENTS 11-1
11.1 Torque Specifications for Capscrews and Nuts 11-3
11.2 Screw and Tool Sizes 11-5
11.3 Torque Specifications for Joints and Hoses 11-6
11.4 Torque Specifications for Sleeve Type Tube Fittings 11-7
11.5 Plugs 11-8
11.6 Special Spanners for Tubes 11-10
11.7 Special Tools 11-11
11.8 Application of Screw Locking and Sealing Compounds 11-11
11.9 Counterweight Lifting Jig 11-12
11.10 Upper Frame Lifting Jig 11-13


CHAPTER 12
STANDARD MAINTENANCE TIME TABLE
TABLE OF CONTENTS 12-1
12.1 Working Standards for Time Tables 12-3
12.2 Time Tables 12-4

MidWestTech | New Holland EH27.B Hydraulic Excavator Service Manual | Publication 6-7... Order the manual at mid-west-tech.com >


BOOM CIRCUIT - BOOM-UP OPERATION

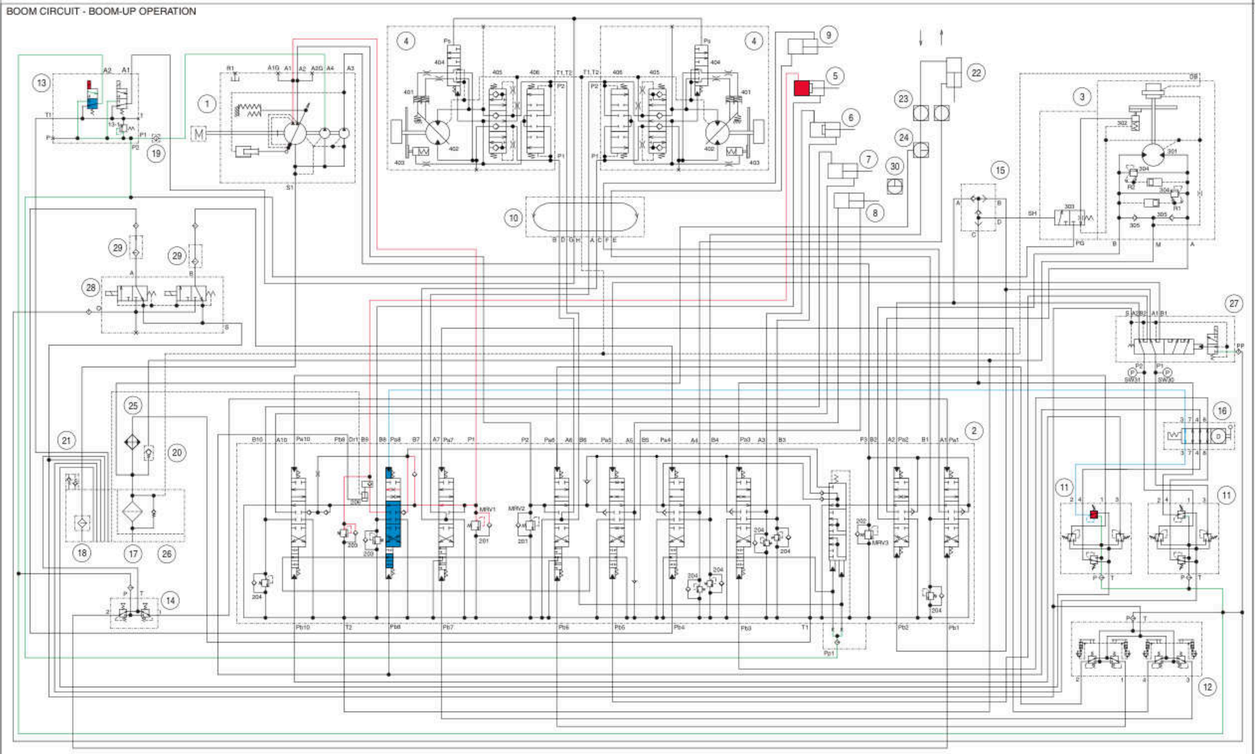


ARM CIRCUIT - ARM-IN OPERATION

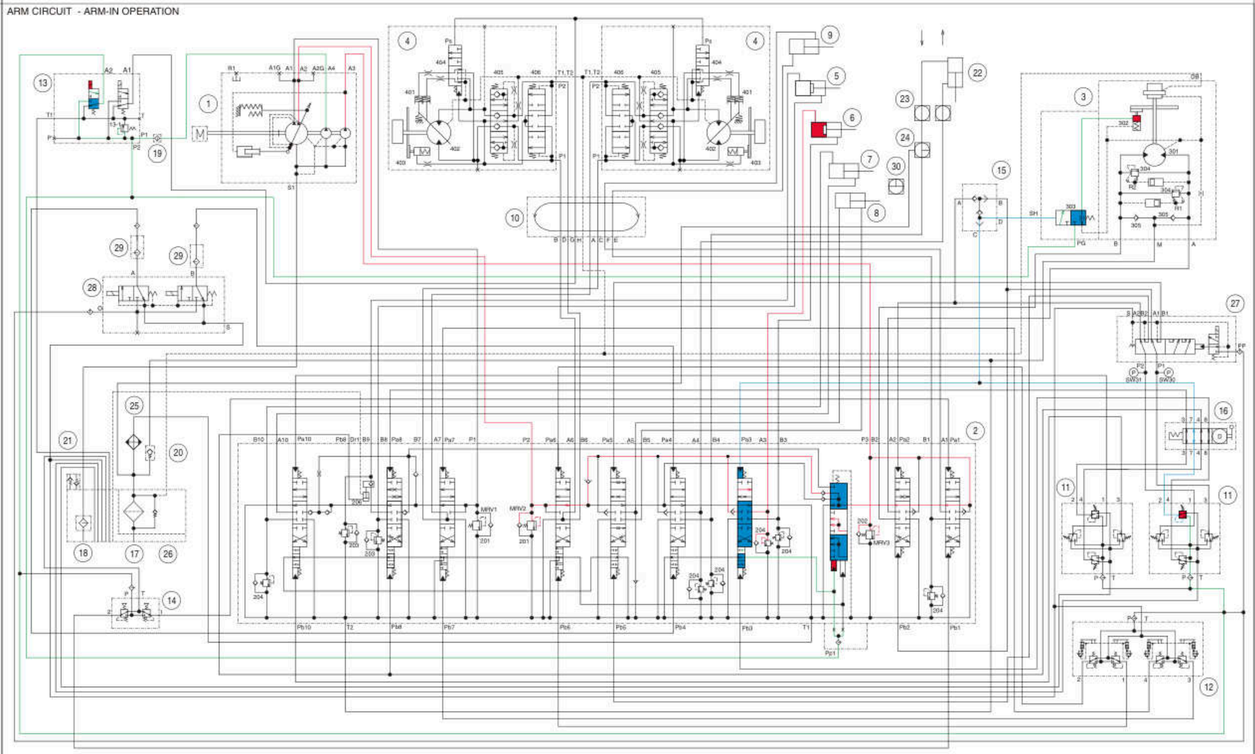

SWING CIRCUIT - BOOM SWING-LEFT OPERATION

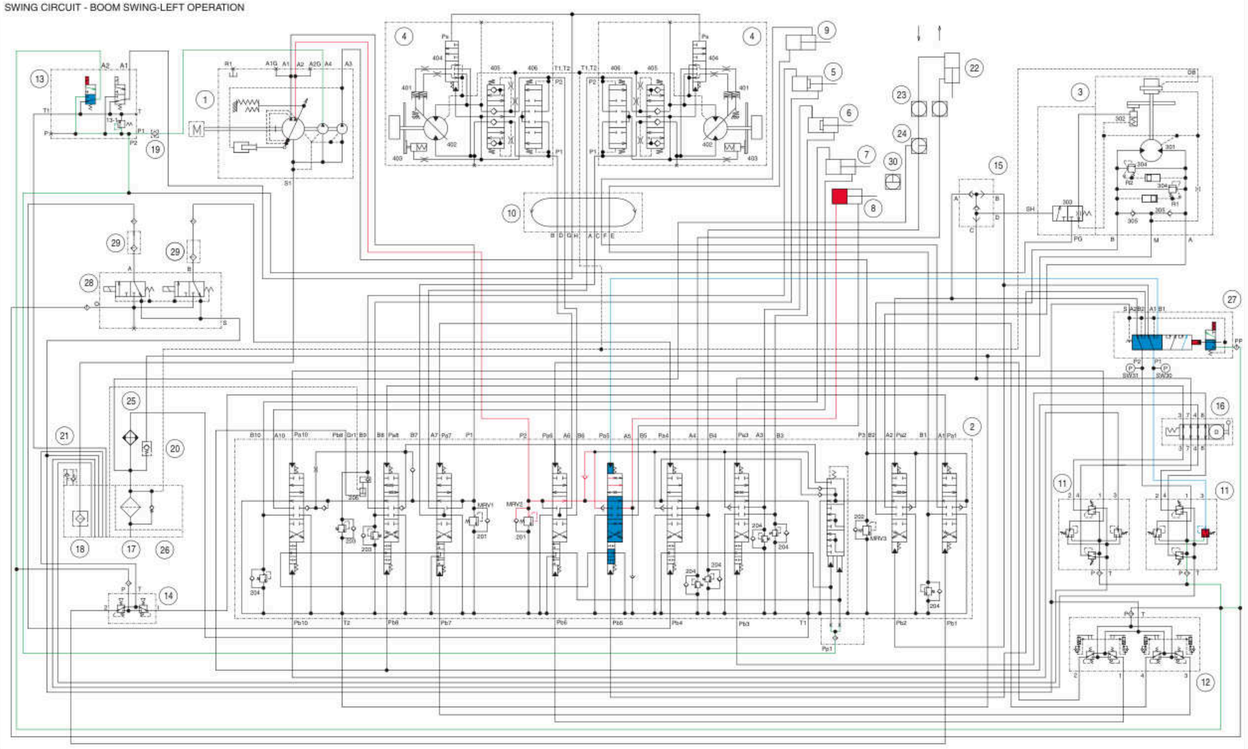

DOZER CIRCUIT - DOZER-DOWN OPERATION

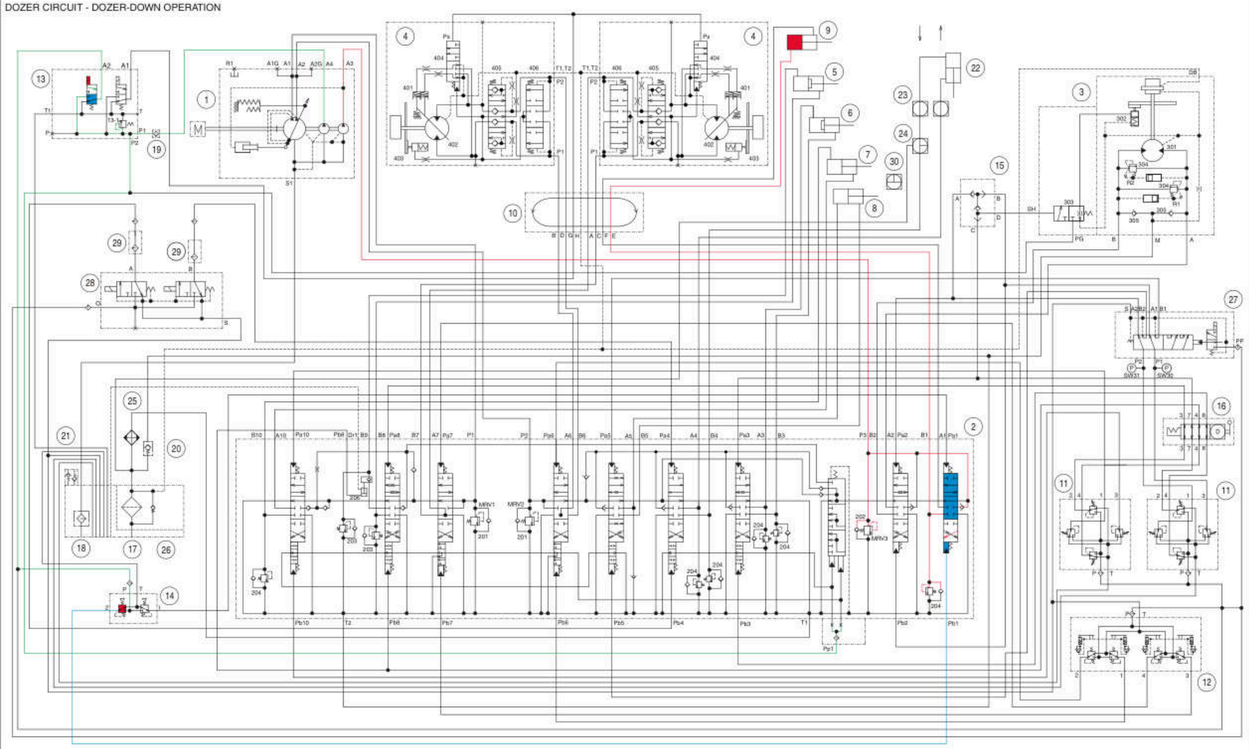


COMPONENT IDENTIFICATION

1. PUMP ASSEMBLY
2. CONTROL VALVE
3. SLEWING MOTOR
4. TRAVEL MOTOR
5. BOOM CYLINDER / CANOPY CAB
6. ARM CYLINDER
7. BUCKET CYLINDER
8. SWING CYLINDER
9. DOZER CYLINDER
10. SWIVEL JOINT
11. PILOT VALVE (ATT)
12. PILOT VALVE (TRAVEL)
13. SOLENOID VALVE
14. PILOT VALVE (DOZER)
15. SHUTTLE VALVE
16. MULTI CONTROL VALVE
17. RETURN FILTER (ELEMENT)
18. SUCTION STRAINER
19. INLINE FILTER
20. CHECK VALVE
21. HYDRAULIC RESERVOIR VENT
22. NIBBLER CYLINDER
23. STOP VALVE
24. SELECTOR VALVE
25. OIL COOLER
26. HYDRAULIC OIL TANK
27. SOLENOID VALVE
28. SOLENOID VALVE
29. ORIFICE

NOTES

1. 201 (MAIN RELIEF VALVE P1,P2) 23.0 MPa (3340 psi)
2. 202 (MAIN RELIEF VALVE P3) 23.0 MPa (3340 psi)
3. 203 (OVERLOAD RELIEF VALVE) 27.5 MPa (4000 psi)
4. 204 (OVERLOAD RELIEF VALVE) 25.5 MPa (3700 psi)
5. 304 (SLEW RELIEF VALVE) 18.5 MPa (2680 psi)
6. 13-1 (PILOT RELIEF VALVE) 3.5MPa (508 psi)

HYDRAULIC SYMBOLS

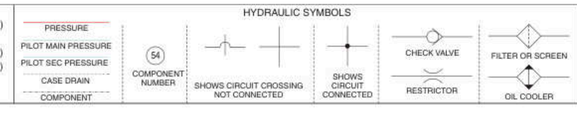

HYDRAULIC SCHEMATIC
EH27.B HYDRAULIC EXCAVATORS

Additional copies of this Hydraulic and Electrical Schematic can be ordered through Technical Publications Distribution System. The part number is 6-78330

BC04NB65

Order the manual at mid-west-tech.com >