650K, 750K, 850K SERIES 2 CRAWLER

OPERATOR'S MANUAL

6-85641 NA
Issued 12-2005

CASE

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6...
Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
TO THE OWNER 1-1
RIGHT, LEFT, FRONT, AND REAR OF THE MACHINE 1-2
IDENTIFICATION NUMBERS 1-3
MACHINE COMPONENTS 1-5

CHAPTER 2
SAFETY AND DECALS
TABLE OF CONTENTS 2-1
SAFETY RULES 2-3
BEFORE OPERATION 2-3
PERSONAL SAFETY 2-4
UTILITY SAFETY 2-4
MACHINE OPERATION 2-5
PARKING THE MACHINE 2-6
FIRE EXTINGUISHER 2-6
BURN PREVENTION 2-6
HAZARDOUS CHEMICALS 2-6
FIRE OR EXPLOSION PREVENTION 2-7
MAINTENANCE 2-8
DUCTILE IRON 2-8
SAFETY DECALS 2-9

CHAPTER 3
INSTRUMENTS AND CONTROLS
TABLE OF CONTENTS 3-1
INSTRUMENT PANEL 3-3
BRAKE, DECELERATOR AND FOOTREST 3-9
PARKING BRAKES 3-9
DIRECTION CONTROL LEVER,TRANSMISSION CONTROL, HAND THROTTLE 3-10
DOZER BLADE CONTROL LEVER 3-12
CONTROL HANDLE POSITIONS 3-14
RIPPER CONTROL LEVER 3-14
OPERATORS SEAT 3-15
CAB 3-16
OPERATORS SEAT BELT 3-21

CHAPTER 4
OPERATING INSTRUCTIONS
TABLE OF CONTENTS 4-1
RUN-IN PERIOD OF A NEW MACHINE 4-3
ENGINE OPERATION 4-4
CRAWLER OPERATION 4-6
MOVING A DISABLED CRAWLER 4-17
TRANSPORTING THE MACHINE 4-20
OPERATING IN HOT WEATHER 4-22
OPERATING IN COLD WEATHER 4-22
BOOSTER BATTERY CONNECTION TO MACHINE BATTERY 4-24
TILTING THE CAB 4-25
DOZER OPERATION 4-28
TRACK SYSTEMS 4-29
FACTORS CONTROLLING UNDERCARRIAGE WEAR 4-31

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
TABLE OF CONTENTS ... 5-1
GENERAL SAFETY BEFORE YOU SERVICE ... 5-3
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM ... 5-4
PLASTIC AND RESIN PARTS ... 5-4
ENGINE HOURMETER ... 5-4
FLUIDS AND LUBRICANTS ... 5-5
LUBRICATION AND MAINTENANCE CHART ... 5-6
GREASE FITTINGS ... 5-7
ACCESS DOORS ... 5-9
ENGINE LUBRICATION ... 5-10
ENGINE SERVICE ... 5-11
AIR FILTER SYSTEM ... 5-13
ENGINE COOLING SYSTEM ... 5-17
DIESEL FUEL SYSTEM ... 5-19
HYDRAULIC SYSTEM ... 5-22
TRANSMISSION ... 5-24
FINAL DRIVES ... 5-26

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
TABLE OF CONTENTS ... 6-1
TRACKS ... 6-3
REVERSIBLE FAN POSITIONS (IF EQUIPPED) ... 6-6
ROLL-OVER PROTECTIVE STRUCTURE ... 6-7
MACHINE CLEANING ... 6-8
ADJUSTING THE RIPPER SHANKS ... 6-8
DOZER BLADE PITCH ADJUSTMENT ... 6-9
FIRE EXTINGUISHER MOUNTING (IF EQUIPPED) ... 6-10
FAN AND AIR CONDITIONING DRIVE BELT ... 6-10
MACHINE STORAGE ... 6-11

CHAPTER 7
ELECTRICAL
TABLE OF CONTENTS ... 7-1
ELECTRICAL SYSTEM ... 7-3
FUSES AND RELAYS ... 7-5
INSTRUMENT CLUSTER ... 7-7
ACCESSORY OUTLETS ... 7-8

CHAPTER 8
SPECIFICATIONS
TABLE OF CONTENTS ... 8-1
ENGINE SPECIFICATIONS ... 8-3
HYDRAULIC SYSTEM ... 8-3
TRAVEL SPEEDS ... 8-3
TRACK SYSTEM ... 8-4
TRANSPORT LENGTH AND WIDTH WITH BLADE FULLY ANGLED 25 DEGREES ... 8-5
OPERATING DATA AND DIMENSIONS ... 8-6
OPERATING DATA AND DIMENSIONS - RIPPER ... 8-8
WEIGHTS ... 8-8

CHAPTER 9
INDEX


MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >

Chapter 2
SAFETY AND DECALS

TABLE OF CONTENTS

SAFETY RULES 2-3
BEFORE OPERATION 2-3
PERSONAL SAFETY 2-5
UTILITY SAFETY 2-5
MACHINE OPERATION 2-6
PARKING THE MACHINE 2-6
FIRE EXTINGUISHER 2-7
BURN PREVENTION 2-7
HAZARDOUS CHEMICALS 2-7
FIRE OR EXPLOSION PREVENTION 2-7
MAINTENANCE 2-8
DUCTILE IRON 2-8
SAFETY DECALS 2-9

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >

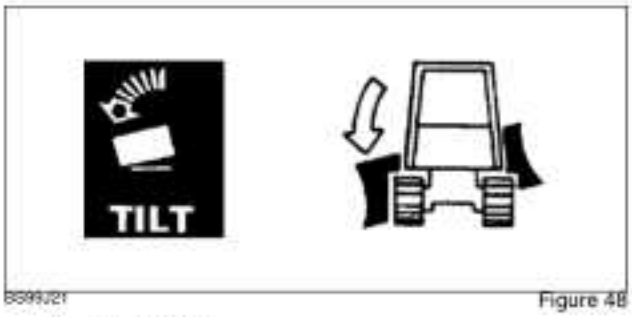

BS99J21 Figure 48

E. TILT LEFT




BS99J218 Figure 49

F. TILT RIGHT

C. HOLD


The blade will stop moving when the control lever is in the HOLD position. When released, the control lever will return automatically to the HOLD position.

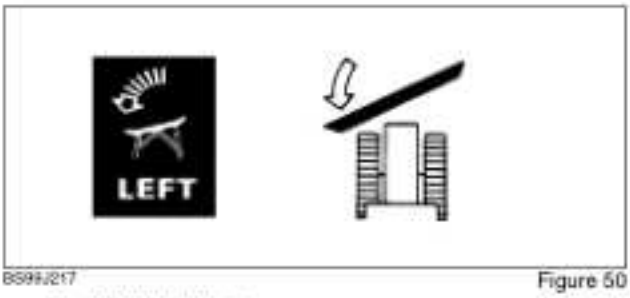

BS99J217 Figure 50

G. ANGLE LEFT


Rotate the lever counter- clockwise to angle the blade left.

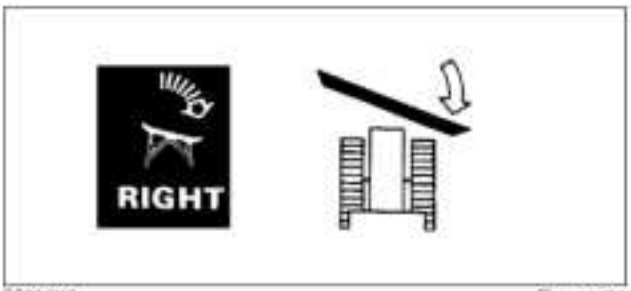

BS99J219 Figure 51

H. ANGLE RIGHT

Rotate the lever clockwise to angle the blade right.

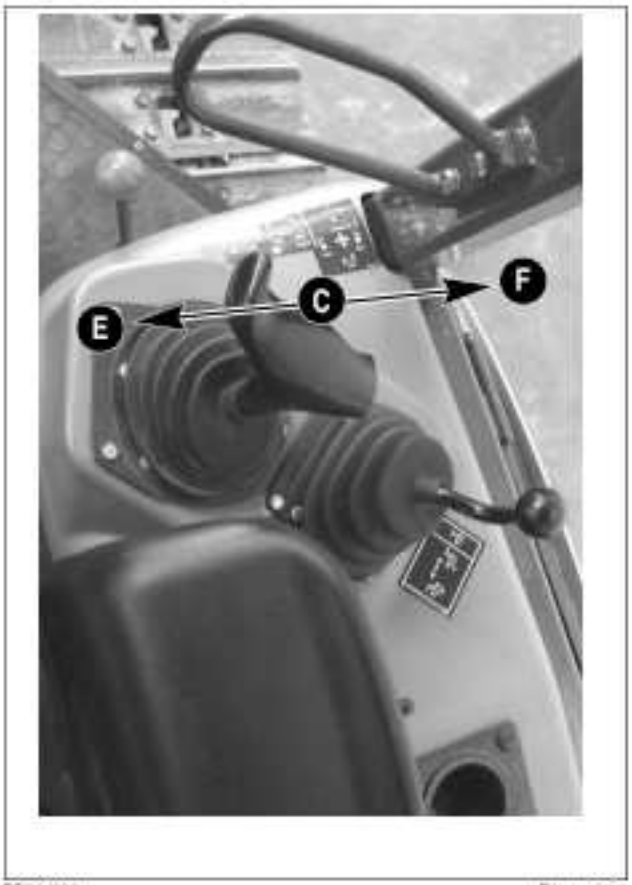

BD02J038 Figure 52



BD02J038 Figure 53

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >

AIR FILTER SYSTEM


SERVICE SPECIFICATIONS

Air Filter Dust Valve ..... Check Every 50 Hours
Air Filter Element Replacement ..... Every 2000 Hours or Once Each Year

NOTE: *Service the elements if the warning lamp for the air filter restriction illuminates.*

1. Do not install a new element that is more than five years old. The date of manufacture is on the end cap of the element.
2. Replace both elements after one year in the machine.
3. Do not remove the elements from the machine to check for restriction. Always follow the recommended service instructions in this section.
4. Each time you service the air cleaner system, make sure all hose connections and flanges are air tight. Replace all damaged parts.

WARNING LAMP FOR AIR FILTER RESTRICTION

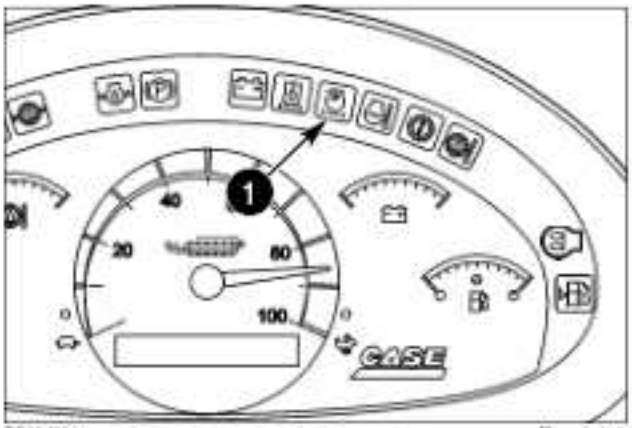

BO22J064 Figure 29


1. AIR FILTER INDICATOR LAMP

You must service the air filter if the air filter warning lamp illuminates when the engine is running. After the shift or at the end of the day, service the air cleaner. Make sure you check the condition of the warning lamp bulb each day before you operate the machine.

PRIMARY (OUTER) ELEMENT

Replace the primary (outer) element after three washings or after the element has been in the machine for one year. See cleaning the primary (outer) element. To service:


1. Open the access panel.
2. Pull the cover clamp (1) of the air cleaner cover out and rotate counter clockwise. Remove the end cover.

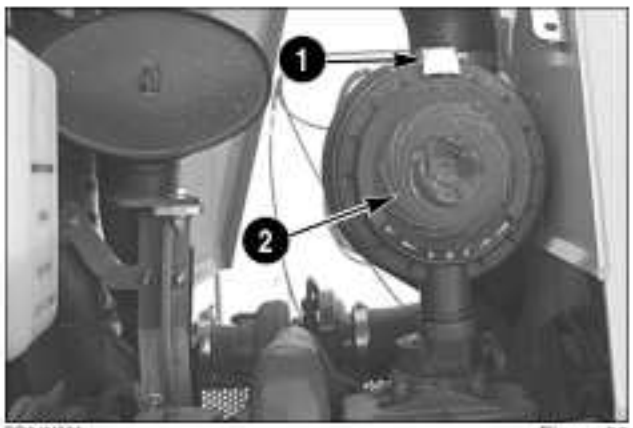

BO24N021 Figure 30

1. CLAMP
2. END COVER

3. Carefully remove the primary (outer) element.

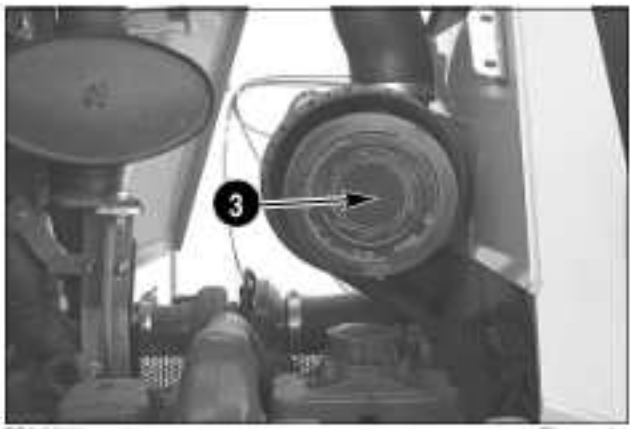


BO24N022 Figure 31

3. PRIMARY (OUTER) ELEMENT

4. Use a clean damp cloth and clean inside of the filter body.
5. Install a clean or new primary (outer) element. Make sure the element has full gasket contact.
6. Install the end cover.

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >

TRANSPORT LENGTH AND WIDTH WITH BLADE FULLY ANGLED 25 DEGREES

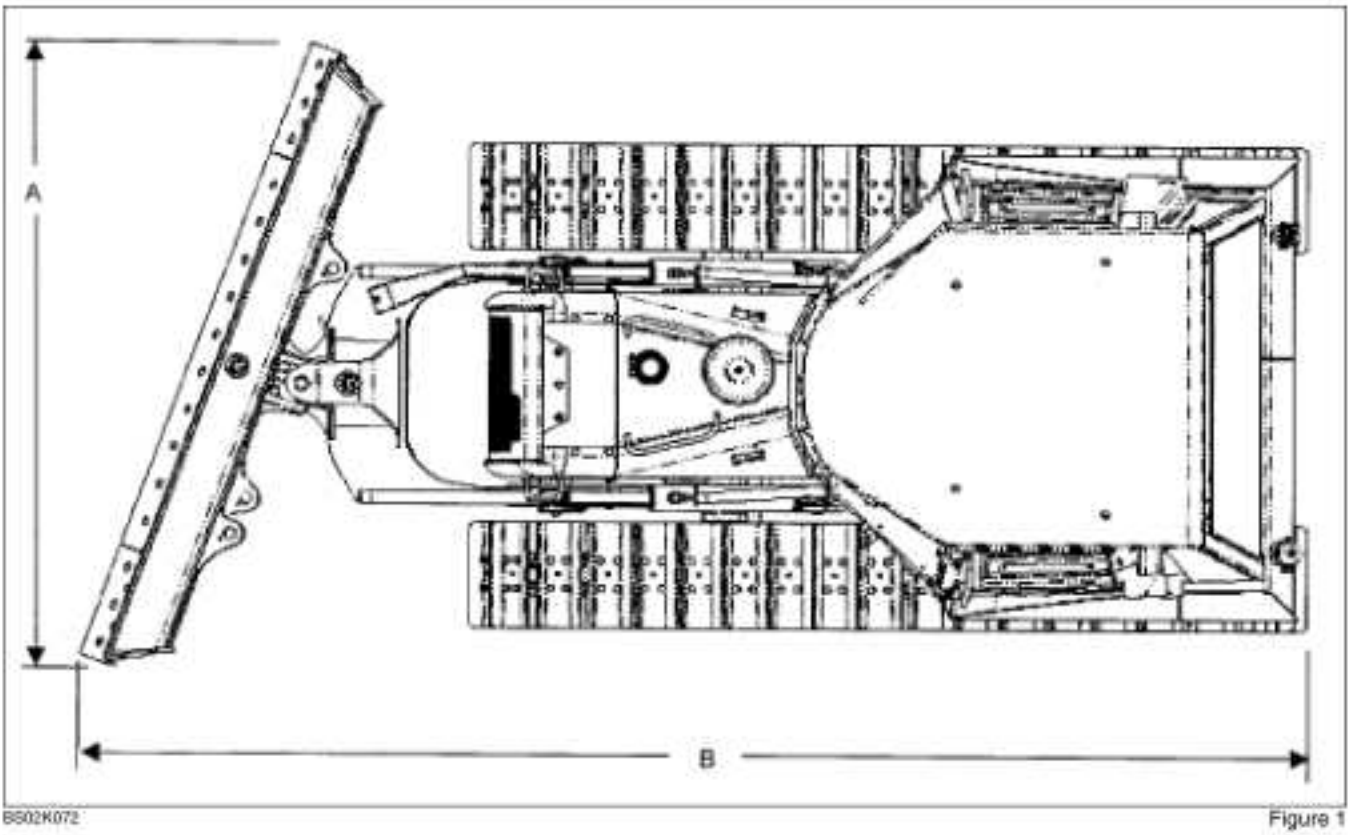

BS02K072

Figure 1

Blade width	A Transport width		B 650K Series 2 w/o Drawbar		B 750K Series 2 w/o Drawbar		B 850K Series 2 w/o Drawbar	
2 489 mm (98 in)	2 308 mm	90.9 in	4 618 mm	181.8 in				
2 642 mm (104 in)	2 446 mm	96.3 in	4 649 mm	183.0 in	4 696 mm	184.9 in	4 782 mm	188.3 in
2 794 mm (110 in)	2 585 mm	101.8 in	4 682 mm	184.3 in	4 728 mm	186.1 in	4 814 mm	189.5 in
3 048 mm (120 in)	2 815 mm	110.8 in	4 736 mm	186.5 in	4 782 mm	188.3 in	4 868 mm	191.7 in
3 150 mm (124 in)	2 907 mm	114.4 in	4 757 mm	187.3 in	4 803 mm	189.1 in	4 889 mm	192.5 in
3 302 mm (130 in)	3 043 mm	119.8 in			4 835 mm	190.4 in	4 921 mm	193.7 in

NOTE: *Add 150 mm (5.9 in) for drawbar.*

MidWestTech | Case 650K, 750K, 850K Series 3 Crawler Operator's Manual | Publication 6... Order the manual at mid-west-tech.com >