753
753H

FOOT PEDAL & HAND CONTROLS

Bobcat

Operation & Maintenance Manual

S/N 512716001 & Above
S/N 511396001 – 513911148
S/N 511476001 – 511476480
S/N 508630149 & Above



EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)

IR Bobcat
Printed in U.S.A.

6900374 (4-99) Revised (6-00)

© Bobcat Company 2000

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD iii
SAFETY ix
OPERATING INSTRUCTIONS 1
PREVENTIVE MAINTENANCE 39
SYSTEMS ANALYSIS 81
MACHINE SIGN TRANSLATIONS 87
SPECIFICATIONS 97

CALIFORNIA
PROPOSITION 65 WARNING
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat loader in the spaces below. Always use these numbers when referring to your Bobcat loader.

Loader Serial Number ..... _____
Engine Serial Number ..... _____
_____
_____
_____

NOTES: _____
_____
_____
_____
_____
_____

YOUR LOADER DEALER: _____
ADDRESS: _____
PHONE: _____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040–0128

Bobcat Company Europe
J. Huysmanslaan 59
B–1651 LOT
BELGIUM

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

HYDRAULIC CONTROLS

Foot Pedals

⚠ WARNING

Keep both feet on pedals while operating machine. Failure to do so can cause serious injury.

W-2002-1285

Put your feet on the pedals and KEEP THEM THERE any time you operate the loader.

Two foot pedals (Item 1) **[A]** control the hydraulic cylinders for the lift and tilt functions.

Lift Arm Operation

The *left pedal* controls the lift arms. Push on the bottom (heel) (Item 2) **[A]** of the pedal to raise the lift arms.

Push on the top (toe) (Item 3) **[A]** of the pedal to lower the lift arms.

Lift Arm Float Position

Push the top (toe) (Item 3) **[A]** of the pedal all the way forward until it locks into locked (*float*) position.

Use the *float* position of the lift arms to level loose material while driving backward.

Tilt Operation

The *right pedal* controls the action of the bucket. Push the top (toe) (Item 4) **[A]** of the pedal to tilt the bucket forward.


Push the bottom of the pedal (heel) (Item 5) **[A]** to tilt the bucket backward.

Bucket Position Valve Operation (If Equipped)

The function of the bucket position valve is to keep the bucket in the same approximate position it is placed in before beginning the upward lift cycle.

Bucket positioning functions during the upward lift cycle only.

The bucket positioning function can be turned OFF with the bucket level switch. (See Page 3, 4, 5 & 6.)

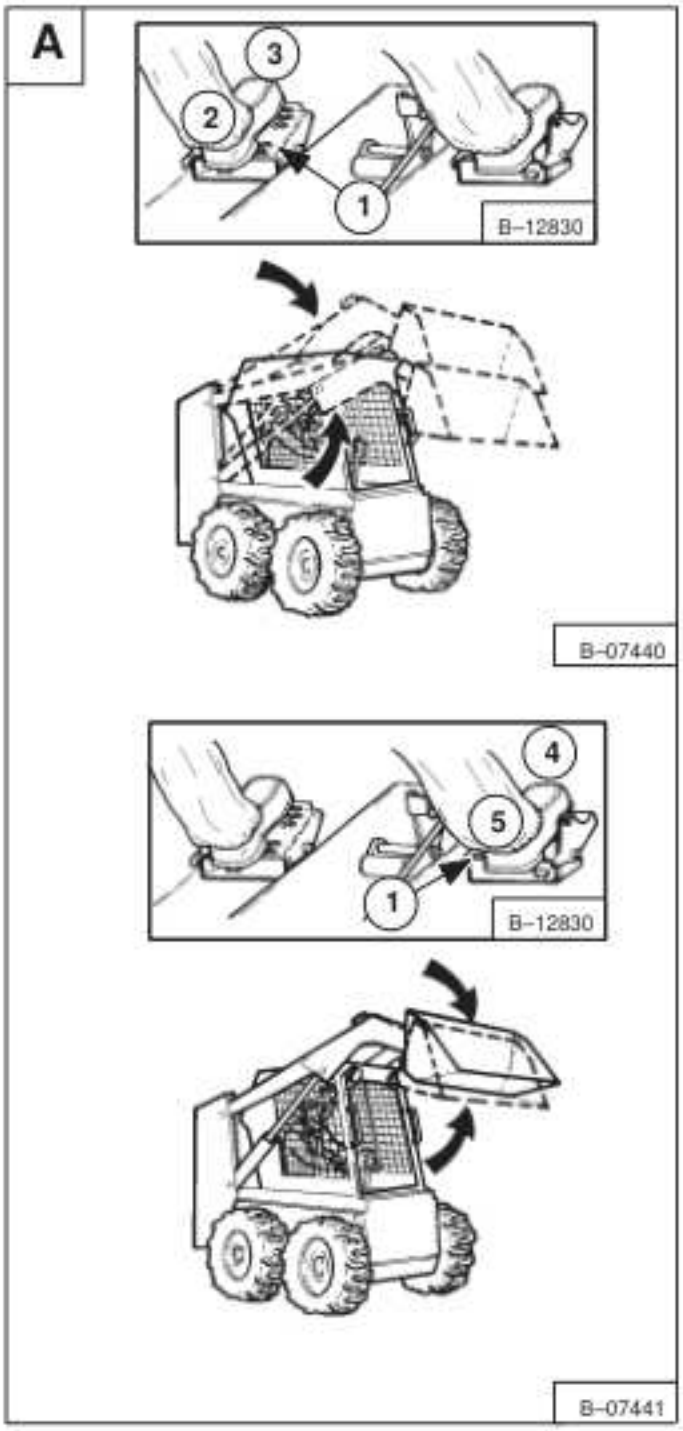

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

ATTACHMENTS AND BUCKETS

⚠ WARNING

Never use attachments or buckets which are not approved by Bobcat Company. Buckets and attachments for safe loads of specified densities are approved for each model. Unapproved attachments can cause injury or death.

W-2052-1285

The dealer can identify, for each model loader, the attachments and buckets approved by Bobcat Company. The buckets and attachments are approved for rated operating capacity and for secure fastening to the Bob–Tach.

The rated operating capacity for this loader is shown on a decal in the operator cab. (See *SPECIFICATIONS* Page 97.) The rated operating capacity is determined by using a standard dirt bucket, and material of normal density, such as dirt or dry gravel. If longer buckets are used, the load center moves forward and reduces the rated operating capacity. If very dense material is loaded, the volume must be reduced.


Exceeding the rated operating capacity **[A]** can cause the following problems:

1. Steering the loader may be difficult.
2. Tires will wear faster.
3. There will be a loss of stability.
4. The life of the Bobcat loader will be reduced.

Use the correct size bucket for the type and density of material being handled. For safe handling of materials and avoiding machine damage, the attachment (or bucket) should handle a full load without going over the rated operating capacity for the loader. Partial loads make steering more difficult.


Maximum load to be carried when using a pallet fork are shown in figure **[B]**. See your Bobcat loader dealer for more information about pallet forks and other available attachments.

A WRONG

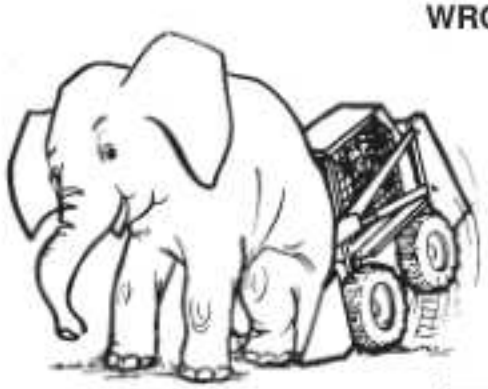

B-06587

B WEIGHT OF LOADS LBS. (KG)
(Without counterweights)

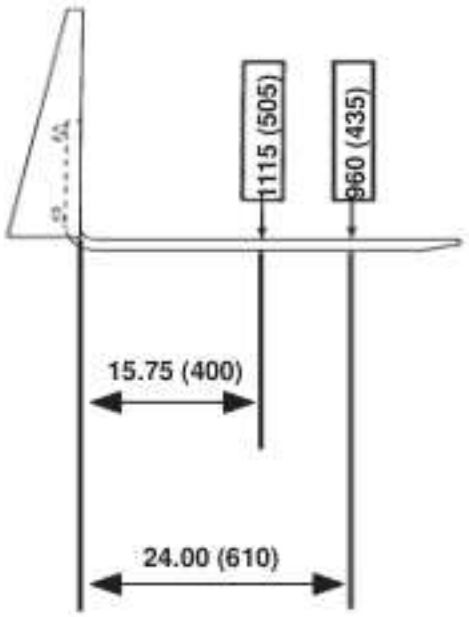

CENTER OF LOAD LOCATION Inches (mm)

6712931
6712932

⚠ WARNING

AVOID INJURY OR DEATH

Do not exceed rated operating capacity. Excessive load can cause tipping or loss of control.

W-2053-0887

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manual when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W–2003–0199

SERVICE SCHEDULE		HOURS				
ITEM	SERVICE REQUIRED	8–10	50	100	250	■ 1000
Engine Oil	Check the oil level and add oil as needed.					
Engine Air Filter	Check condition indicator or display panel. Service only when required.					
Engine Cooling System	Clean debris from oil cooler, radiator and grill. Check coolant level in recovery tank (engine cold). Add coolant as needed.					
Lift Arms, Cyl., Bob–Tach Pivot Pins and Wedges	Lubricate with multi–purpose lithium based grease.					
Engine Air System	Check for leaks and damaged components.					
Tires	Check for damaged tires and correct air pressure.					
Seat Belt, Seat Bar, Foot Pedal or Hand Control Interlocks	Check the condition of seat belt. Check the seat bar, and foot pedal interlocks or hand control interlocks. Clean dirt and debris from moving parts.					
Safety Signs and Safety Tread	Check for damaged signs (decals) and safety tread. Replace any signs or safety treads that are damaged or worn.					
Operator Cab	Check the fastening bolts, washers & nuts. Check the condition of cab.					
Fuel Filter	Remove the trapped water.					
Bobcat Interlock Control System (BICS™)	Check BICS™ functions. Clean dirt, debris or objects from under and behind seat and around brake pedal as required.					
Hydraulic Fluid, Hoses and Tubelines	Check fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.					
Final Drive Trans.(Chaincase)	Check oil level.					
Battery	Check cables, connections and electrolyte level. Add distilled water as needed					
Foot Pedals, Hand Controls, and Steering Levers	Check for correct operation. Repair or adjust as needed.					
Wheel Nuts	□ Check for loose wheel nuts and tighten to 105–115 ft.–lbs. (142–156 Nm) torque.					
Parking Brake	Check operation.					
Alternator Belt	Check belt tension and adjust as needed.					
Spark Arrestor Muffler	Clean the spark chamber.					
Engine Oil and Filter	† Replace oil and filter. Use CD or better grade oil and Bobcat filter.					
Fuel Filter	Replace the filter element.					
Engine/Hydros, Drive Belt	* Check for wear or damage. Adjust as needed.					
Steering Shaft	Grease two fittings.					
Hydraulic/Hydrostatic Filter	• Replace the filter element.					
Hydraulic Reservoir Breather Cap	Replace the reservoir breather cap.					
Fan Drive Gearbox	Check gear lube level. Add as needed.					
Final Drive Trans. (Chaincase)	Replace the oil.					
Hydraulic Reservoir	Replace the fluid.					
Case Drain Filters	Replace the filters.					
Bobcat Interlock Control System (BICS™)	Check lift arm bypass control					

□ **Check wheel nut torque every 8 hours for the first 24 hours.**
• **Replace filter element after the first 50 hours and when the transmission warning light comes ON.**
■ **Or every 12 months.**
* **Inspect the new belt after first 50 hours.**
† **First oil and filter change must occur at 50 hours; 250 hours thereafter.**

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

BEFORE OPERATING THE BOBCAT LOADER

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

The Bobcat loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8–10 hour column or as shown in this Manual.

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

SAFE OPERATION NEEDS A QUALIFIED OPERATOR *

A QUALIFIED OPERATOR MUST DO THE FOLLOWING:

- **UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS**
  - The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
  - Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

- **HAVE TRAINING WITH ACTUAL OPERATION**
  - Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
  - The new operator must start in an area without bystanders and use all the controls until he can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
  - Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
  - Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- **KNOW THE WORK CONDITIONS**
  - Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
  - The operator must know any prohibited uses or work areas, for example, he needs to know about excessive slopes.
  - Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *SAFETY INSTRUCTIONS* Section of this manual.
  - Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or special applications kit are required for some work. See your dealer about Bobcat Safety equipment.

* For an operator be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

SI02-0400

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >

MONITOR SERVICE CODES

One of the following Alphabetic Codes may appear on your monitor.





















One of the following Numeric Codes will appear following one of the above Alphabetic Codes. Example:

















SC01-0198

MidWestTech | Bobcat 753, 753H (Foot Pedal / Hand Controls) Skid Steer Loader Operation... Order the manual at mid-west-tech.com >