763


763

HIGH FLOW

Bobcat®

Operation & Maintenance Manual

S/N 512250001 & Above
S/N 512450001 & Above
S/N 512620001 – 512629999

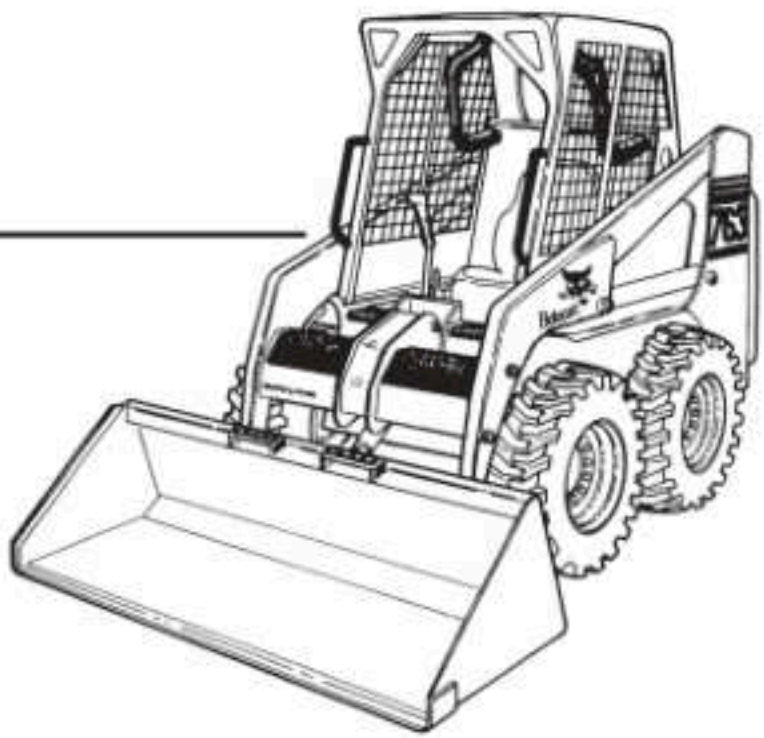

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6900971 (4–03) Revised (7–03)

An Ingersoll-Rand business
Printed in U.S.A.

© Bobcat Company 2003

MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD iii
SAFETY ix
OPERATING INSTRUCTIONS 1
PREVENTIVE MAINTENANCE 35
SYSTEM SETUP & ANALYSIS 71
MACHINE SIGN TRANSLATIONS 83
SPECIFICATIONS 93

CALIFORNIA
PROPOSITION 65 WARNING
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat loader in the spaces below. Always use these numbers when referring to your Bobcat loader.

Loader Serial Number ..... _____
Engine Serial Number ..... _____
_____
_____
_____

NOTES: _____
_____
_____
_____
_____
_____

YOUR LOADER DEALER: _____
ADDRESS: _____
PHONE: _____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040–0128

Bobcat Company Europe
J. Huysmanslaan 59
B–1651 LOT
BELGIUM

MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >

HYDRAULIC CONTROLS

Put your feet on the pedals (or footrests) and KEEP THEM THERE any time you operate the loader.

Two foot pedals (or hand controls) (Item 1) **[A]** and **[B]** control the hydraulic cylinders for the lift and tilt functions.

Foot Pedals

Lift Arm Operation [A]
The left pedal controls the lift arms.

Push on the bottom (heel) (Item 2) **[A]** of the pedal to raise the lift arms.

Push on the top (toe) (Item 3) **[A]** of the pedal to lower the lift arms.

Lift Arm Float Position [A]
Push the top (toe) (Item 3) **[A]** of the pedal all the way forward until it locks into the *float* position.

Use the *float* position of the lift arms to level loose material while driving backward.

Push the bottom of the left pedal to unlock from the *float* position.

Tilt Operation [B]
The right pedal controls the bucket.

Push the bottom (heel) (Item 2) **[B]** of the pedal to tilt the bucket backward.

Push the top (toe) (Item 3) **[B]** of the pedal to tilt the bucket forward.

Hand Controls (AHC or ACS) (If Equipped)

Lift Arm Operation [A]
The left hand lever controls the lift arms.

Move the left hand lever away from the operator (Item 4) **[A]** to raise the lift arms.

Move the left hand lever toward the operator (Item 5) **[A]** to lower the lift arms.

Lift Arm Float Position [A]
Move the left hand lever all the way toward the operator (Item 5) **[A]** until it locks into the *float* position.

Later ACS and AHC Models With Float Button
- **To Engage:** Press and hold the Float Button (Item 6) **[A]** while the lever is in neutral. Move the lever to the lift arm down position (Item 5) **[A]**, then release the button.
- **To Disengage:** Press Float Button again or move the lever to the lift arm up position (Item 4) **[A]**.

Use the *float* position of the lift arms to level loose material while driving backward.

Move the left hand lever upward to unlock from the *float* position.

Tilt Operation [B]
The right hand lever controls the bucket.


Move the right hand lever toward the operator (Item 5) **[B]** to tilt the bucket backward.

Move the right hand lever away from the operator (Item 4) **[B]** to tilt the bucket forward.

⚠ WARNING

Keep both feet on pedals or footrests while operating machine. Failure to do so can cause serious injury.

W–2359–1099

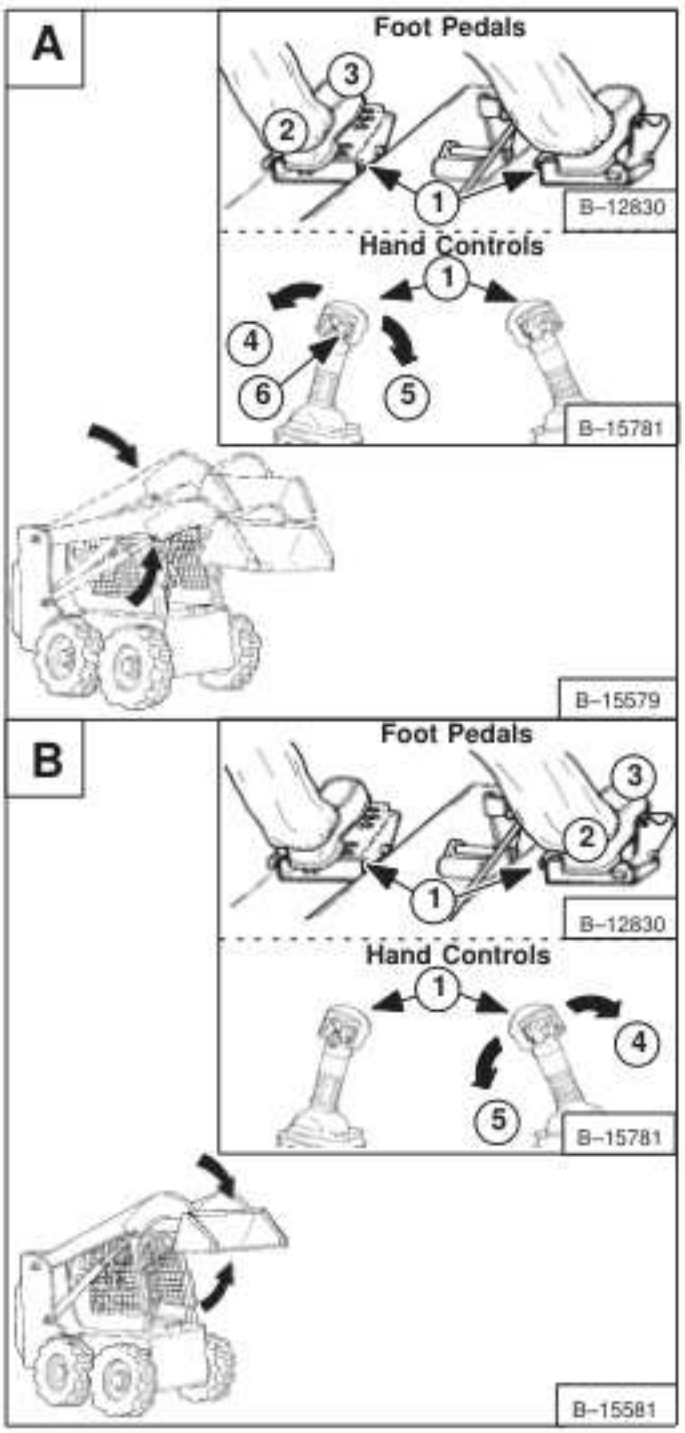

MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >

ATTACHMENTS AND BUCKETS

NOTE: Warranty is void if non–approved attachments are used on the Bobcat loader.

⚠ WARNING

Never use attachments or buckets which are not approved by Bobcat. Buckets and attachments for safe loads of specified densities are approved for each model. Unapproved attachments can cause injury or death.

W–2052–1285

The dealer can identify, for each model loader, the attachments and buckets approved by Bobcat. The buckets and attachments are approved for Rated Operating Capacity and for secure fastening to the Bob–Tach.

The Rated Operating Capacity for this loader is shown on a decal in the operator cab. (See also *SPECIFICATIONS* Page 93.)

The Rated Operating Capacity is determined by using a standard dirt bucket, and material of normal density, such as dirt or dry gravel. If longer buckets are used, the load center moves forward and reduces the Rated Operating Capacity. If very dense material is loaded, the volume must be reduced to prevent overloading.

Exceeding the Rated Operating Capacity **[A]** can cause the following problems:


- Steering the loader may be difficult.
- Tires will wear faster.
- There will be a loss of stability.
- The life of the Bobcat loader will be reduced.

Use the correct size bucket for the type and density of material being handled. For safe handling of materials and avoiding machine damage, the attachment (or bucket) should handle a full load without going over the Rated Operating Capacity for the loader. Partial loads make steering more difficult.

If a pallet fork attachment is used, the load center moves forward and reduces the Rated Operating Capacity.

The maximum load to be carried when using a pallet fork is shown on a decal located on the pallet fork frame [B].

See your Bobcat Dealer for more information about pallet fork inspection, maintenance and replacement. See your Bobcat loader dealer for Rated Operating Capacity when using a pallet fork and for other available attachments.

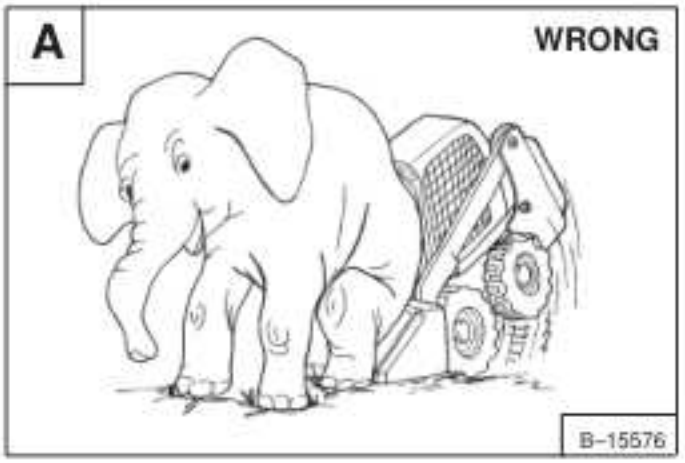


⚠ WARNING

AVOID INJURY OR DEATH

Do not exceed rated operating capacity. Excessive load can cause tipping or loss of control.

W–2053–0887

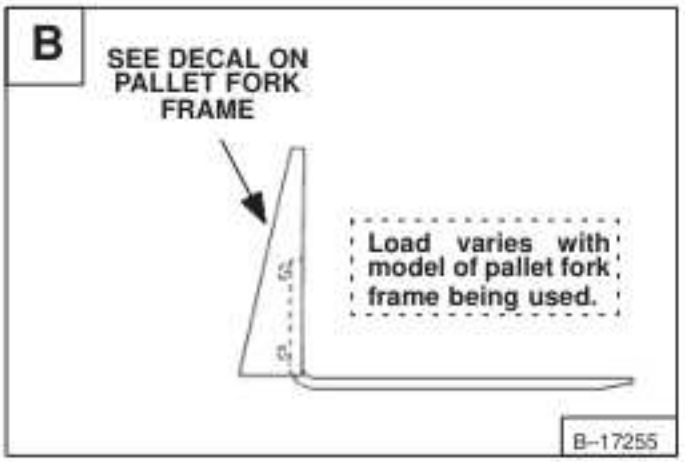

MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >

AIR CLEANER SERVICE (Cont'd)

Replacing Filter Element (Cont'd)

Inner Filter

Only replace the inner filter element under the following conditions:

- Replace the inner filter element every *third* time the outer filter is replaced.
- After the outer element has been replaced, start the engine and run at full RPM. If the HOURMETER / CODE DISPLAY shows **[01–17] (Air Filter Plugged)**, replace the inner filter element.


Remove the wing nut and remove the inner filter element **[A]**.

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Install the new inner element.

Install the outer element.

Install the dust cover and the wing nut **[B]**.

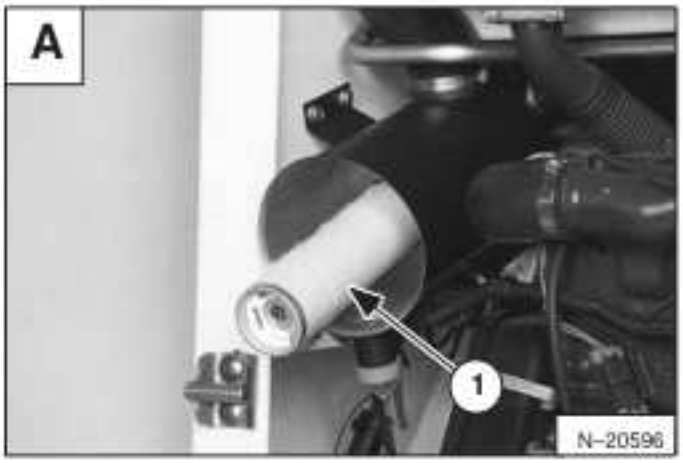



MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >

BEFORE OPERATING THE BOBCAT LOADER

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

The Bobcat loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8–10 hour column or as shown in this Manual.

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

SAFE OPERATION NEEDS A QUALIFIED OPERATOR *

A QUALIFIED OPERATOR MUST DO THE FOLLOWING:

- **UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS**
  - The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
  - Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

- **HAVE TRAINING WITH ACTUAL OPERATION**
  - Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
  - The new operator must start in an area without bystanders and use all the controls until he can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
  - Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
  - Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- **KNOW THE WORK CONDITIONS**
  - Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
  - The operator must know any prohibited uses or work areas, for example, he needs to know about excessive slopes.
  - Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *SAFETY INSTRUCTIONS* Section of this manual.
  - Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or special applications kit are required for some work. See your dealer about Bobcat Safety equipment.

* For an operator to be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

SI02-0502

MidWestTech | Bobcat 763, 763 High Flow Skid Steer Loader Operation & Maintenance Man... Order the manual at mid-west-tech.com >