
Bobcat®

Operation & Maintenance Manual
Stump Grinder

(SG60) S/N 233000101 & Above
(SGX60) S/N A00700101 & Above

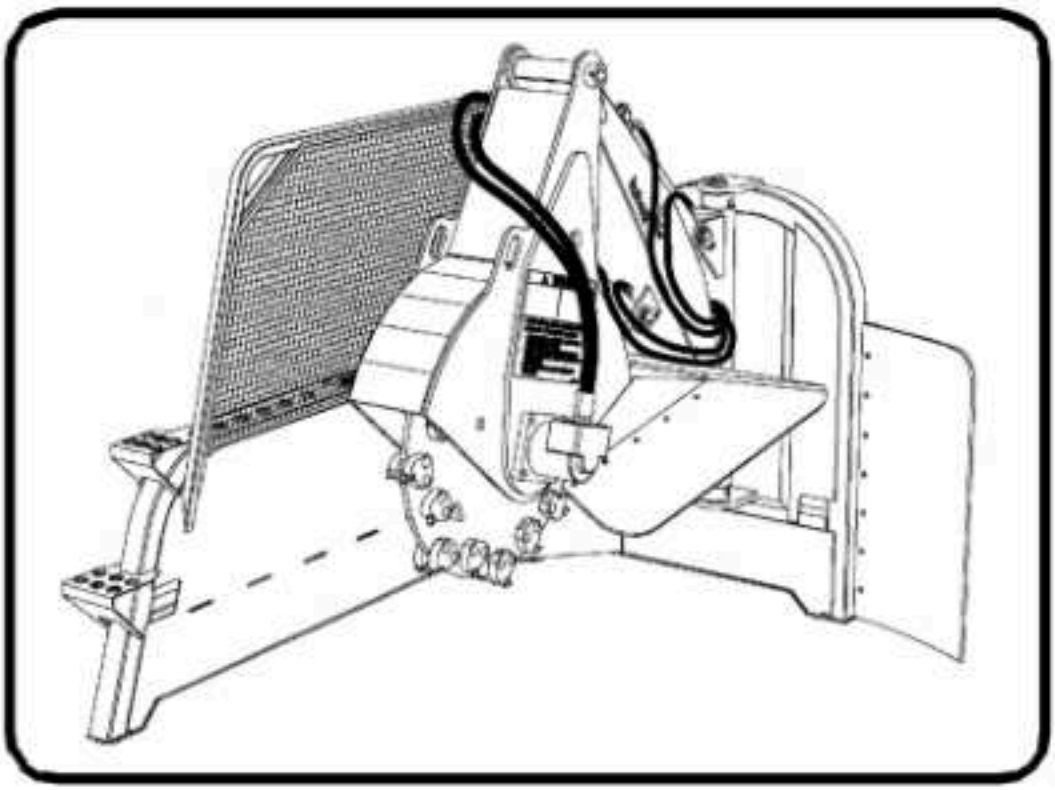

6901089 (6-05) Revised (1-11) (7)

Printed in U.S.A.

© Bobcat Company 2011

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 5

SAFETY & TRAINING RESOURCES 13

OPERATING INSTRUCTIONS 21

PREVENTIVE MAINTENANCE 75

SPECIFICATIONS 85

WARRANTY 91

ALPHABETICAL INDEX 95

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat stump grinder in the spaces below. Always use these numbers when referring to your Bobcat stump grinder.

Stump Grinder Serial Number _____

NOTES:

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat stump grinder. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT STUMP GRINDER. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat stump grinder.

BOBCAT COMPANY IS ISO 9001 CERTIFIED 7

SERIAL NUMBER LOCATION 9
Attachment Serial Number 9

DELIVERY REPORT 9

ATTACHMENT IDENTIFICATION 10

FEATURES AND ACCESSORIES 11
Standard Items 11

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

Control Functions (Cont'd)

Raising And Lowering The Boom

Figure 41


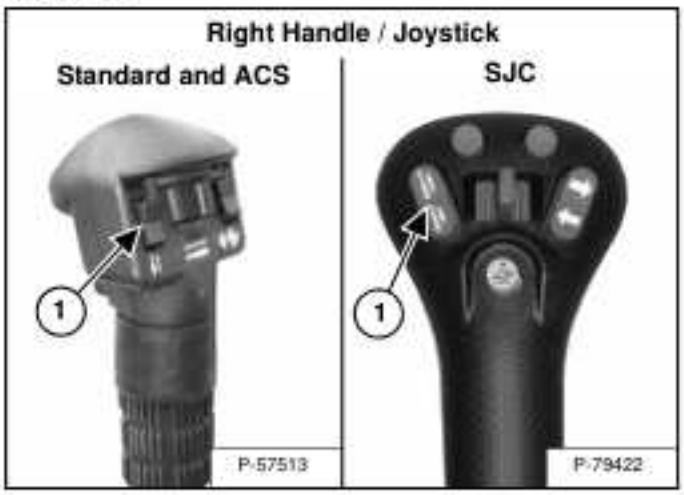


Figure 42

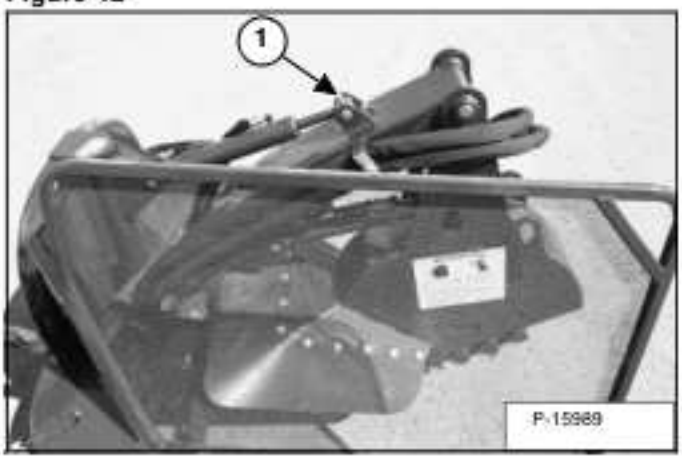

Press the top of the switch (Item 1) **[Figure 41]** on the right control lever to raise the boom (Item 1) **[Figure 42]**.

Press the bottom of the switch (Item 1) **[Figure 41]** on the right control lever to lower the boom (Item 1) **[Figure 42]**.

Swinging The Boom

Figure 43


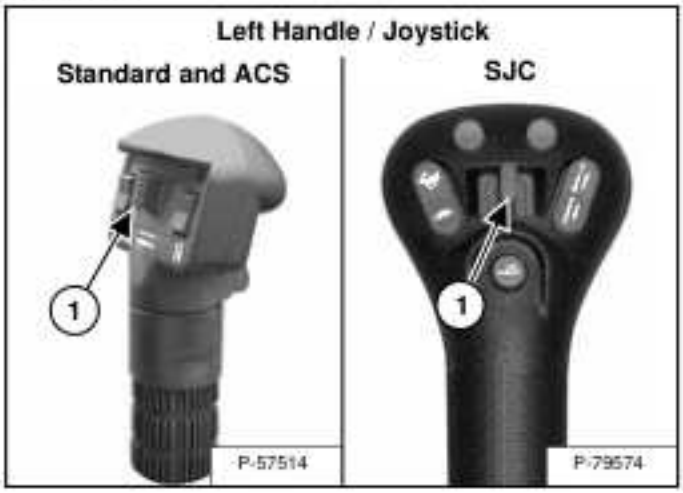


Figure 44

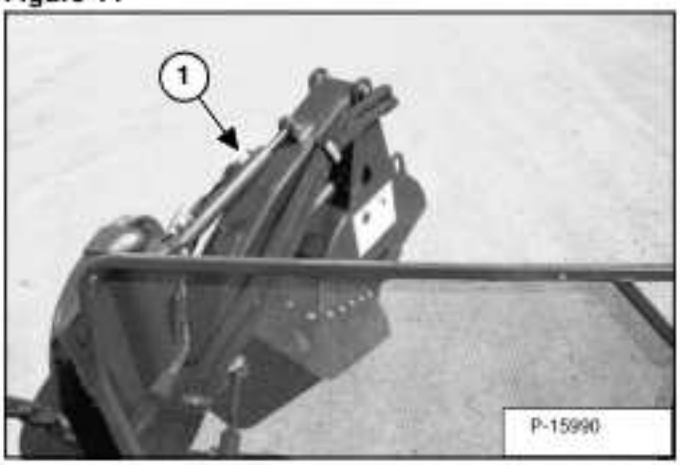

Press the switch (Item 1) **[Figure 43]** on the left control lever to the right to swing the boom (Item 1) **[Figure 44]** towards the loader.

Press the switch (Item 1) **[Figure 43]** on the left control lever to the left to swing the boom (Item 1) **[Figure 44]** away from the loader.

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

LUBRICATING THE ATTACHMENT

Lubrication Locations

Always use a good quality lithium base multi purpose grease when lubricating the attachment. Apply lubricant until extra grease shows.

IMPORTANT

Fluid such as engine oil, hydraulic fluid, coolants, grease, etc. must be disposed of in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local, state and federal regulations for the correct disposal.

I-2067-0499

⚠ WARNING

AVOID INJURY OR DEATH


Wear safety glasses to prevent eye injury when any of the following conditions exist:

- **When fluids are under pressure.**
- **Flying debris or loose material is present.**
- **Engine is running.**
- **Tools are being used.**

W-2019-0907


Lubricate the following grease fittings every **8 - 10 hours**.

Figure 122

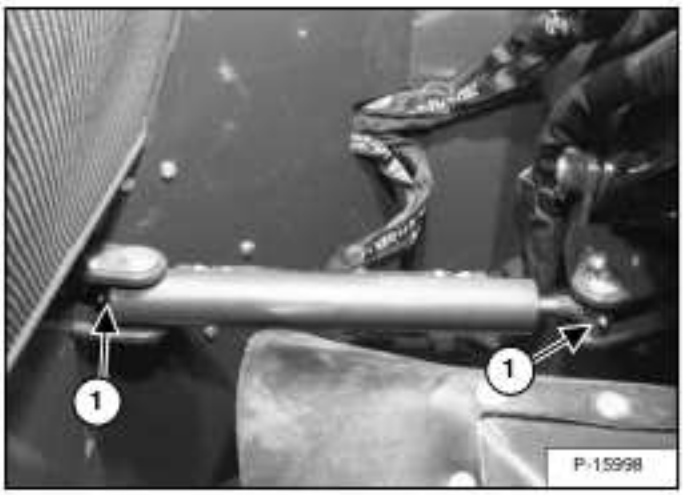


Boom swing cylinder base and rod end (Item 1) **[Figure 122]**.

Figure 123

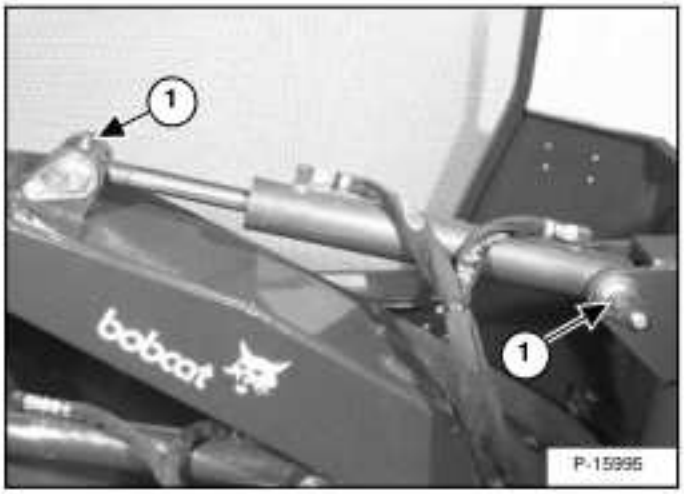

Boom cylinder base and rod end (Item 1) **[Figure 123]**.

Figure 124

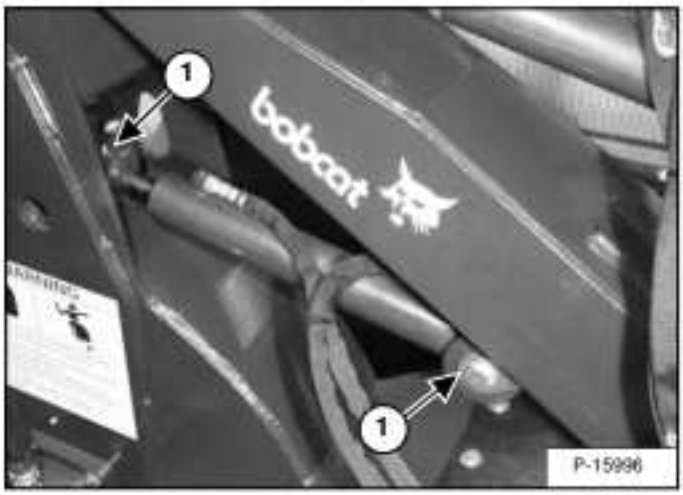


Arm cylinder base and rod end (Item 1) **[Figure 124]**.

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

STUMP GRINDER SPECIFICATIONS

Dimensions

- All dimensions are shown in millimeters. Respective imperial dimensions are given in inches enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

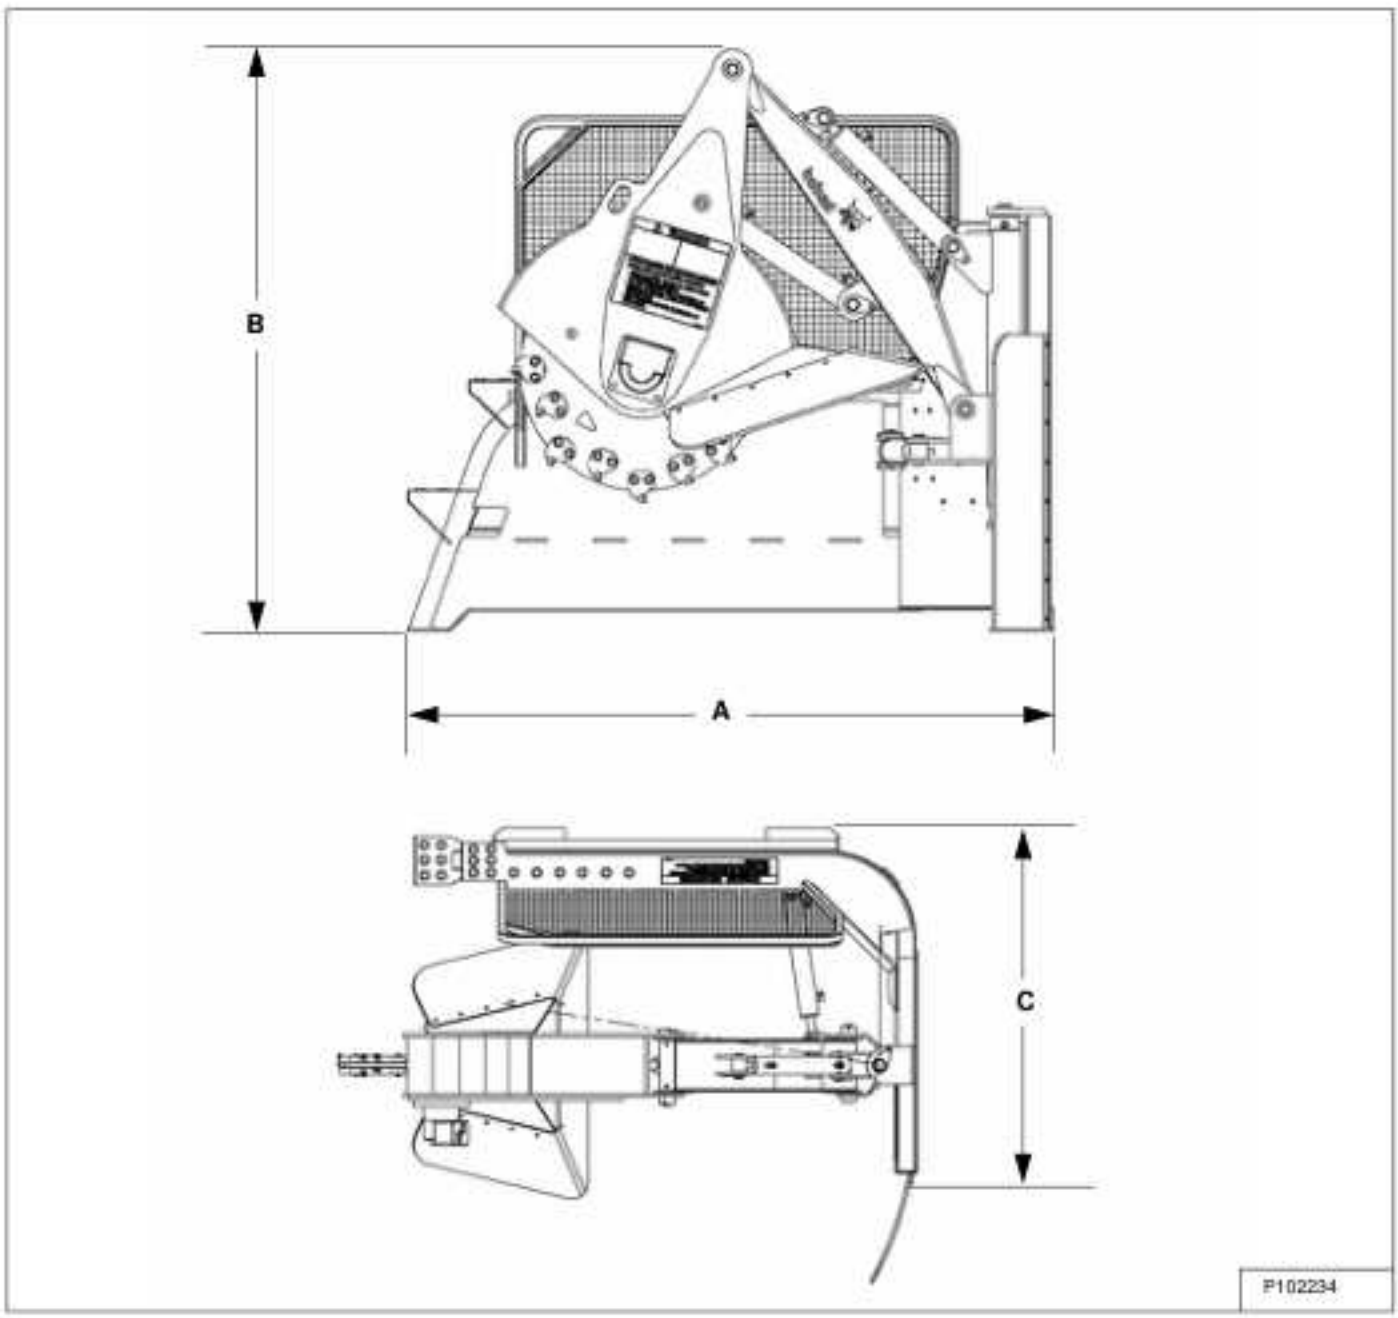

DESCRIPTION	SG60	SGX60
Overall Width (A)	1676,4 mm (66 in)	1676,4 mm (66 in)
Overall Height (B)	1508 mm (59.38 in)	1508 mm (59.38 in)
Overall Length (C)	1181,3 mm (46.53 in)	1181,3 mm (46.53 in)
Wheel Diameter (w / teeth)	686 mm (27 in)	686 mm (27 in)

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8 - 10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI ATT-0509

MidWestTech | Bobcat SG60, SGX60 Stump Grinder Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >