
Bobcat®

Operation & Maintenance Manual
Landplane

(48 Landplane) S/N 717300101 & Above
(48 Landpln Basic) S/N 615100101 & Above
(72 Landpln Basic) S/N 615200101 & Above
(72 Landplane) S/N 615000101 & Above
(78 Landpln Basic) S/N 615300101 & Above
(78 Landplane) S/N 611500101 & Above

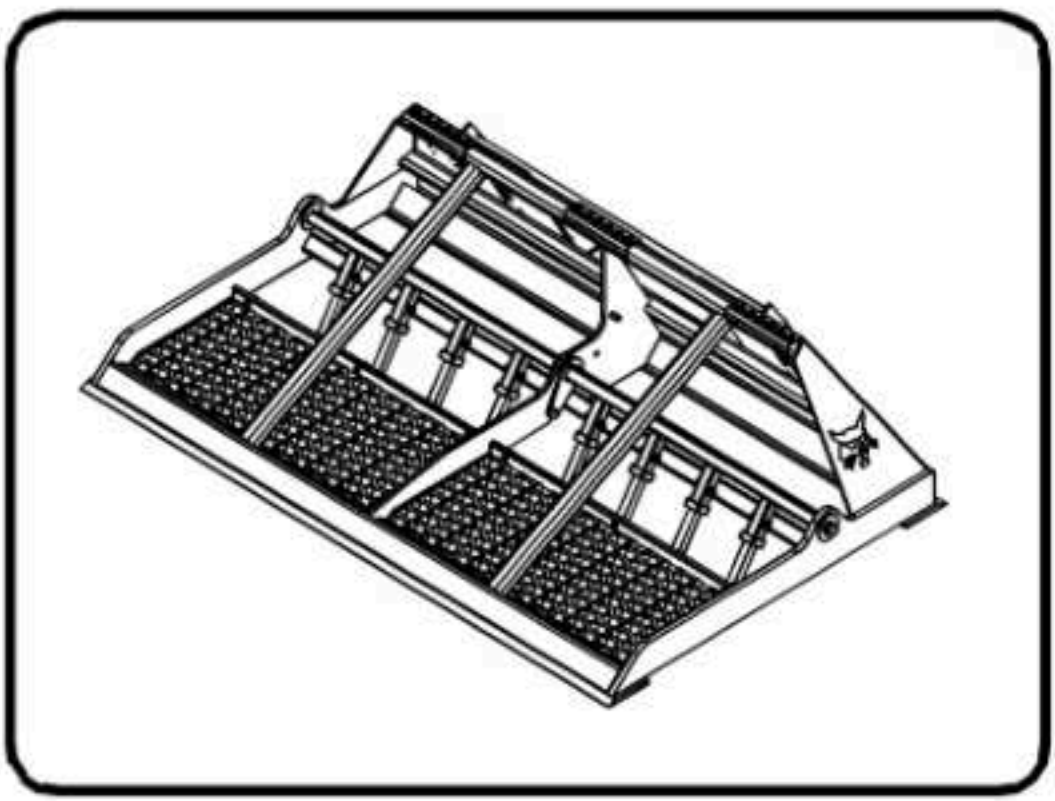

6901095 (3-11) Revised (5-11) (10)

Printed in U.S.A.

© Bobcat Company 2011

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 3

SAFETY & TRAINING RESOURCES 11

OPERATING INSTRUCTIONS 19

PREVENTIVE MAINTENANCE 83

SPECIFICATIONS 89

WARRANTY 95

ALPHABETICAL INDEX 99

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat landplane in the spaces below. Always use these numbers when referring to your Bobcat landplane.

Landplane Serial Number _____

_____

NOTES:

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 WATERLOO
BELGIUM

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat landplane. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT LANDPLANE. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat landplane.

BOBCAT COMPANY IS ISO 9001 CERTIFIED 5

SERIAL NUMBER LOCATION 7
Attachment Serial Number 7

DELIVERY REPORT 7

ATTACHMENT IDENTIFICATION 8

FEATURES AND ACCESSORIES 9
Standard Items 9

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolant mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).

SI ATT-0511

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

Entering And Leaving The Operator's Position

⚠ WARNING

AVOID INJURY OR DEATH

When operating the machine:

- **Operate only from the operator's position at the rear of the loader.**
- **Always keep your hands on the controls.**
- **Stay away from the tracks.**

W-2407-0801

⚠ WARNING

AVOID INJURY OR DEATH

- **Movement of the attachment will occur if the tilt control is NOT in neutral when the engine is started.**
- **Always check that all levers are in neutral before starting the engine.**

W-2482-1003

⚠ WARNING

AVOID INJURY OR DEATH

When using the ride-on platform:

- **Operate only with feet on platform and hands on controls or grab handles.**
- **Always look in the direction of travel.**
- **Make sure swing area is clear of bystanders and objects.**
- **Avoid drop-offs and obstacles.**

W-2480-1003

Entering

Enter the operator's position at the rear of the mini loader.

Engage the parking brake and place all controls in neutral.

See the mini loader's Operation & Maintenance Manual for detailed information on operating the mini loader.

Leaving

Figure 46



Stop the mini loader on level ground **[Figure 46]**.

Lower the lift arms and put the attachment flat on the ground.

Disengage the auxiliary hydraulics.

Engage the parking brake.

Stop the engine.

Remove the key to prevent operation of the mini loader by unauthorized personnel.

Leave the operator's position.

⚠ WARNING

AVOID INJURY OR DEATH

Before you leave the operator's position:

- **Lower the lift arms, put the attachment flat on the ground.**
- **Stop the engine and engage the parking brake.**
- **Move all pedals, handles, joysticks, and other controls until they are LOCKED or in the NEUTRAL position.**

SEE THE MACHINE OPERATION & MAINTENANCE MANUAL FOR MORE INFORMATION.


W-2722-0208

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

(78 LANDPLANE, 78 LANDPLN BASIC) LANDPLANE SPECIFICATIONS

Dimensions

- All dimensions are shown in millimeters. Respective imperial dimensions are given in inches enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

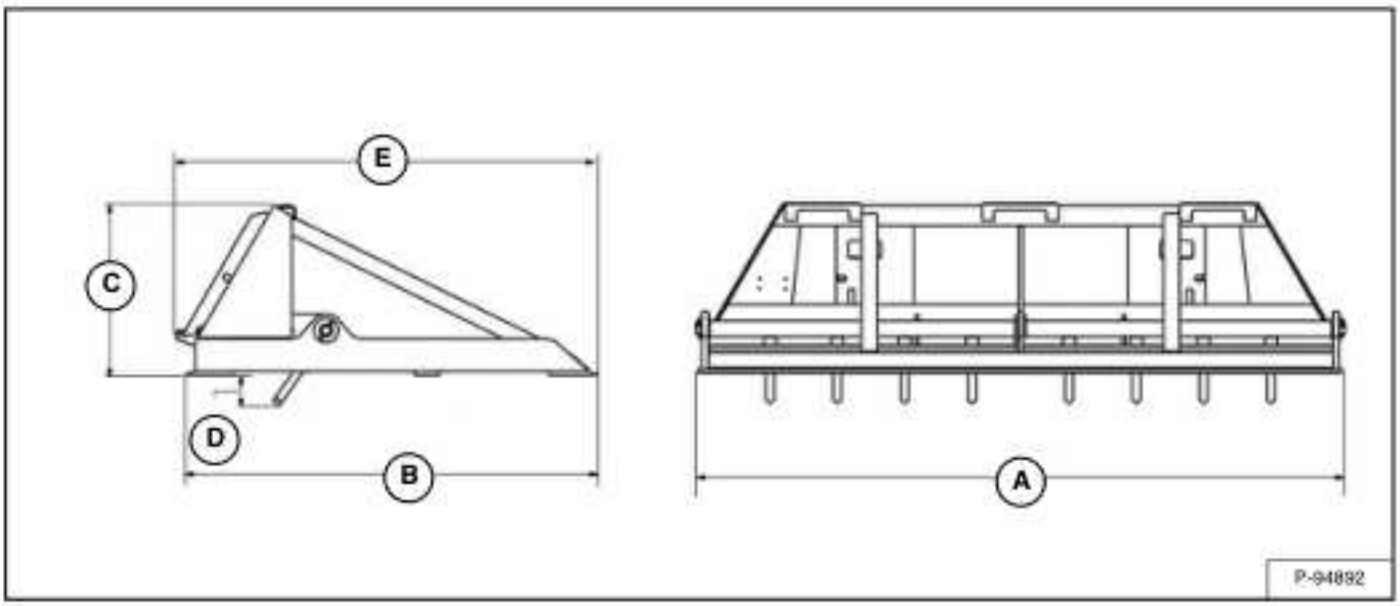

DESCRIPTION	78 LANDPLN BASIC	78 LANDPLANE
Overall Attachment Width (A)	2007 mm (79 in)	2007 mm (79 in)
Length (Bottom Measurement) (B)	1283 mm (50.5 in)	1283 mm (50.5 in)
Height (C)	528 mm (20.77 in)	528 mm (20.77 in)
Chisel Teeth Working Depth (D)	N/A	89 mm (3.5 in)
Length (Top Measurement) (E)	1311 mm (51.62 in)	1311 mm (51.62 in)

Performance

DESCRIPTION	78 LANDPLN BASIC	78 LANDPLANE
Weight	285 kg (628 lb)	318 kg (700 lb)
Number Of Teeth	N/A	8

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8 - 10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat safety equipment for your machine.

SI ATT-0511

MidWestTech | Bobcat 48, 48 Landpln Basic, 72 Landpln Basic, 72, 78 Landpln Basic, 78 La... Order the manual at mid-west-tech.com >