
T250
TURBO

T250
TURBO
HIGH FLOW

Bobcat®

Operation & Maintenance Manual

S/N 523111001 & Above
S/N 523011001 & Above

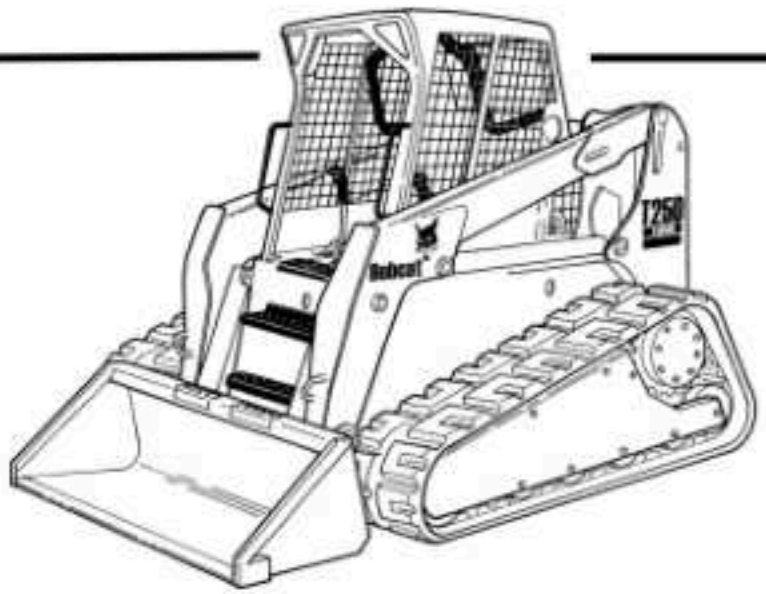

EQUIPPED WITH

BOBCAT INTERLOCK CONTROL SYSTEM (BICS)

6902450 (12-06) Revised (9-07) (3)

Printed in U.S.A.

©Bobcat Company 2007

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY XI

OPERATING INSTRUCTIONS OI-1

PREVENTIVE MAINTENANCE PM-1

SYSTEM SETUP & ANALYSIS SA-1

MACHINE SIGN TRANSLATIONS MST-1

SPECIFICATIONS SPEC-1

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat Loader in the spaces below. Always use these numbers when referring to your Bobcat Loader.

Loader Serial Number _____

Engine Serial Number _____

_____

_____

NOTES:

_____

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Dréve Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Loader. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR Bobcat Loader. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your loader.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED V

REGULAR MAINTENANCE ITEMS V

MOTOR OIL V

DELIVERY REPORT VI

SERIAL NUMBER LOCATIONS VI
- Engine Serial Number VI
- Loader Serial Number VI

MACHINE IDENTIFICATION VII


FEATURES, ACCESSORIES AND ATTACHMENTS VIII
- Attachments IX
- Buckets Available IX
- Options and Accessories VIII
- Standard Items VIII

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

ENGINE SPEED CONTROL

Operation

Figure OI-11

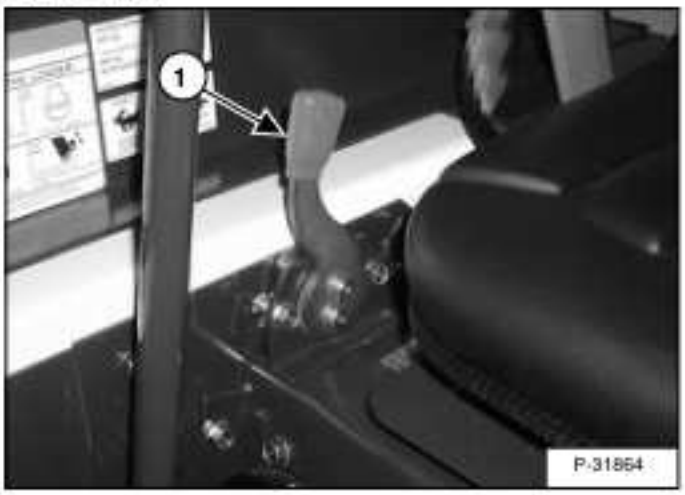


The speed control lever is at the right side of the operator's seat (Item 1) **[Figure OI-11]**.

Move the lever forward to increase engine speed. Move backward to decrease engine speed.

PARKING BRAKE

Operation

Figure OI-12

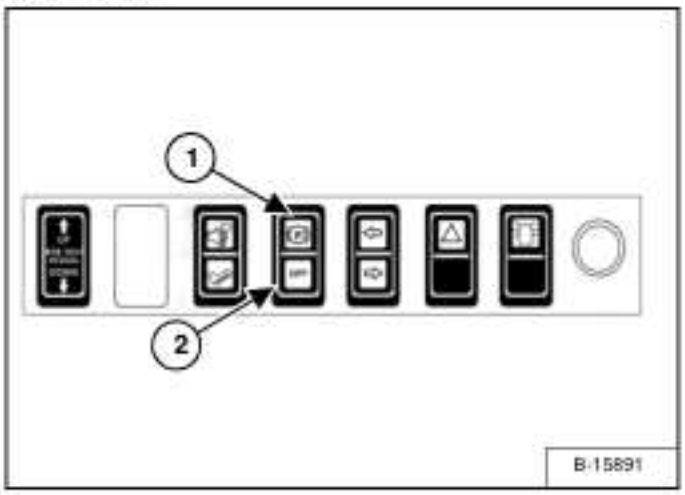

Press the top of the switch (Item 1) **[Figure OI-12]** to engage the parking brake. The traction drive system will be locked.

Press the bottom of the switch (Item 2) **[Figure OI-12]** to disengage the parking brake. The traction drive system will be unlocked.

NOTE: The TRACTION light on the left instrument panel will remain OFF until the engine is started, the PRESS TO OPERATE LOADER button is pressed and the parking brake is disengaged.

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

LUBRICATING THE BOBCAT LOADER

Lubrication Locations


Lubricate the loader as specified for the best performance of the loader. (See SERVICE SCHEDULE on Page PM-5.)

Record the operating hours each time you lubricate the Bobcat Loader.

Always use a good quality lithium based multi-purpose grease when you lubricate the loader. Apply the lubricant until extra grease shows.

Lubricate the following:

Figure PM-63

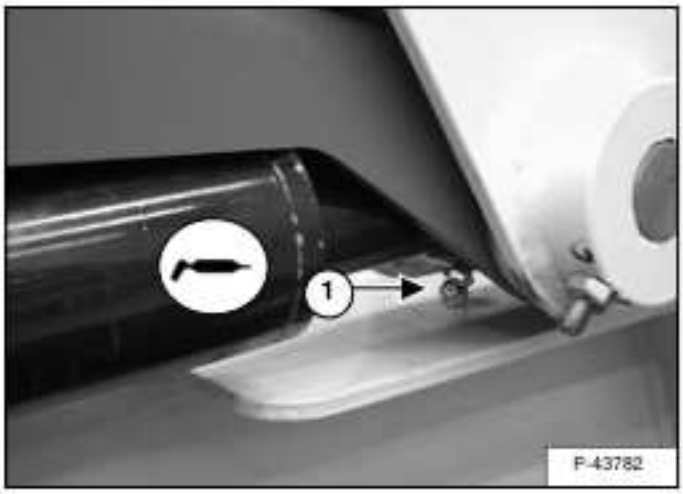

Lubricate the loader as specified in the SERVICE SCHEDULE for the best performance of the loader. (See SERVICE SCHEDULE on Page PM-5.)


Record the operating hours each time you lubricate the Bobcat Loader.

Always use a good quality lithium based multi-purpose grease when you lubricate the loader. Apply the lubricant until extra grease shows.

Lubricate the following locations on the loader:


1. Rod End Lift Cylinder (Both Sides) **[Figure PM-63]**.

Figure PM-64

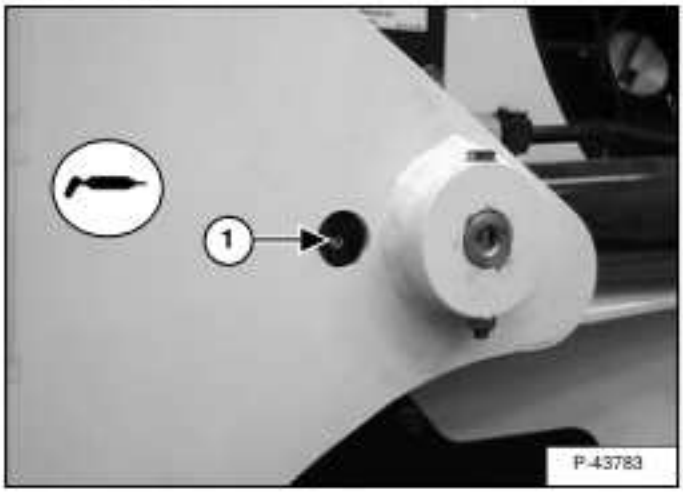


2. Base End Lift Cylinder (Both Sides) **[Figure PM-64]**.

Figure PM-65

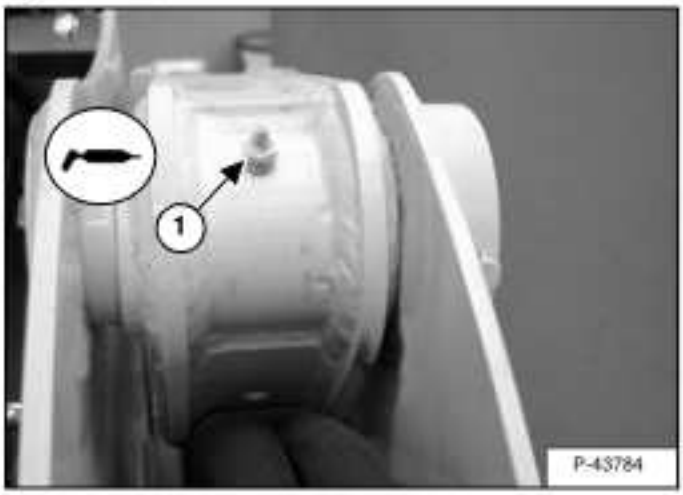

3. Lift Arm Pivot Pin (Both Sides) **[Figure PM-65]**.

Figure PM-66

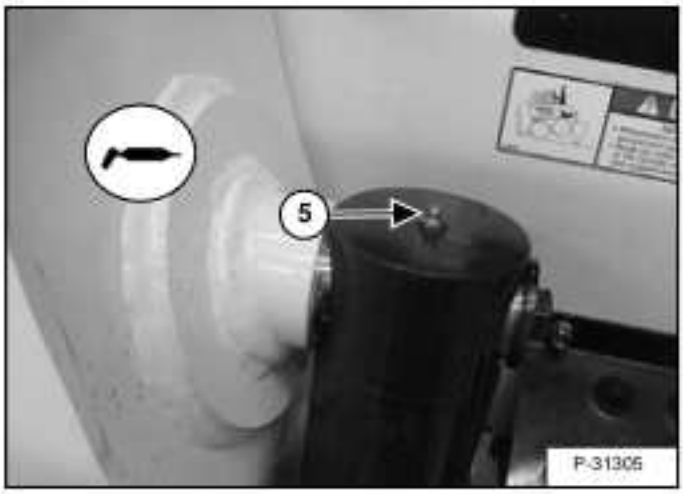

4. Base End Tilt Cylinder (Both Sides) **[Figure PM-66]**.

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

LOADER SPECIFICATIONS (T250) (CONT'D)

Performance

Rated Operating Capacity (SAE)	2500 lb. (1134 kg)
Tipping Load (SAE Rating)	7143 lb. (3240 kg)
Operating Weight	9121 lb. (4137 kg)
SAE Breakout Force - Lift	5500 lbf. (24465 N)
SAE Breakout Force - Tilt	5530 lbf. (24599 N)
Travel Speed	6.6 mph (10,6 km/hr.)

Controls

Vehicle Steering	Direction and speed controlled by two hand levers
Loader Hydraulics - Lift and Tilt - Front Auxiliary (Std.) - Rear Auxiliary (Option)	 Controlled by separate foot pedals or optional Advanced Control System (ACS) Controlled by electrical switch on Right Hand steering lever Controlled by electrical switch on Left Hand steering lever
Auxiliary Pressure Release	Pressure relieved through quick couplers. Push couplers in, hold for 5 seconds.
Engine	Hand lever speed control; key-type starter switch and shutdown
Starting Aid	Intake Air Heater automatically activated as needed by Instrument Panel
Service Brake	Two independent hydrostatic systems controlled by two hand operated steering levers
Secondary Brake	One of the hydrostatic transmissions
Parking Brake (Std.)	Mechanical disc, hand operated rocker switch on instrument panel

Engine

Make/Model	Kubota V3300-D1-T Turbo-Charged
Fuel/Cooling	Diesel/Liquid
Horsepower, Maximum	81 HP (60,4 kW) @ 2400 RPM
Maximum Governed RPM	2525-2575 RPM
Torque, Maximum	217.6 lbf.-ft. (295 N•m) @ 1400 RPM
Number of Cylinders	4
Displacement	202.53 cu. in. (3,318 L)
Bore/Stroke	3.86/4.33 (98/110)
Lubrication	Pressure System with Filter
Crankcase Ventilation	Open
Air Cleaner	Dry replaceable paper cartridge with safety element
Ignition	Diesel-Compression
Engine Coolant	Propylene Glycol / Water Mixture
Starting Aid	Intake Air Heater

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity (R.O.C.) of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of the load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the **Before Operation** Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI SSL-0307

MidWestTech | Bobcat T250 Turbo, T250 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >