
T300
TURBO

T300
TURBO
HIGH FLOW

Bobcat®

Operation & Maintenance Manual

S/N 525411001 thru 525414499
S/N 525511001 thru 525512099

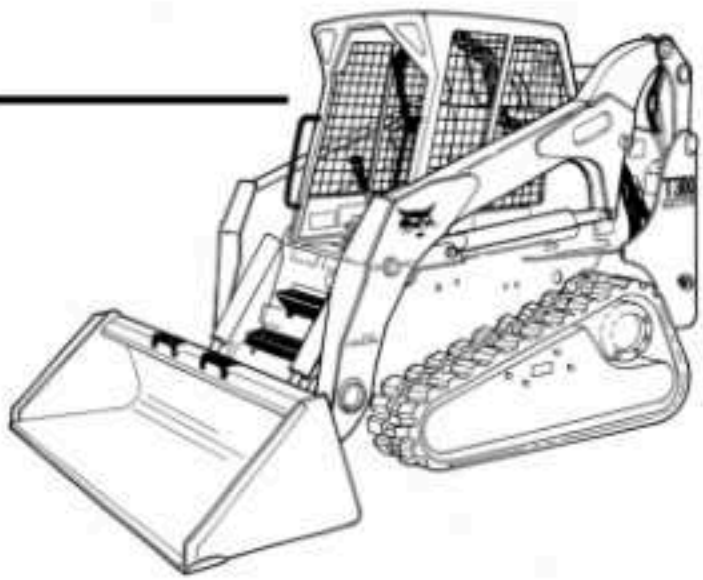

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS)

6902704 (3-05) Revised (12-06) (9)

Ingersoll Rand
Compact Vehicle Technologies

Printed in U.S.A.

©Bobcat Company 2006

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III
SAFETY XI
OPERATING INSTRUCTIONS OI-1
PREVENTIVE MAINTENANCE PM-1
SYSTEM SETUP & ANALYSIS SA-1
MACHINE SIGN TRANSLATIONS MST-1
SPECIFICATIONS SPEC-1

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat Loader in the spaces below. Always use these numbers when referring to your Bobcat Loader.

Loader Serial Number _____
Engine Serial Number _____
_____
_____

NOTES:

_____
_____
_____
_____
_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Dréve Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Loader. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR Bobcat Loader. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED V

DELIVERY REPORT. VII

FEATURES AND ACCESSORIES IX
- Attachments X
- Buckets Available. X
- Options and Accessories IX
- Standard Items. IX

LOADER IDENTIFICATION VIII

MOTOR OIL V


REGULAR MAINTENANCE ITEMS V

SERIAL NUMBER LOCATIONS VII
- Engine Serial Number VII
- Loader Serial Number VII

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

Advanced Control System (ACS) in HAND Control Mode

Figure OI-24

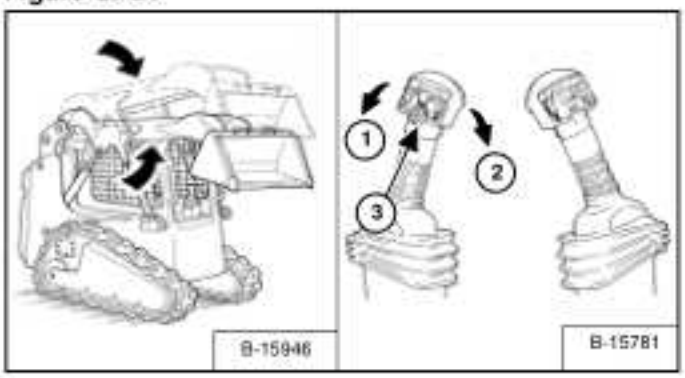

Lift Arm Operation - **(Left Hand Lever)**

Move the lever outward (Item 1) **[Figure OI-24]** to raise the lift arms.

Move the lever inward (Item 2) **[Figure OI-24]** to lower the lift arms.


Lift Arm Float Position - **(Left Hand Lever)**

Press and hold the Float Button (Item 3) **[Figure OI-24]** while the lever is in neutral. Move the lever to lift arm down position (Item 2) **[Figure OI-24]**, then release the button.

Use the float position of the lift arms to level loose material while driving backward.

Press Float Button again or move the lever to lift arm up position (Item 3) **[Figure OI-24]** to disengage.

Figure OI-25

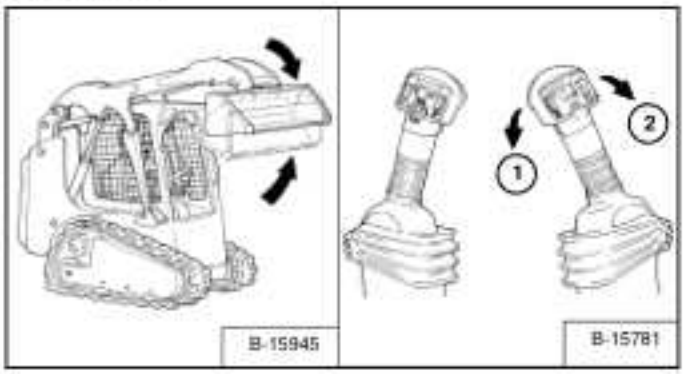

Tilt Operation - **(Right Hand Lever)**

Move the lever inward (Item 1) **[Figure OI-25]** to tilt the bucket backward.

Move the lever outward (Item 2) **[Figure OI-25]** to tilt the bucket forward.

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

LUBRICATING THE BOBCAT LOADER

Lubrication Locations


Lubricate the loader as specified for the best performance of the loader. (See SERVICE SCHEDULE on Page PM-5.)

Record the operating hours each time you lubricate the Bobcat Loader.

Always use a good quality lithium based multi-purpose grease when you lubricate the loader. Apply the lubricant until extra grease shows.


Lubricate the following:

Figure PM-63

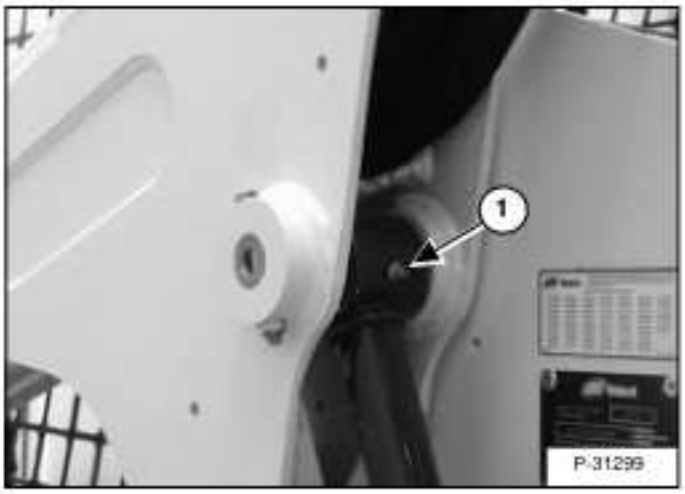

1. Rod End Lift Cylinder (Both Sides) **[Figure PM-63]**.

Figure PM-64

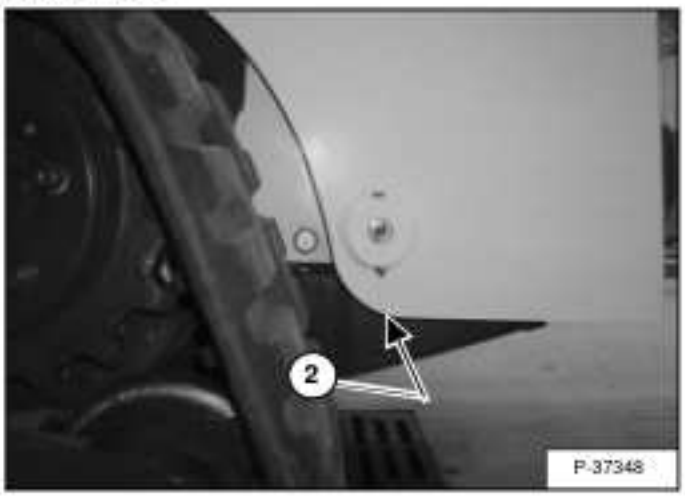


2. Base End Lift Cylinder (Both Sides) **[Figure PM-64]**.

Figure PM-65




3. Lift Arm Pivot Pin (Both Sides) **[Figure PM-65]**.
4. Lift Arm Link Pivot (Both Ends, Both Sides) **[Figure PM-65]**.

Figure PM-66

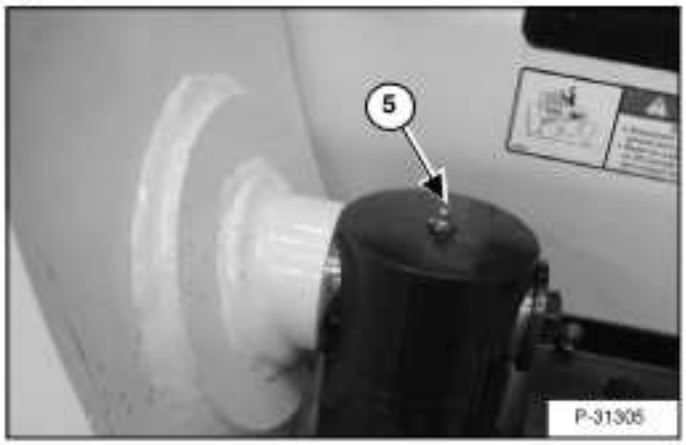

5. Base End Tilt Cylinder (Both Sides) **[Figure PM-66]**.

Figure PM-67

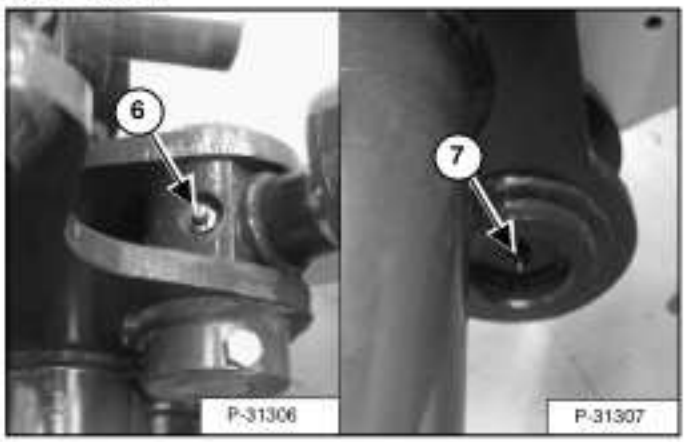

6. Rod End Tilt Cylinder (Both Sides) **[Figure PM-67]**.
7. Bob-Tach Pivot Pin (Both Sides) **[Figure PM-67]**.

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

LOADER SPECIFICATIONS (T300) (CONT'D)

Performance

Rated Operating Capacity (SAE)	3000 lb. (1361 kg)
Tipping Load (SAE Rating)	8571 lb. (3888 kg)
Operating Weight	9354 lb. (4243 kg)
SAE Breakout Force - Lift	6100 lbf. (27134 N)
SAE Breakout Force - Tilt	5840 lbf. (25978 N)
Travel Speed	6.6 mph (10,6 km/hr.)

Controls

Vehicle Steering	Direction and speed controlled by two hand levers or optional Joystick (left hand)
Loader Hydraulics - Lift and Tilt - Front Auxiliary (Std.) - Rear Auxiliary (Option)	 Controlled by separate foot pedals or optional Advanced Control System (ACS) or optional Joystick (right hand) Controlled by electrical switch on Right Hand steering lever Controlled by electrical switch on Left Hand steering lever
Auxiliary Pressure Release	Pressure relieved through quick couplers. Push couplers in, hold for 5 seconds.
Engine	Hand lever throttle; key-type starter switch and shutdown
Starting Aid	Intake Air Heater automatically activated as needed by Instrument Panel
Service Brake	Two independent hydrostatic systems controlled by two hand operated steering levers
Secondary Brake	One of the hydrostatic transmissions
Parking Brake (Std.)	Mechanical disc, hand operated rocker switch on instrument panel
Parking Brake (Two-Speed Option)	Spring applied pressure release multi-disk brake activated by rocker switch in instrument panel

Engine

Make/Model	Kubota V3300-DI-T-Bobcat Turbo-Charged
Fuel/Cooling	Diesel/Liquid
Horsepower, Maximum	80.8 HP (60,3 kW) @ 2400 RPM
Maximum Governed RPM	2600 RPM
Torque, Maximum	217.6 lbf.-ft. (295,1 N•m) @ 1400 RPM
Number of Cylinders	4
Displacement	202.5 cu. in. (3,318 L)
Bore/Stroke	3.86/4.33 (98/110)
Lubrication	Pressure System with Filter
Crankcase Ventilation	Open
Air Cleaner	Dry replaceable paper cartridge with safety element
Ignition	Diesel-Compression
Engine Coolant	Propylene Glycol / Water Mixture
Starting Aid	Intake Air Heater

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity (R.O.C.) of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of the load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the **Before Operation** Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI SSL-0206

MidWestTech | Bobcat T300 Turbo, T300 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >