
337
341

Bobcat®

Service Manual

337 - S/N 234611001 & Above
341 - S/N 234711001 & Above
(G Series)

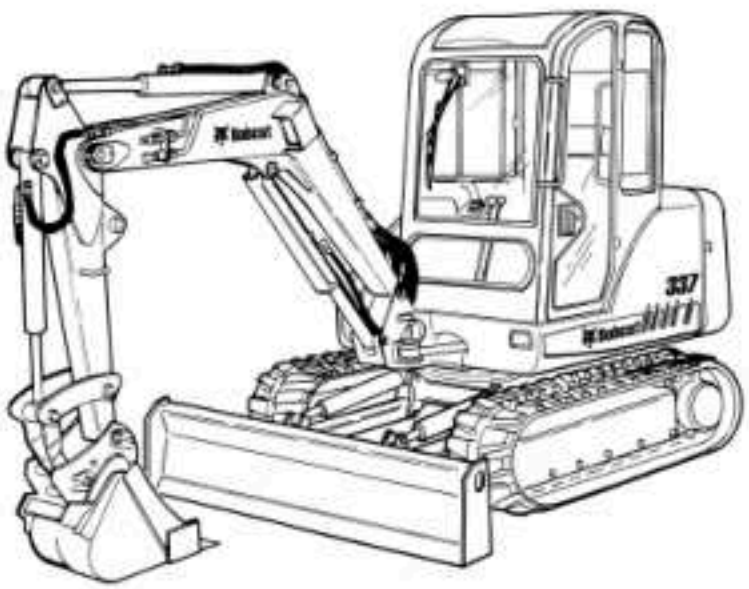

6902741 (11-09)

Printed in U.S.A.

©Bobcat Company 2009

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

AIR CLEANER 10-01, 60-01
AIR CONDITIONING SERVICE 70-01
AIR CONDITIONING SYSTEM FLOW 70-01
ALTERNATOR 50-01
ARM 40-01
ARM CYLINDER 20-01

BASIC TROUBLESHOOTING 70-01
BATTERY 50-01
BLADE 30-01
BLADE CONTROL 40-01
BLADE CYLINDER 20-01
BOOM 40-01
BOOM CYLINDER 20-01
BOOM SWING CYLINDER 20-01
BOOM SWING LOCK VALVE 20-01
BUCKET 40-01
BUCKET CYLINDER 20-01
BUILD UP VALVE 20-01

CAB 40-01
CASE DRAIN FILTER MOUNT 20-01
CLAMP 40-01
CLAMP CYLINDER 20-01
COMPONENTS 70-01
COMPRESSOR 70-01
CONDENSOR 70-01
CONTROL LINKAGE ASSEMBLY 40-01
CONTROL PATTERN SELECTOR VALVE 20-01
CONVERSIONS SPEC-01
COOLING SYSTEM 10-01
CROSSPORT RELIEF VALVE 20-01

DELUXE INSTRUMENT PANEL SETUP 50-01
DIAGNOSTICS SERVICE CODE 50-01
DIRECT TO TANK VALVE 20-01
DUAL SEQUENCE VALVE 20-01

ELECTRICAL SYSTEM INFORMATION 50-01
ENGINE 60-01
ENGINE ACCESSORY DRIVE BELT 10-01
ENGINE COMPONENTS AND TESTING 60-01
ENGINE FLYWHEEL 60-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE SPECIFICATIONS SPEC-01
ENGINE SPEED CONTROL 40-01
EVAPORATOR 70-01
EVAPORATOR/HEATER UNIT 70-01
EXPANSION VALVE 70-01

FLOORMAT AND FLOOR PLATE 40-01
FUEL, COOLANT AND LUBRICANTS SPEC-01
FUEL LEVEL SENDER 50-01
FUEL SYSTEM 10-01
FUEL TANK 40-01

GENERAL AIR CONDITIONING SERVICE GUIDELINES 70-01

HEATER/AC FAN 70-01
HEATER AIR FILTER 10-01
HEATER COIL 70-01
HEATER VALVE 70-01
HORN 40-01
HYDRAULIC CONNECTION SPECIFICATIONS SPEC-01
HYDRAULIC CONTROL VALVE 20-01
HYDRAULIC FILTER MOUNT 20-01
HYDRAULIC FLUID SPECIFICATIONS SPEC-01
HYDRAULIC PUMP 20-01
HYDRAULIC PUMP START UP 20-01
HYDRAULIC RESERVOIR 20-01
HYDRAULIC SYSTEM 10-01
HYDRAULIC SYSTEM INFORMATION 20-01
HYDRAULIC X-CHANGE VALVE 20-01

LEFT CONSOLE 40-01
LEFT CONTROL LEVER (JOYSTICK) 20-01
LIFTING AND BLOCKING THE EXCAVATOR 10-01
LIFTING THE EXCAVATOR 10-01
LIGHTS 50-01
LUBRICATION OF THE EXCAVATOR 10-01

MAIN RELIEF VALVE 20-01
MANIFOLD ASSEMBLY/ACCUMULATOR 20-01
MUFFLER 60-01

OIL COOLER 20-01
OPERATOR CAB 10-01

PORT RELIEF VALVES 20-01
PRESSURE REDUCING VALVE 20-01
PRESSURE RELIEF VALVE 70-01
PRESSURE SWITCH 70-01

Continued On Next Page

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

RADIATOR....60-01
RECEIVER/DRYER....70-01
RECONDITIONING THE ENGINE....60-01
REGULAR MAINTENANCE....70-01
REMOVING AIR FROM HYDRAULIC SYSTEM....20-01
RIGHT CONSOLE....40-01
RIGHT CONTROL LEVER (JOYSTICK)....20-01
RIGHT PEDAL AND LINKAGE....40-01
RIGHT SIDE COVER....10-01
ROPS CANOPY....40-01

SAFETY....70-01
SEAT AND SEAT MOUNT....40-01
SEAT BELT....10-01
SERVICE SCHEDULE....10-01
SPARK ARRESTOR MUFFLER....10-01
SPECIFICATIONS....SPEC-01
STARTER....50-01
SWING CIRCLE GEAR....30-01
SWING FRAME....40-01
SWING MOTOR....20-01
SWING MOTOR DRIVE CARRIER....20-01
SWIVEL JOINT....20-01
SYSTEM CHARGING AND RECLAMATION....70-01
SYSTEM TROUBLESHOOTING CHART....70-01

TAILGATE....10-01, 40-01
TEMPERATURE/PRESSURE....70-01
THERMOSTAT....70-01
TORQUE SPECIFICATIONS....SPEC-01
TRACK DAMAGE IDENTIFICATION....30-01
TRACK FRAME....30-01
TRACK IDLER....30-01
TRACK ROLLER....30-01
TRACKS....30-01
TRANSPORTING THE EXCAVATOR....10-01
TRAVEL CONTROLS....40-01
TRAVEL CONTROL VALVE....20-01
TRAVEL MOTOR....10-01, 20-01
TROUBLESHOOTING....60-01
TWO SPEED SWITCH....50-01

UPPERSTRUCTURE....40-01

X-CHANGE....40-01
X-CHANGE (HYDRAULIC)....40-01

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY INSTRUCTIONS V

FIRE PREVENTION VII

SERIAL NUMBER LOCATIONS IX

DELIVERY REPORT X

BOBCAT EXCAVATOR IDENTIFICATION XI

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

UNDERCARRIAGE 30-01

UPPERSTRUCTURE & SWING SECTION 40-01

ELECTRICAL SYSTEM AND ANALYSIS 50-01

ENGINE SERVICE 60-01


HEATING, VENTILATION, AIR CONDITIONING 70-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

Removal And Installation (Cont'd)


Figure 40-30-5

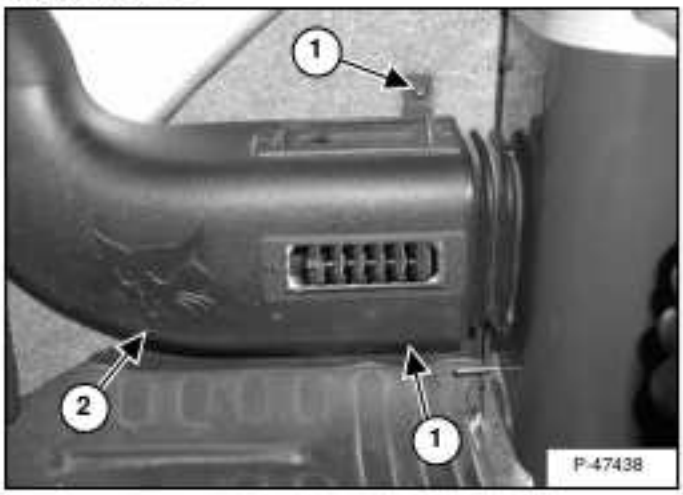

Remove the bolts (Item 1). Remove the air manifold (Item 2) **[Figure 40-30-5]**.


Heater Duct

Figure 40-30-6

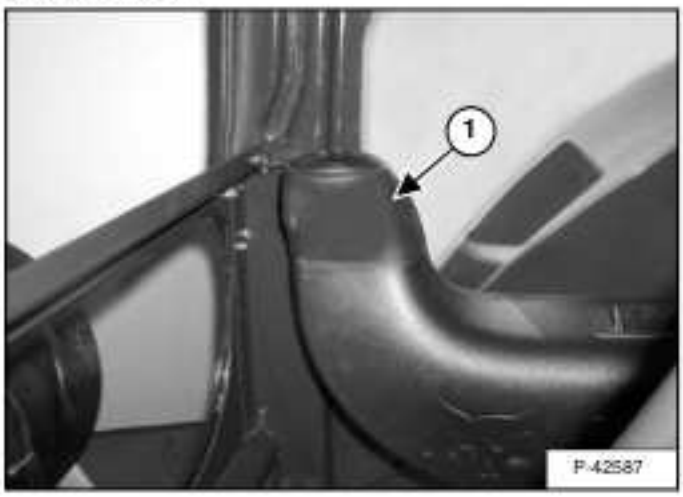


Remove the screw and pull straight up to remove the heater duct (Item 1) **[Figure 40-30-6]**.

Figure 40-30-7

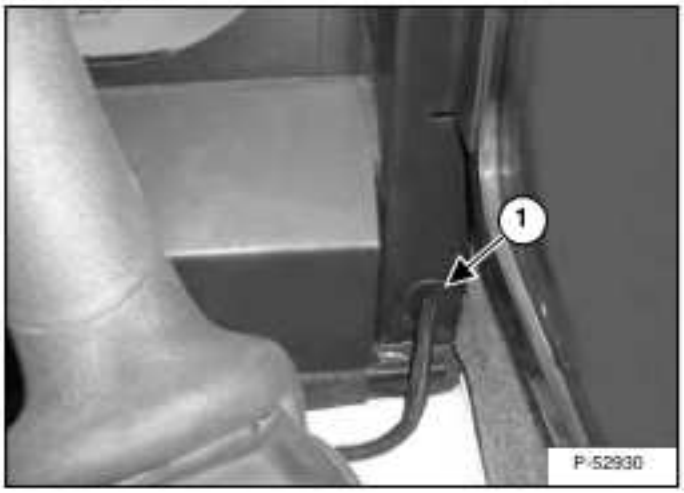

Remove the grommet (Item 1) **[Figure 40-30-7]** located in the left rear corner of the cab.

Figure 40-30-8

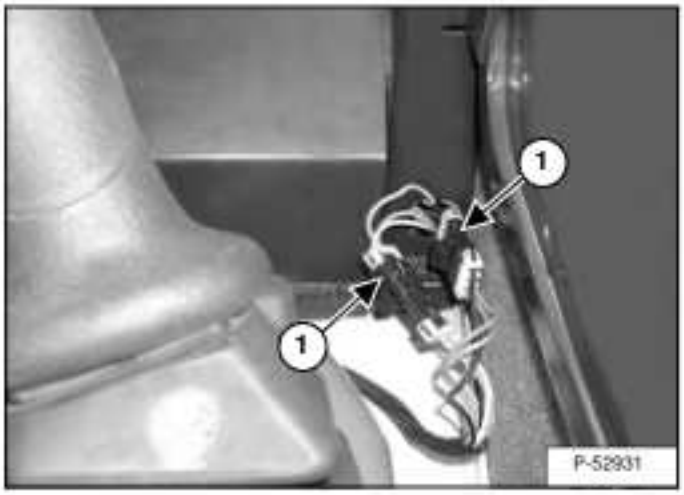


Remove the wire harness from the cab frame and disconnect the 2 wire connectors (Item 1) **[Figure 40-30-8]**.

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

Checking The Electrical System (Cont'd)

Figure 70-81-28

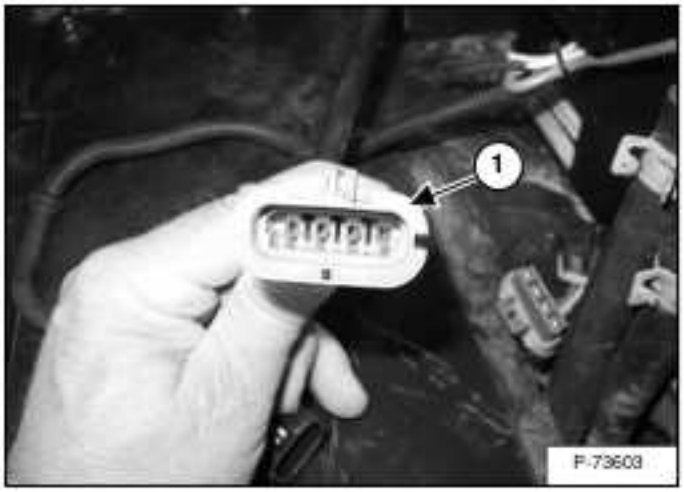

If there is voltage at the wiring harness, check the resistance to the blower fan at the thermostat/blower fan wiring connector (Item 1) **[Figure 70-81-28]**.

Check the resistance between Pin 4 (BLACK wire # 2200) and Pin 3 (YELLOW wire # 5000).


Check the resistance between Pin 4 (BLACK wire # 2200) and Pin 2 (RED wire # 1200).

Check the resistance between Pin 4 (BLACK wire # 2200) and Pin 1 (ORANGE wire # 1010).

If there is no resistance value at any of these pins, replace the blower fan. (See Removal And Installation on Page 70-21-1.)

If there is resistance value at any of the pins, check the climate controls at the control panel inside the excavator cab.

Figure 70-81-29

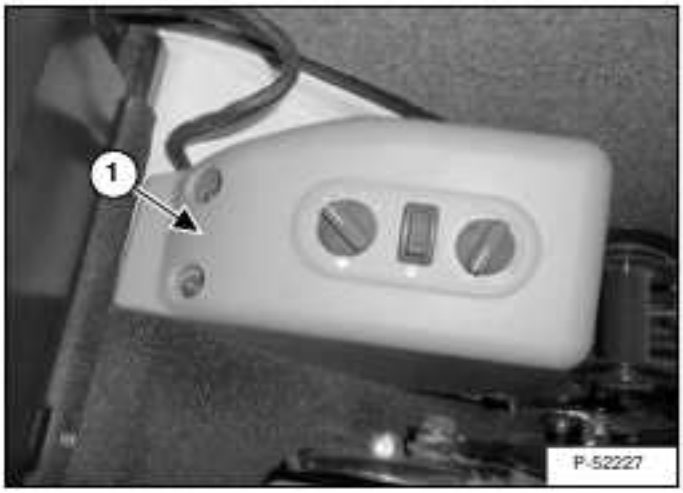

Remove the upper left upper console (Item 1) **[Figure 70-81-29]**. (See Upper Console Cover Removal And Installation on Page 40-60-3.)

Figure 70-81-30




Position the console and wiring harness in the cab so the wiring harness can be checked **[Figure 70-81-30]**.

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

341 Excavator Machine Dimensions (S/N 234611164 & Above And 234711198 & Above)


- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specification conform to SAE or ISO standards and are subject to change without notice.

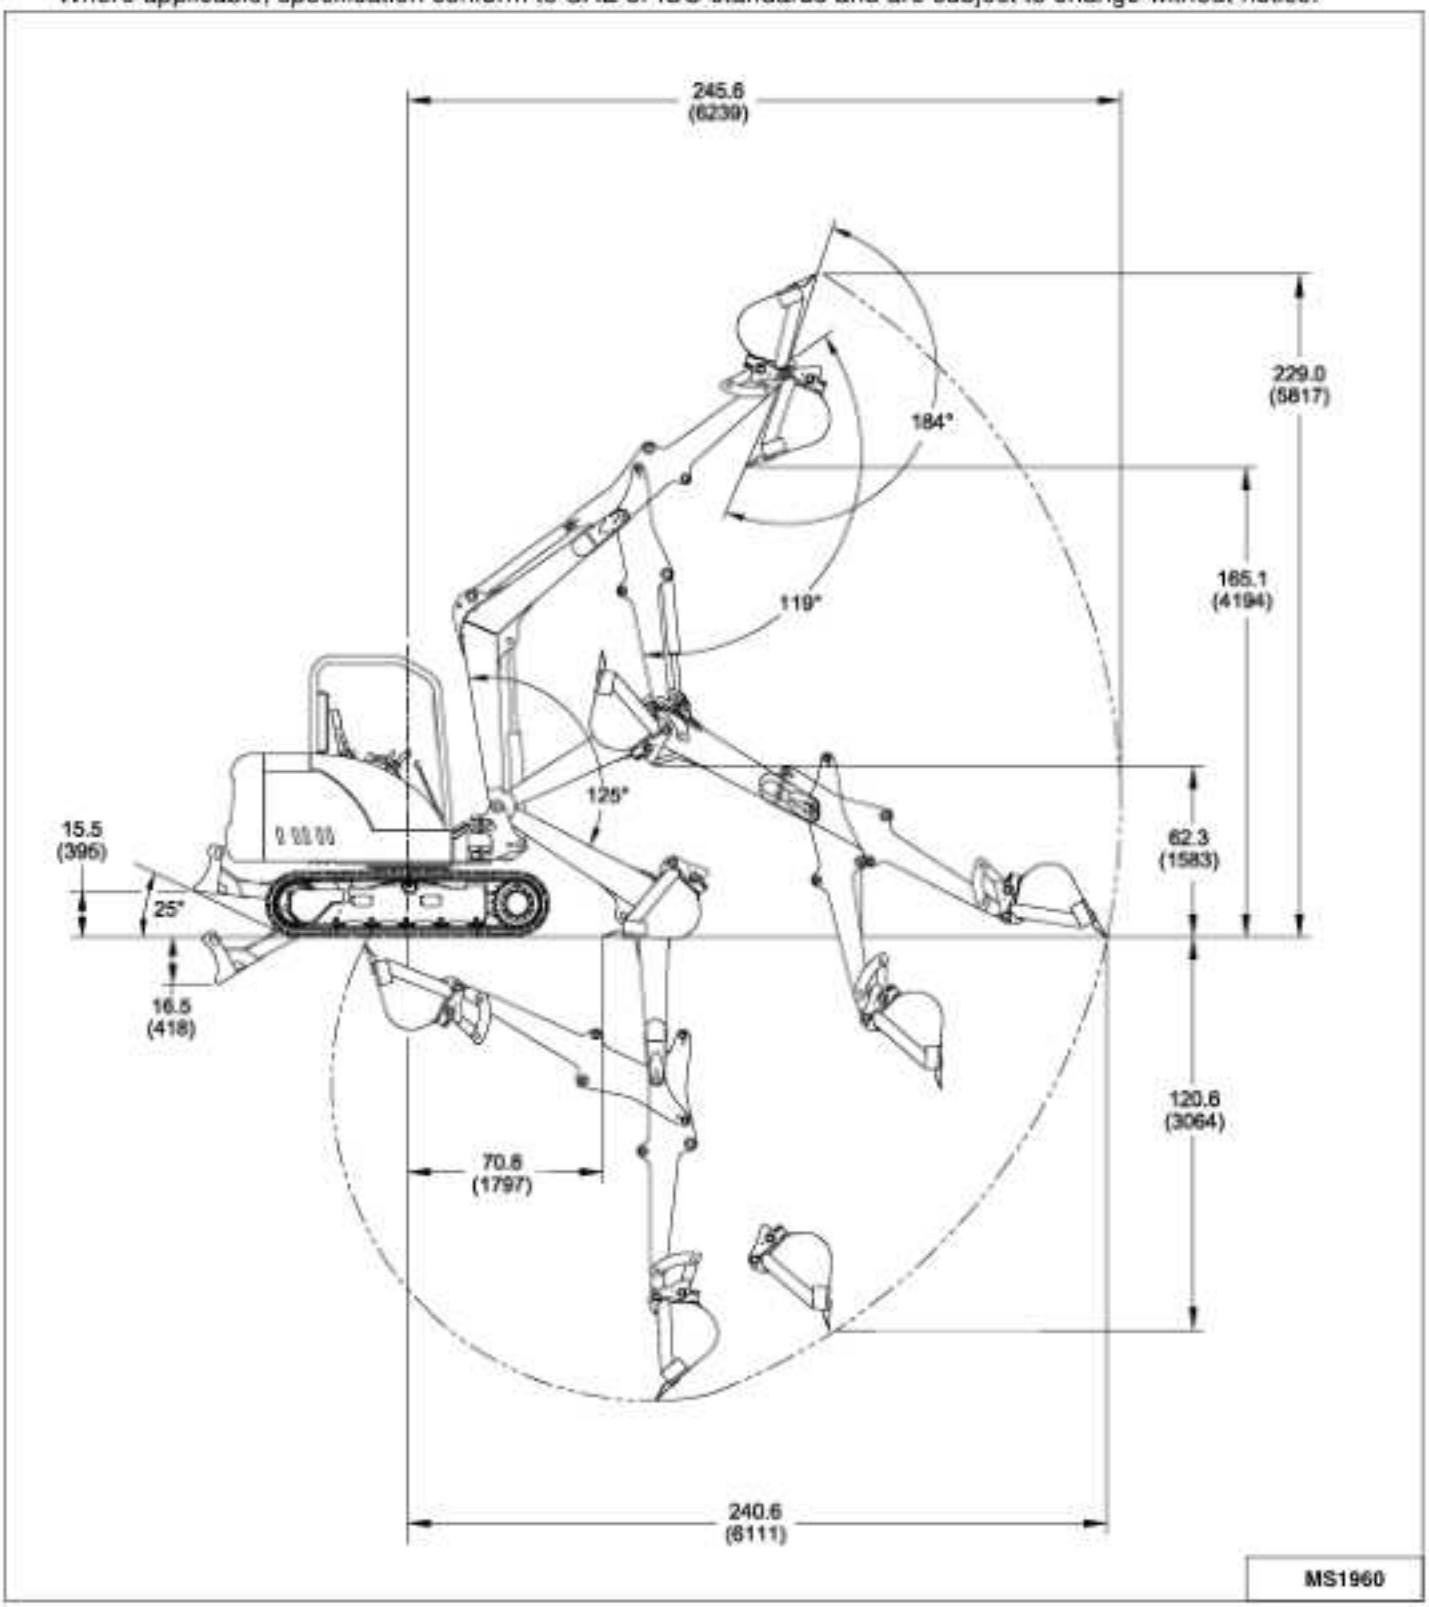

MidWestTech | Bobcat 337, 341 G Series Excavator Service Manual | Publication 6902741... Order the manual at mid-west-tech.com >

WIRING SCHEMATIC

337 (S/N 234611684 AND ABOVE)
341 (S/N 234711576 AND ABOVE)
(PRINTED NOVEMBER 2006)
V-0879

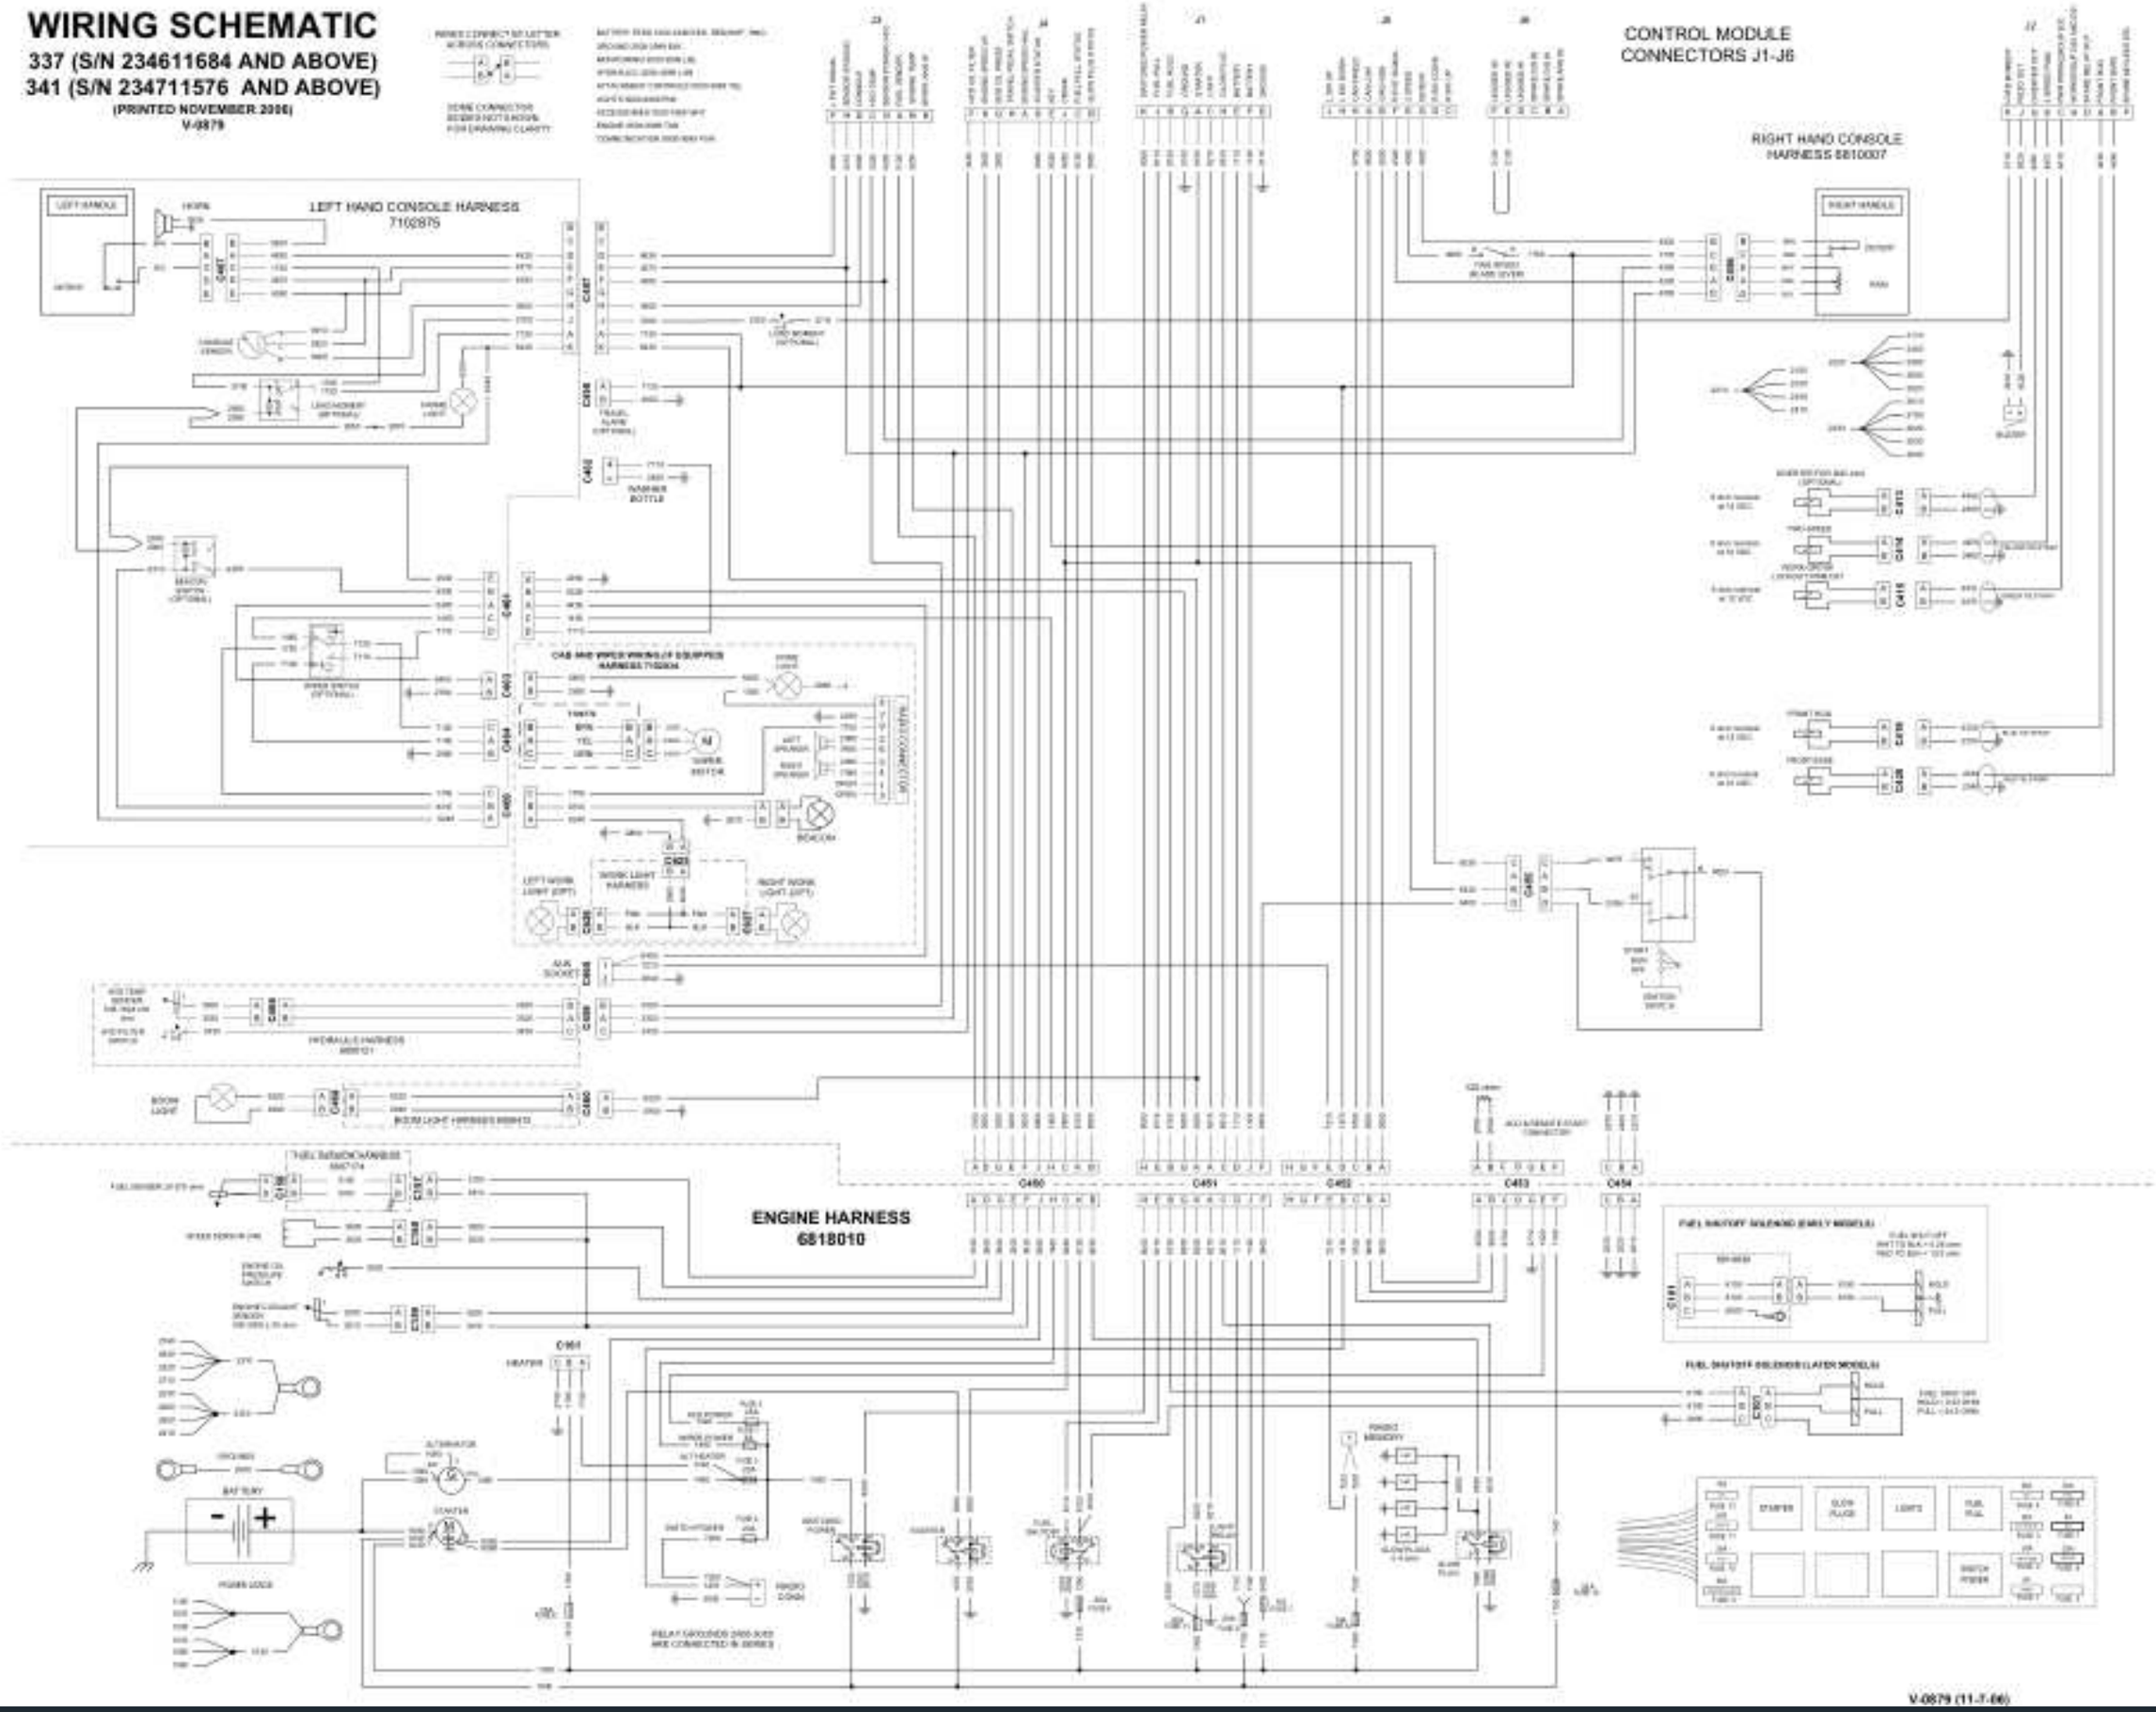

Order the manual at mid-west-tech.com >