
T190
TURBO

T190
TURBO
HIGH FLOW

Bobcat®

Operation & Maintenance Manual

S/N 527711001 & Above
S/N 527811001 & Above

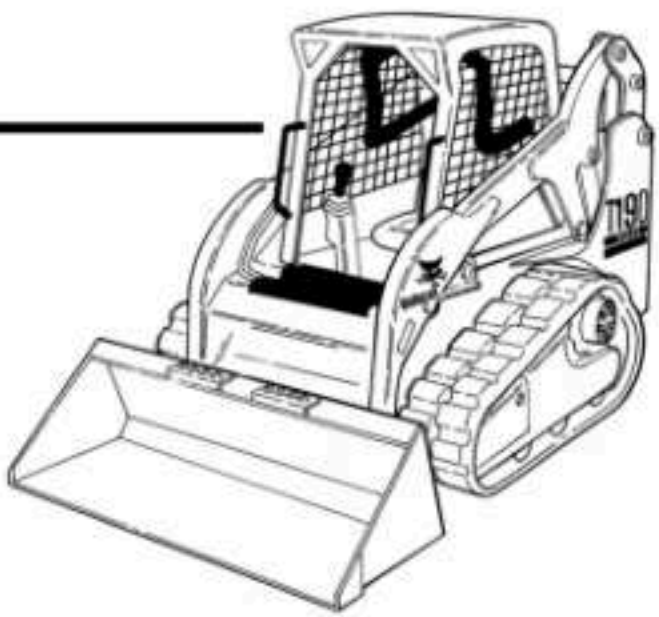

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS)

6902822 (6-05) Revised (12-06) (7)

Ingersoll Rand
Compact Vehicle Technologies

Printed in U.S.A.

©Bobcat Company 2006

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY XI

OPERATING INSTRUCTIONS OI-1

PREVENTIVE MAINTENANCE PM-1

SYSTEM SETUP & ANALYSIS SA-1

MACHINE SIGN TRANSLATIONS MST-1

SPECIFICATIONS SPEC-1

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat Loader in the spaces below. Always use these numbers when referring to your Bobcat Loader.

Loader Serial Number _____

Engine Serial Number _____

_____

_____

NOTES:

_____

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Dréve Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Loader. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR MACHINE. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED V

DELIVERY REPORT. VI

FEATURES, ACCESSORIES AND ATTACHMENTS VIII
- Attachments IX
- Buckets Available. IX
- Options and Accessories VIII
- Standard Items. VIII

MACHINE IDENTIFICATION VII

MOTOR OIL V

REGULAR MAINTENANCE ITEMS V

SERIAL NUMBER LOCATIONS VI
- Engine Serial Number VI
- Loader Serial Number VI

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >


HYDRAULIC CONTROLS

Standard Operation (Foot Pedal)

Two foot pedals (or optional hand controls) control the hydraulic cylinders for the lift and tilt functions.

Put your feet on the pedals (or footrests) and KEEP THEM THERE any time you operate the loader.

Figure OI-18

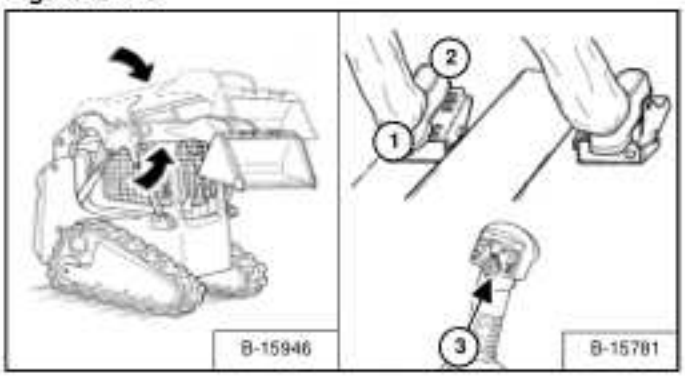

Standard Controls (Also ACS in Foot Pedal Mode)

Lift Arm Operation - **(Left Pedal)**

Push the heel (Item 1) **[Figure OI-18]** of the pedal to raise the lift arms.

Push the toe (Item 2) **[Figure OI-18]** of the pedal to lower the lift arms.

Lift Arm Float Position - **(Left Pedal)**

Push the toe (Item 2) **[Figure OI-18]** of the pedal all the way forward until it locks into the float position.

Use the float position of the lift arms to level loose material while driving backward.

Raise the lift arms to disengage the float position.

Lift Arm Float Position (With ACS) - **(Left Pedal)**


Press and hold the Float button (Item 3) **[Figure OI-18]**.

Push the toe (Item 2) **[Figure OI-18]** of the pedal forward to lower the lift arms. Then release the float button.

Use the float position of the lift arms to level loose material while driving backward.

Raise the lift arms to disengage the float position.

Figure OI-19

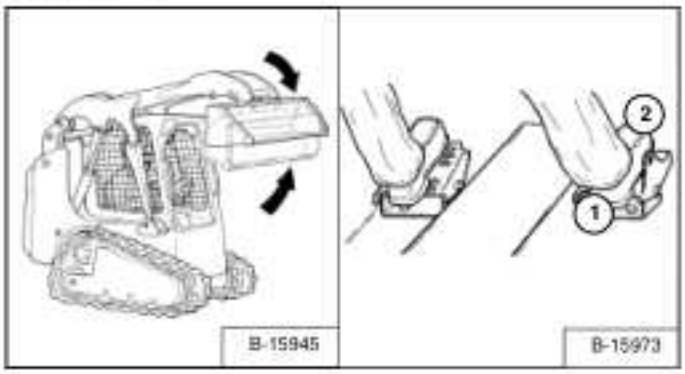

Tilt Operation - **(Right Pedal)**

Push the heel (Item 1) **[Figure OI-19]** of the pedal to tilt the bucket backward.


Push the toe (Item 2) **[Figure OI-19]** of the pedal to tilt the bucket forward.

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

Fuel Filter

See your SERVICE SCHEDULE for the service interval for removing water from, or replacing the fuel filter. (See SERVICE SCHEDULE on page PM-7.)

Figure PM-37

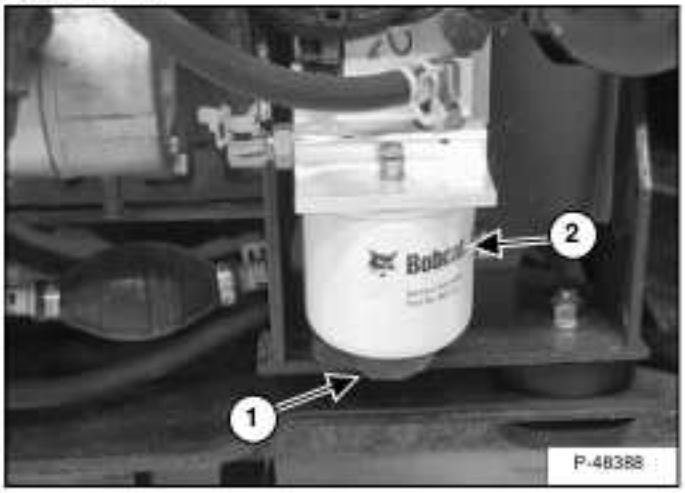

Loosen the drain (Item 1) **[Figure PM-37]** at the bottom of the filter element to remove water from the filter.

Remove the filter element (Item 2) **[Figure PM-37]**.

Clean the area around the filter housing. Put clean oil on the seal of the new filter element. Install the fuel filter, and hand tighten.

Remove the air from the fuel system. (See Removing Air From The Fuel System on page PM-24.)

⚠ WARNING

Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285

Removing Air From The Fuel System


After replacing the filter element or when the fuel tank has run out of fuel, the air must be removed from the fuel system before starting the engine.

⚠ WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

W-2072-0496

Figure PM-38

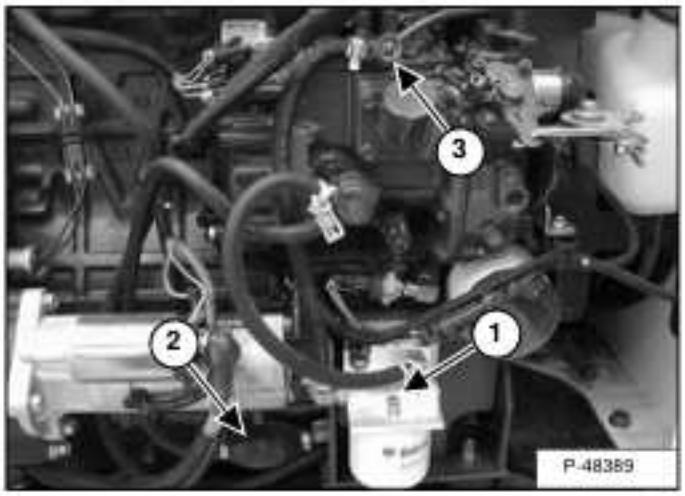

Open the vent (Item 1) **[Figure PM-38]** on the fuel filter housing.

Squeeze the hand pump (priming bulb) (Item 2) **[Figure PM-38]** until fuel flows from the vent with no air bubbles.

Close the vent (Item 1) **[Figure PM-38]**.

Open the vent (Item 3) **[Figure PM-38]** on the fuel injection pump.

Squeeze the hand pump (priming bulb) (Item 2) **[Figure PM-38]** until the pump feels solid.

Tighten the vent plug (Item 3) **[Figure PM-38]**.

Start the engine.

It may be necessary to open the vent plug (Item 3) **[Figure PM-38]** briefly while the engine is running. Close the vent when the engine runs smoothly.

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

LOADER SPECIFICATIONS (T190) (CONT'D)

Performance

Rated Operating Capacity (SAE)	1900 lb. (862 kg)
Tipping Load (SAE Rating)	Std. Tracks - 6711 lb. (3044 kg) Wide Tracks - 6961 lb. (3157 kg)
Operating Weight	Std. Tracks - 7244 lb. (3286 kg) Wide Tracks - 7566 lb. (3431kg)
SAE Breakout Force - Lift	4450 lbf. (6033 N•m)
SAE Breakout Force - Tilt	3550 lbf. (4813 N•m)
Travel Speed	0 - 7.1 mph (11,4 km/hr.)

Controls

Vehicle Steering	Direction and speed controlled by two hand levers *or* optional joysticks
Loader Hydraulics - Lift and Tilt - Front Auxiliary (Std.) - Rear Auxiliary (Option)	 Controlled by separate foot pedals *or* optional Advanced Control System (ACS) *or* Selectable Joystick Control (SJC) Controlled by electrical switch on Right Hand steering lever Controlled by electrical switch on Left Hand steering lever
Auxiliary Pressure Release	Front quick couplers. Push couplers in, hold for 5 seconds. Rear quick couplers. Press and hold (5 seconds) the AUXILIARY PRESSURE RELEASE Button on right hand instrument panel.
Engine	Hand lever speed control; key-type starter switch (*or* optional keyless start) and shutdown
Starting Aid	Glow Plugs automatically activated as needed by Instrument Panel
Service Brake	Two independent hydrostatic systems controlled by two hand operated steering levers
Secondary Brake	One of the hydrostatic transmissions
Parking Brake (Std.)	Mechanical disc, hand operated rocker switch on instrument panel

Engine

Make/Model	Kubota V2403M-DI-T
Fuel/Cooling	Diesel / Liquid
Horsepower, Net	61 HP (45,5 kW)
Maximum Governed RPM	2900 RPM
Torque, Net	155.6 lbf.-ft. (211 N•m) @ 2700 RPM
Number of Cylinders	4
Displacement	148.0 cu. in. (2.43 L)
Bore/Stroke	3.27/3.64 (83,1 mm / 92.4 mm)
Lubrication	Pressure System with Filter
Crankcase Ventilation	Open
Air Cleaner	Dry replaceable paper cartridge with safety element
Ignition	Diesel-Compression
Engine Coolant	Propylene Glycol / Water Mixture
Starting Aid	Glow Plugs automatically activated by Standard or Deluxe Instrument Panel

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity (R.O.C.) of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of the load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the **Before Operation** Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI SSL-0206

MidWestTech | Bobcat T190 Turbo, T190 Turbo High Flow Compact Track Loader Operation... Order the manual at mid-west-tech.com >