
Seeder

72 Inch

Bobcat®

Service Manual

(72 In) S/N 018000101 & Above

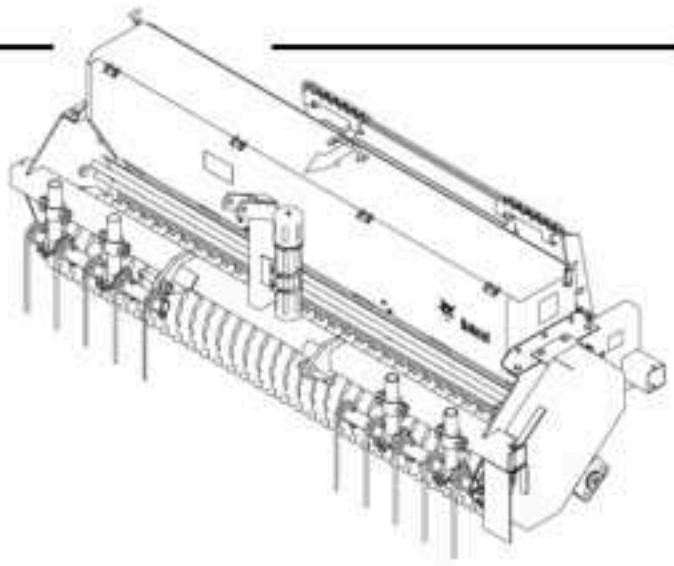

Ingersoll Rand
Compact Vehicle Technologies

6903279 (1-06)

Printed in U.S.A.

©Bobcat Company 2006

MidWestTech | Bobcat 72 inch Seeder Service Manual | Publication 6903279_1_06 Order the manual at mid-west-tech.com >

CONTENTS

ATTACHMENT DELIVERY REPORT III

IDENTIFICATION AND MACHINE SIGNS (DECALS) IV

SERIAL NUMBER LOCATION III

SAFETY AND MAINTENANCE. 10-01

MAIN FRAME 20-01

SPECIFICATIONS. SPEC-01

MidWestTech | Bobcat 72 inch Seeder Service Manual | Publication 6903279_1_06

Order the manual at mid-west-tech.com >

TROUBLESHOOTING


PROBLEM	CAUSE	CORRECTION
Planting rate is to heavy or not heavy enough.	Seeder not calibrated to seed type.	Calibrate seeder.
	26 tooth sprocket installed. (This doubles rate.)	Install 13 tooth sprocket.
No seed dropping from seeder.	Front roller not turning.	Seeder not contacting the ground.
		Tines are contacting the drum.
	Seed box agitator not turning.	Broken chain or sprocket roll pin.
Seeder difficult to attach with 3-point hitch.	Parking pins not engaged.	Engage parking pins.

MidWestTech | Bobcat 72 inch Seeder Service Manual | Publication 6903279_1_06

Order the manual at mid-west-tech.com >

SPECIFICATIONS

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

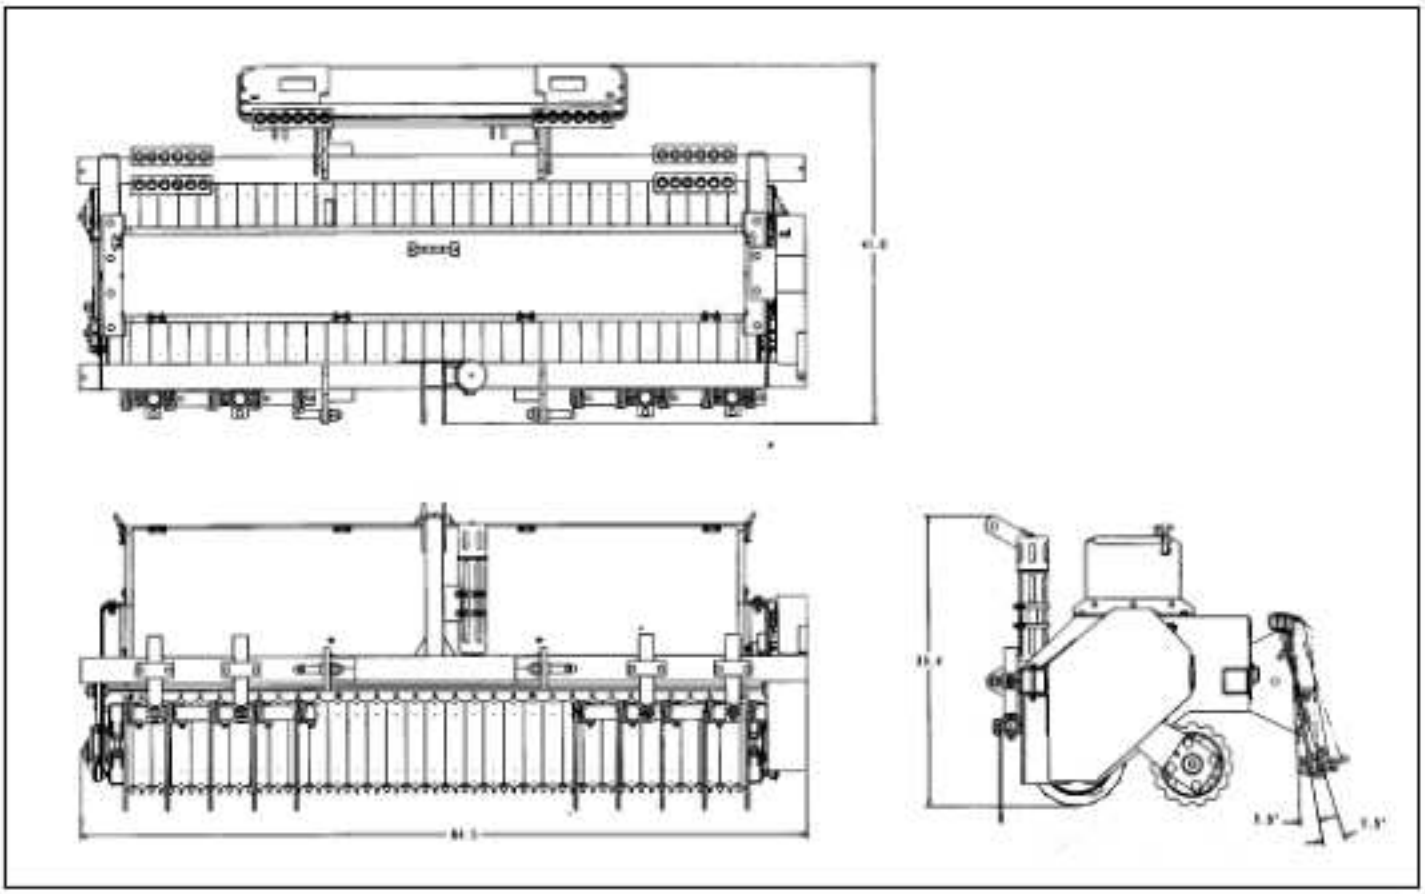

DESCRIPTION	72 IN SEEDER
Three Point Hitch	Category 1
Hopper Capacity	4.5 Bushels (.16 Cubic Meters)
Weight (Full)	1425 lb. (647 Kg)
Weight (Empty)	1225 lb. (556 Kg)
Length	41.0 In. (1041 mm)
Width	84.5 In. (2146 mm)
Height	33.4 In. (848 mm)

MidWestTech | Bobcat 72 inch Seeder Service Manual | Publication 6903279_1_06 Order the manual at mid-west-tech.com >